





QUICKSTART GUIDE




1. Remove the Body

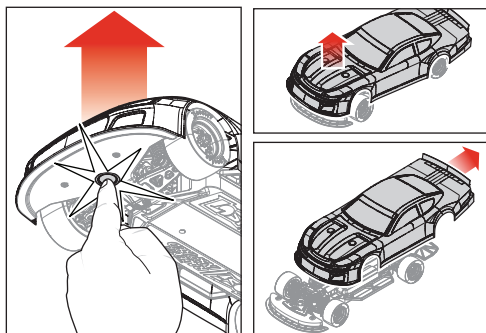


2. Remove the Vehicle Battery

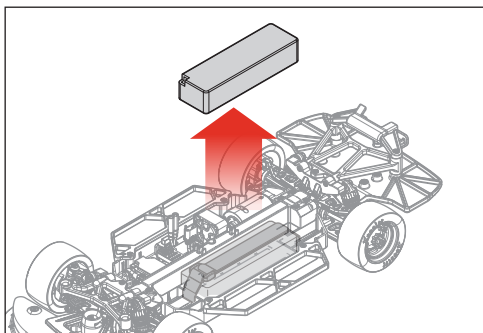


3. Charge the Vehicle Battery

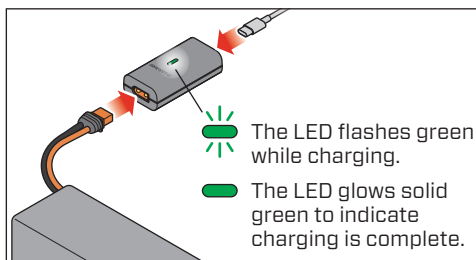


4. Reinstall the Vehicle Battery

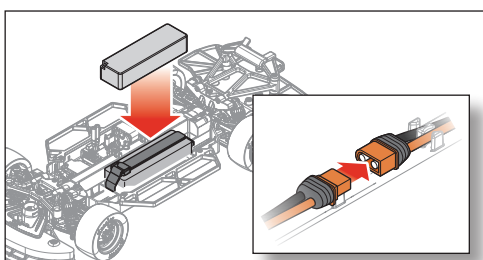


5. Install the Transmitter Batteries

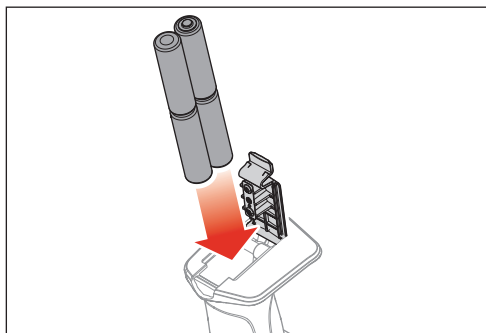


6. Power On the Transmitter

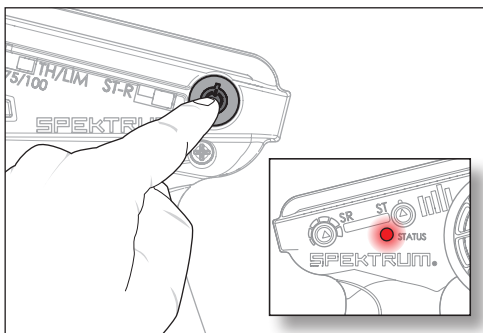




7. Power On the Vehicle

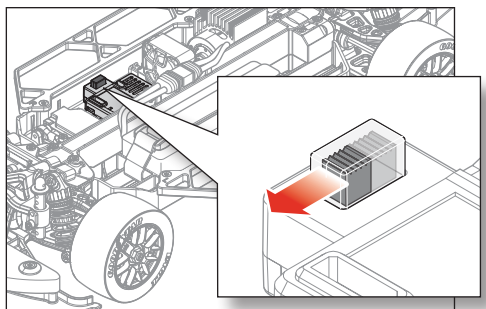


8. Reinstall the Body

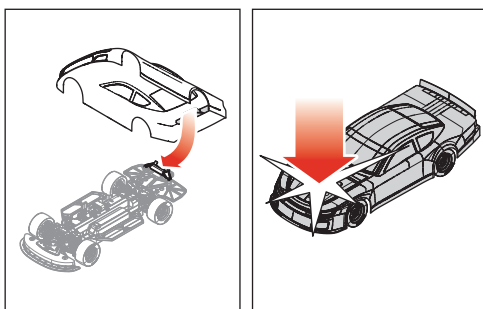





9. Throttle/Brake

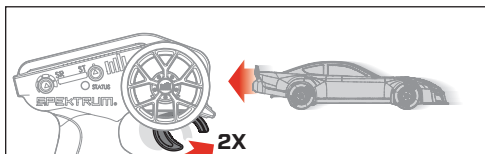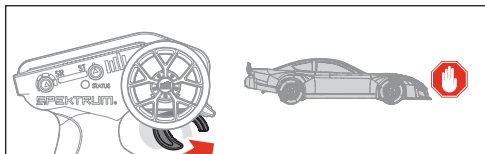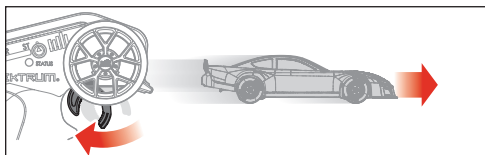


11. Throttle Limiter

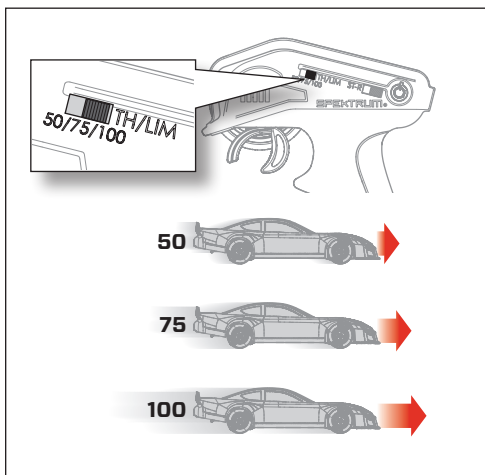


10. Steering

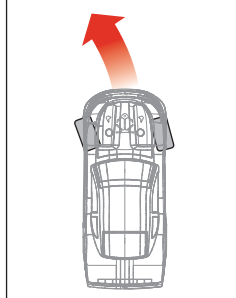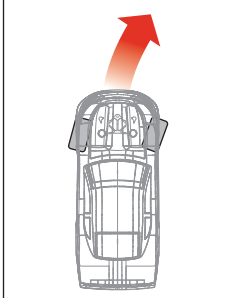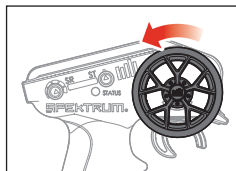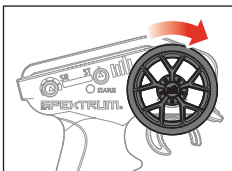


12. Steering Rate

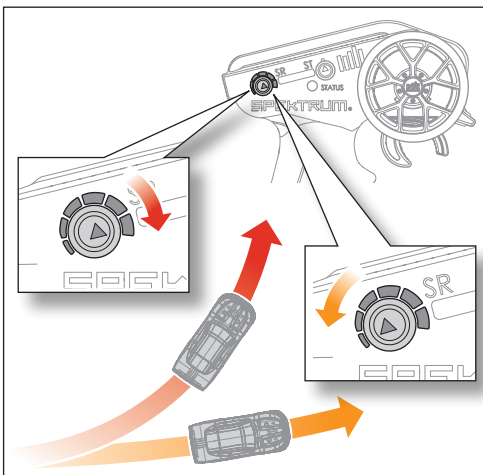


13. Steering Trim

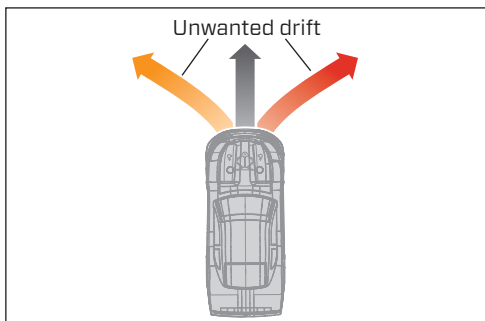


Adjust as shown until vehicle tracks straight

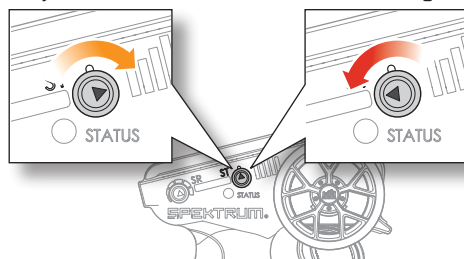


14. Remove the Body

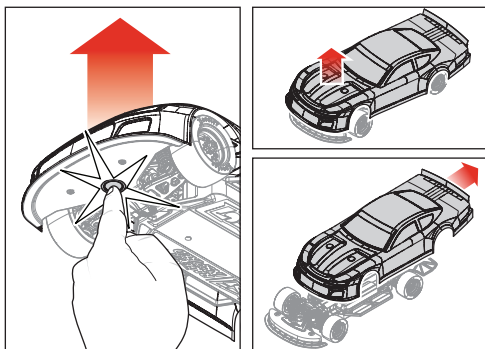

15. Power Off the Vehicle

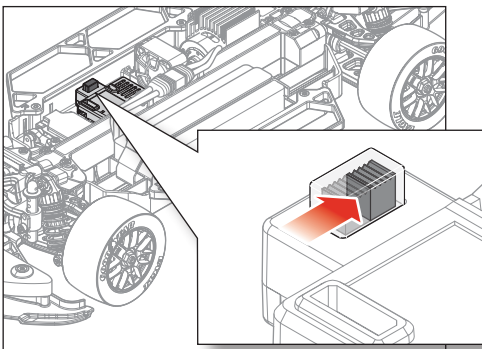

16. Disconnect the Vehicle Battery

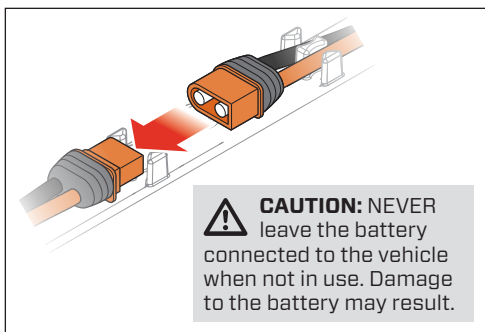

CAUTION: NEVER leave the battery connected to the vehicle when not in use. Damage to the battery may result.

17. Power Off the Transmitter

