



# ***Typhoon 2 3D Instruction Manual***



***Charge-and-Fly™ Park Flyer***

Wingspan: 39.5 in (1000mm)  
Overall Length: 34 in (862mm)  
Weight: 26 oz (740 g)  
Motor: ParkZone BL400-15T brushless with gearbox  
Variable Rate DC Li-Po Charger

Radio: 5+ Channel FM on 72MHz  
Battery: 3-cell 11.1V 1800mAh Li-Po



# Typhoon 2 3D Instruction Manual

Congratulations on your purchase of the ParkZone® Typhoon™ 2 3D RTF airplane. Your ParkZone Typhoon 2 3D comes with everything needed to get you in the air—all in one box! You will only need to attach the wing, horizontal stabilizer, rudder, propeller, and landing gear, as well as charge the flight battery prior to your first flight. In as little as 40 minutes, you can be ready to fly. This means you can spend your time refining your 3D flying, and not your building skills. Your ParkZone Typhoon 2 3D allows you to do such maneuvers as harriers, blenders, hovering, knife edges, and more!

We at ParkZone are committed to giving you the most enjoyable flight experience possible. In order to have a safe and successful flight, we ask that you do not fly until you have read these instructions thoroughly.

### Advancing your Flying Skills

Once you have begun to fly your Typhoon and are looking for more ideas on maneuvers, visit:

<http://www.horizonhobby.com/Explore/Article.aspx?ArticleID=1022>

<http://www.horizonhobby.com/Explore/Article.aspx?ArticleID=1033>

<http://www.horizonhobby.com/Explore/Article.aspx?ArticleID=1044>

## Step 1

### Transmitter

Your ParkZone Typhoon 2 3D airplane comes with a fully proportional (Mode 2) 5+ channel radio system. In this configuration, the left stick controls throttle and rudder, while the right stick controls elevator and aileron. There is also a dual rates switch on the top right face of the transmitter that will increase/decrease the travel of the control surfaces of the airplane.

1. Insert the 8 “AA” batteries into the transmitter.
2. Turn the switch on to ensure the batteries have been installed correctly. When the batteries are installed correctly, the LED’s on the transmitter should glow brightly. When the transmitter makes a repeated “beep” sound, it is time to replace these batteries.

Your Typhoon comes with a fully proportional 5+ channel radio system with full control of throttle, rudder, aileron and elevator. Your Typhoon 2 3D also comes with a powerful 400-size brushless motor and ESC, as well as a 3-cell 11.1V 1800mAh Li-Po battery pack and DC charger.

**Warning**

Though your ParkZone Typhoon 2 3D comes ready-to-fly, this aircraft is for experienced R/C pilots only and is not a toy. It can cause serious bodily harm and damage to property!

## Step 2

### Charging the Aircraft Battery

Your Typhoon 2 3D comes with a DC balancing charger and 3S Li-Po battery. You must charge the included Li-Po battery pack with a Li-Po specific charger only (such as the included charger). Never leave the battery and charger unattended during the charge process. Failure to follow the instructions properly could result in a fire. When charging, make certain the battery is on a heat-resistant surface.

### DC Li-Po Balancing Charger Features:

- Charges 2- to 3-cell lithium polymer battery packs
- Variable charge rates from 300mAh–2A
- Automatically detects incorrect cell count selection
- Simple single push-button operation
- LED charge status indicator
- LED cell balance indicator
- Audible beeper indicates power and charge status
- Cigarette lighter input cord

### Specifications

- Input power: 12V DC, 3A
- Charges 2- to 3-cell Li-Po packs with minimum capacity of 300mAh
- Variable charge rates from 300mAh to 2 amps


### 3S 11.1V 1800mAh Li-Po Battery Pack

The ParkZone 3S Li-Po battery pack features a balancing lead that allows you to more safely charge your battery pack when used with the included ParkZone Li-Po balancing charger.

### To Complete the Charging Process

1. Attach the input cord of the charger to the appropriate power supply (12V automobile accessory jack), or use the (HBZ6513) and attach to 12V AC power supply. Once your charger has been correctly powered up, there will be an approximate 3-second delay and then you will hear an audible “beep” and the green (ready) LED will flash.
2. Refer to the chart below to select the appropriate

| BATTERY CAPACITY | MAX. CHARGE RATE |
|------------------|------------------|
| 300—400mAh       | 300mAh           |
| 500—1000mAh      | 500mAh           |
| 1000—1500mAh     | 1A               |
| 1500—2000mAh     | 1.5A             |
| 2000mAh +        | 2.0A             |

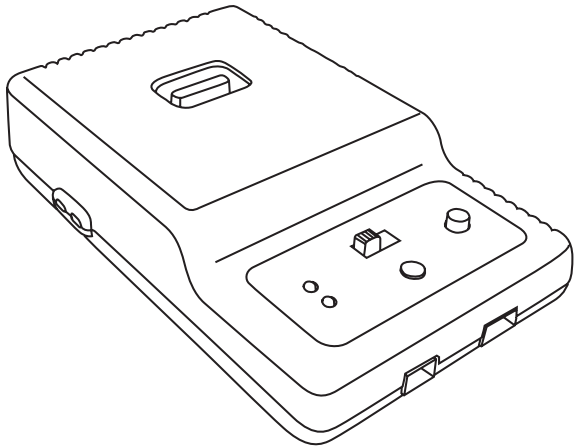


- charge rates:
3. Select the proper number of cells that you will be charging, either 2 or 3 cells.
  4. Locate the safety charge lead on the battery pack. The charge lead of a 3-cell Li-Po battery will plug into the larger 4-pin port on the bottom right of the charger. A 2-cell pack will need to plug into the 3-pin port on bottom left of the charger. Once the battery is properly plugged into the correct port, it will beep 3 times if it is a 3-cell, and twice if it is a 2-cell pack. Once this is done, you are ready to proceed to charge the battery pack.
  5. Push the start button to begin the charging process. Once this is done, the charger will make an audible beep that matches the cell count, and then the red (charge) LED will begin to flash. Do not adjust the current once the charger has begun to charge.
  6. When the battery pack is fully charged, you will hear an audible beep for about 3 seconds, and the green LED will be solid. The LED will remain solid until the battery pack is unplugged from the charger. Always unplug the battery from the charger immediately upon completion. Failure to do so could cause a fire.

*Note: At times, the green LED may also flash during the charging process, indicating that the charger is balancing one or more of the cells at the same time it is charging the battery pack. When this is occurring, the red and green LED’s will both be flashing. It will not always be necessary for the cells to be balanced.*

## Step 3

### Installing Landing Gear




1. Slide landing gear into allotted space on fuselage.
2. Fit should be snug, so it will not easily pull out.

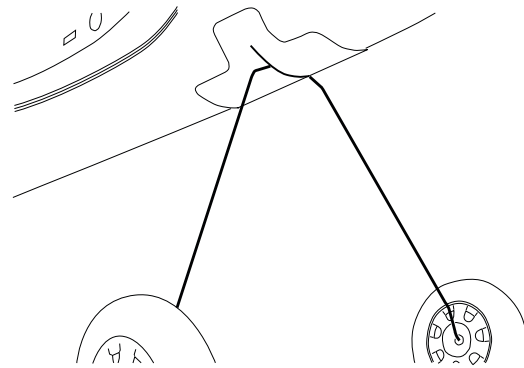



## Step 4

### Attaching the Wing

1. Locate the wing set. Note the servos are located in the bottom of the wing.
2. Select a wing half and slide in fuse, making sure you slide the aileron servo lead in first (in allotted hole in side of fuse). Pull aileron lead carefully through fuse in order to allow wing tab and spar to go into their allotted holes. Do the same with the other wing half.
3. Carefully slide wing halves toward each other until the wing tabs overlap.
4. Match up the holes on each tab and secure with included screw.
5. Plug in the aileron connectors into the receiver. The aileron leads will plug into the Y-harness attached to the receiver. Confirm that the ailerons are plugged into the proper leads and they are operating correctly.

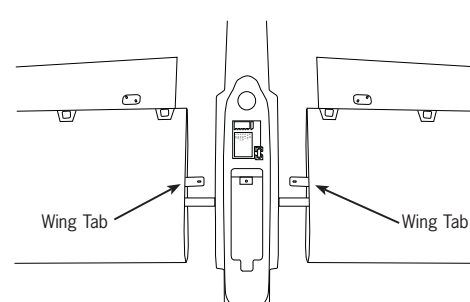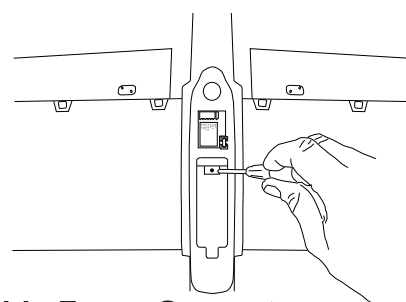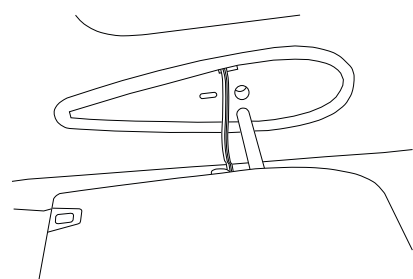

### Optional step for installing the Side Force Generators

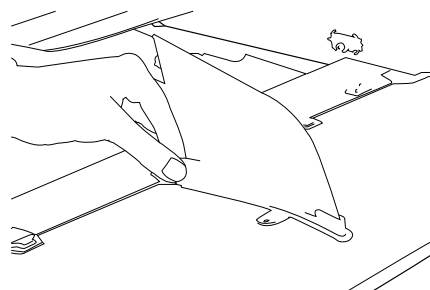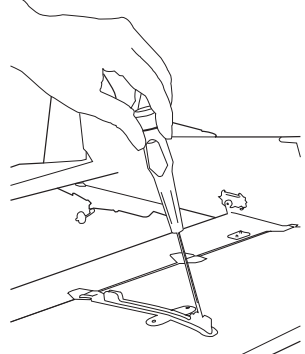

### (Optional) SFG Installation

1. Locate the SFG™ mounts from the accessory bag.
2. The lower SFG mounts feature screw alignment pins to ease in the installation. Insert the lower SFG mount into the positioning holes in the wing. Gently install the upper SFG mount into the wing and carefully press the mounts together.
3. Using a small Phillips screwdriver (#00 Phillips screwdriver is recommended), secure the mounts together using the included screws.
4. Slide the SFG surfaces into the mounts and secure with clear tape. The SFGs are symmetrical and when installed, the graphics will face the wing tip.

*Always check ailerons prior to flight to make sure they are not reversed!*


## Step 5

### Attaching the Horizontal Stabilizer and Rudder


1. Locate horizontal stab.
2. Carefully slide horizontal stab into fuselage, making sure control surface horn is on top.
3. Use included strips (4 pieces) of clear tape to secure stab to tail fillet. You should use 1 strip for top and bottom of each side.
4. Locate rudder. Carefully snap tail wheel wire into the clip on bottom of fuse as shown.
5. Carefully use hobby knife to slowly separate decal from foam, only where three hinges are to attach to stab. When decal is slightly separated from the foam slide hinges between decals and foam of stabilizer. Use the three pins that are supplied to connect rudder to stab as shown. Do this by pushing pins in carefully.
6. Install keepers on backside to secure pins as shown.
7. Attach rudder and elevator pushrods to respective control horns (outer holes of control horns for both).

*Note: It may be necessary to re-trim control surfaces prior to flight.*


### Step 4

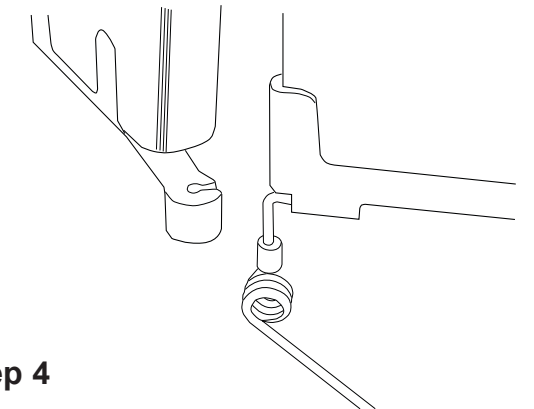


### Step 5

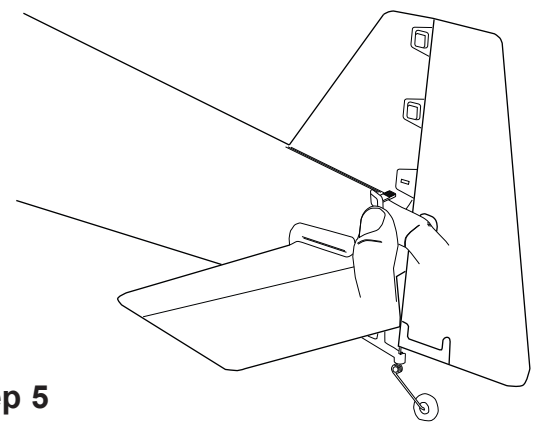


### Step 2

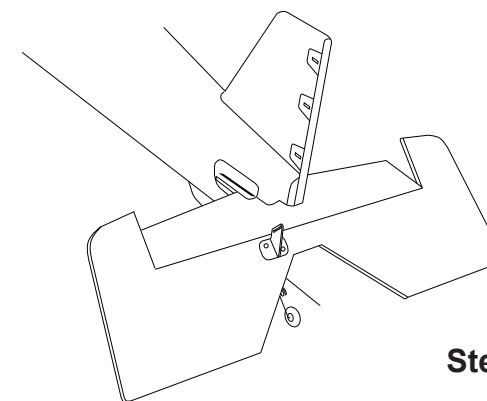


### Step 6

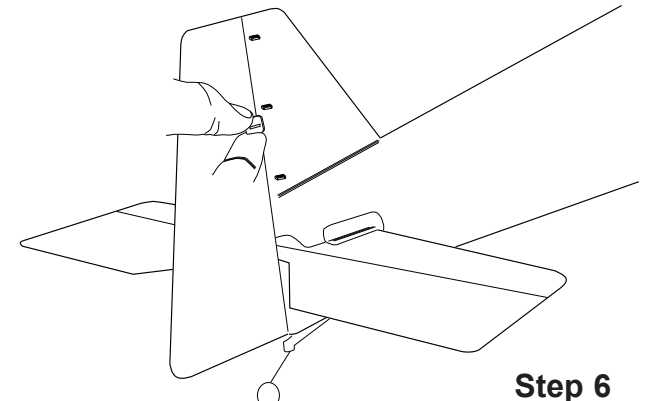

### Step 3

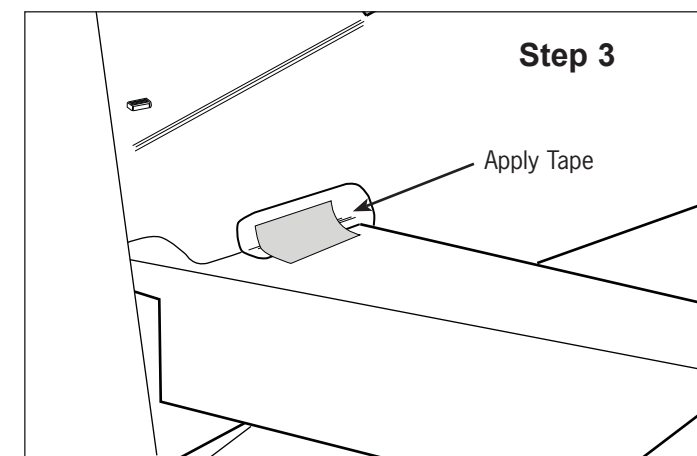

### Step 7

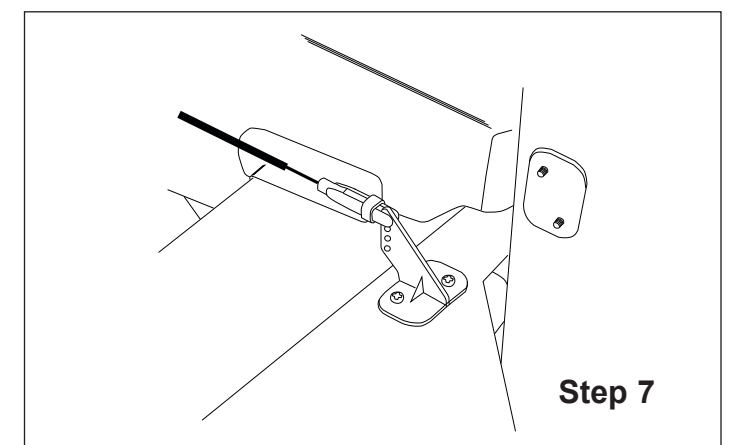




## Step 6

### Installing the Propeller and Spinner

Your Typhoon 2 3D has two props that are included. You can select the prop that best works with your flying style.

- 13.5 x 7 (PKZ1006): This prop is recommended for the first several flights on your Typhoon. This prop will allow your plane to fly a bit slower, but is also the setup for maximum vertical power (especially with the stock 9-cell Ni-MH pack).
- 12 x 8.75 (PKZ1007): This prop will allow you to fly at faster speeds and help with certain aerobatic maneuvers. This propeller is ideal for the ParkZone 3S 2200mAh Li-Po battery pack.

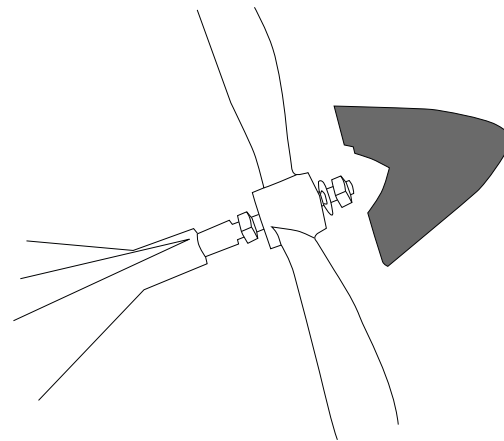

When you have selected the propeller that best works for you, install and secure it making sure not to forget any of the necessary hardware.

- Slide propeller on. Make sure pitch numbers on prop are visible from front of airplane.
- Slide washer on first. Next, screw the nut on and tighten securely.
- Attach spinner.


## Step 7

### Receiver

The following are the channels that are programmed in the receiver:

- Ch. 1: Throttle
- Ch. 2: Elevator
- Ch. 3: Aileron
- Ch. 4: Rudder
- Ch. 5: Gear
- Ch. 6: Mode

Make certain you plug in the servo leads to the correct corresponding channel. Always perform a function check prior to flying to ensure this.

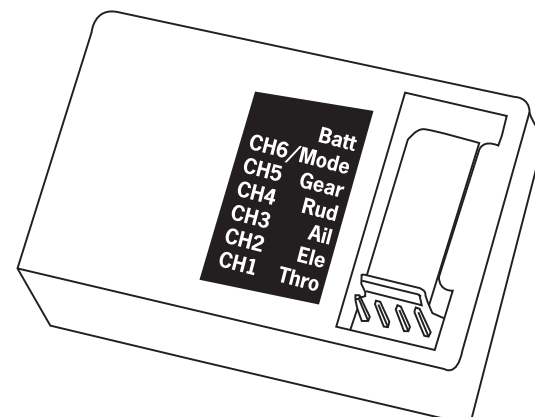

## Step 8

### ParkZone 5+ Channel Radio System

Your ParkZone Typhoon 2 3D comes with a fully proportional 5+ channel radio system (Mode 2). Your Typhoon also comes with industry standard 3-wire servos making the radio system usable in other small electric aircraft if you so choose. As with all Mode 2 style systems, the left gimbal operates the throttle and rudder, while the right gimbal operates the aileron and elevator.

**Note:** The servo reversing features of this radio system will allow them (if you so choose) to be used in another park flyer application. The servo reversing switches on the transmitter should all be set at the top (normal) for the setup with this airplane. If any of the switches are set at the bottom (reverse), the function will be reversed and could put your Typhoon in jeopardy.

### Transmitter Features:

- Fully proportional 5+ channel FM radio system with full control of throttle, elevator, aileron, and rudder (Mode 2)
- Dual rates switch (Hi and Low Rates)
- Proportional trim adjustment
- LED battery voltage indicators
- Neck strap holder
- Charge jack for use with rechargeable transmitter batteries
- Servo reversing
- Comfortable ergonomic case design


The stock setup for all of the servo reversing switches on transmitter are at the top (normal).

The following statement applies to the receiver (in U.S.A)

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesirable operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

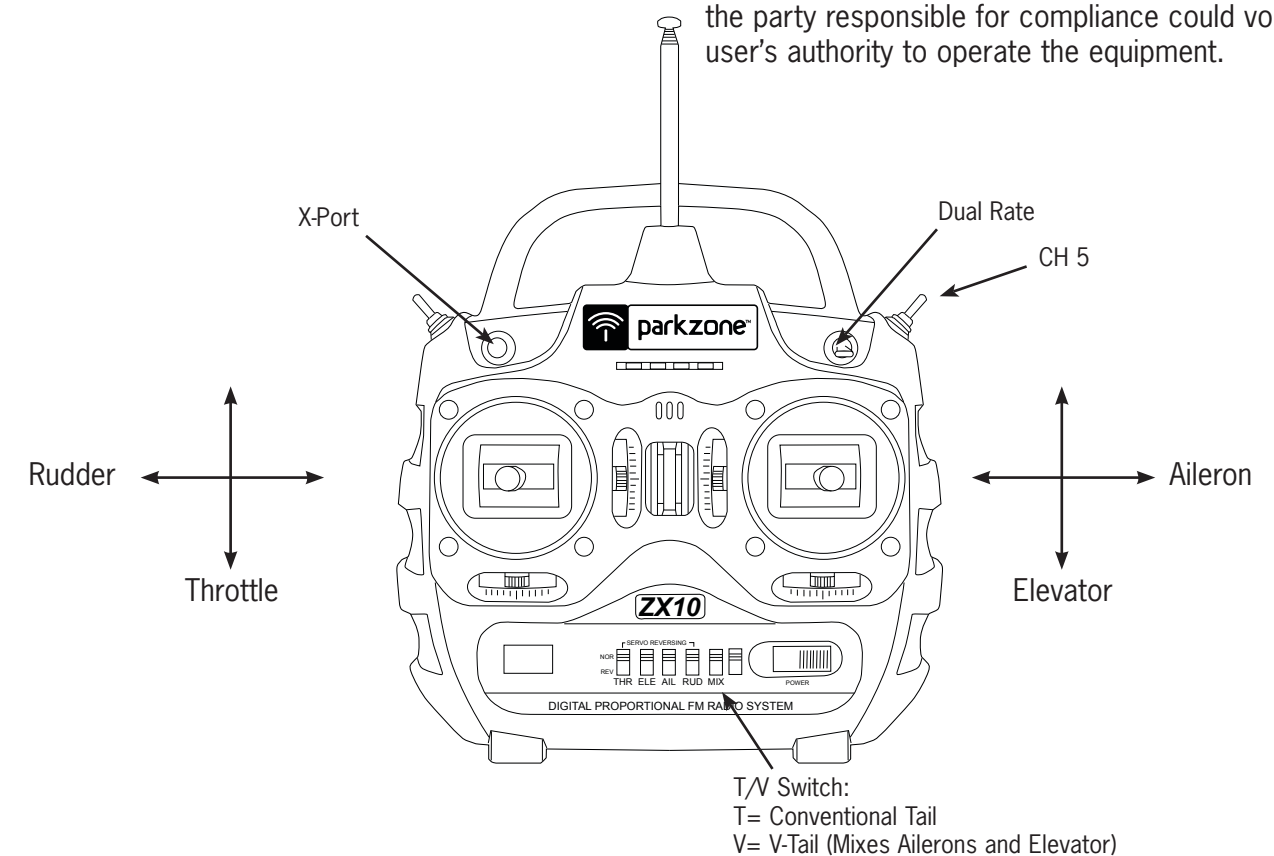

## Step 9

Your Typhoon 2 3D RTF comes out of the box with the E-flite® 25-amp brushless ESC. This controller has been designed for use in radio control aircraft and is designed to support motor currents up to 25 amps continuous, and up to 4 micro servos with a 2- to 3-cell Li-Po battery. It is suitable to use with most radio brands. The E-flite 25A ESC comes in an impressive plastic case with exposed, finned heat sinks for both of the motor drive mosfets and, unlike many controllers, there is also a finned heat sink fitted to the BEC regulators to give a more reliable and more powerful power supply to the servos. If you intend to fly your Typhoon 2 3D RTF stock, then there is no need to program your ESC. It comes installed with the default settings. If you intend to re-program the ESC, we strongly recommend removing the propeller first in order to keep it from spinning if the motor is accidentally engaged. Note: ALWAYS assume the motor and the propeller are live. ALWAYS keep clear of the propeller at all times. The high rpm of the brushless motor can cause severe injury.

### E-flite 25-Amp ESC Features:

- Two soft cut settings (for 2- and 3-cell Li-Po battery packs)
- 70% Smart Cut feature
- Brake option
- Timing options for up to 4-pole inrunner and 4-pole outrunner motors
- 2 setting options for the throttle input range

### Using Your E-flite 25-Amp Brushless Controller:

The E-flite 25A controller is very simple to use and, for safety, will not arm the motor until the throttle stick has been held in the Idle/Off position for more than 1 second. The controller will tell you what setting you have for the soft cut voltage every time you plug in the battery by first making a low, long beep to show startup. Then, it makes 2 or 3 medium length, mid-tone beeps to indicate the cell count (or 7 beeps if 70% Smart Cut is selected), helping you to check the setting before every flight. To prepare for flight, you should first turn on your transmitter and ensure the throttle is set to the Idle/Off position. Next, plug in the flight pack to the speed control and listen for the tones to indicate soft-cut voltage. After the controller has indicated the cell count, the controller will make one set of 3 medium length, rising tones to tell you it is armed and ready to fly, or 2 sets of fast rising tones if you are entering the programming mode. For your own safety, and the safety of others, you should

always treat the motor and propeller as though they are “live” and dangerous, remembering the motor could start at any time. Keep any body parts, clothing and tools clear of the propeller arc. Never leave the battery connected when you are not flying the aircraft. Always remove the battery pack from the model before charging the battery, and when finished flying.

### Programming:

The E-flite 25-amp programming sequence is designed to be very simple and intuitive. It is a simple menu system that should be very easy to learn and remember.

### Stick Up = Full Throttle

### Stick Down = Idle

### Default Setup for E-flite 25-amp ESC:

- 3S auto-cutoff
- Brake inactive
- 4-pole and greater timing
- Auto setting throttle input range

### Programming Mode:

1. With the battery disconnected from the controller, and the transmitter turned on, first move the throttle stick to the full power position. Leave it in this position and then connect the battery to the controller.
2. Wait for 5 seconds, and the ESC will give two sets of fast ringing tones to indicate you have successfully entered the programming mode.
3. Once you hear these tones, move the stick to center, and the controller will beep 1 time, indicating you are at menu item number 1.
4. The controller will now wait 5 seconds for you to make your selection, move the stick to Full Throttle for “Yes,” or to Idle for “No.”
5. When you have made a valid selection, the control will beep once with a lower tone and then you can move the stick back to center for the next menu item (2 beeps, 3 beeps and so on). If you do not make a selection within 5 seconds, the controller will move to the next menu item.
6. Please note that you do not need to program every menu item. You can simply exit the programming mode after you have made the required selections by:
  - a. Moving the throttle stick to idle, after making your selection.
  - b. Leaving it in the idle position for approximately 8 seconds (if you made no selection), until you hear one set of 3 medium length rising tones that indicate the controller has armed the motor; or
  - c. By simply unplugging the battery.

## Step 10

### Range Checking your Radio System

After you have finished the final assembly, it is time to range check the radio system within the Typhoon 2 3D.

### Prior to each flying session:

- Make sure the model is restrained before doing a range check with the motor running. Make sure no one around who is flying, or is getting prepared to fly, is on the same channel you are on. After this is confirmed, turn on transmitter with antenna down. Next, turn on receiver (switch on the plane). With the airplane on the ground and the motor running, you should walk away approximately 100 feet and still have full control of all functions. If this is not the case, do not fly! Call Product Support at 1-877-504-0233.

- Always make sure all controls are functioning per the transmitter input you are giving. This includes ailerons, rudder, elevator, and throttle.
- Always make sure you have fully charged the transmitter batteries.

**Always remove the flight battery from the airplane when you are done flying, or when you are on the way to the flying field.** Leaving the battery plugged in the airplane for an extended time could cause permanent damage to your battery (especially if using a Li-Po battery).

## Step 11


### Flying

Always choose a wide-open space for flying your ParkZone Typhoon 2 3D. It is ideal for you to fly at an AMA sanctioned flying fields. If you are not flying at an AMA approved site, always avoid flying near houses, trees, wires, and buildings. You should also be careful to avoid flying in areas where there are many people, such as busy parks, or school yards. Always follow local ordinances.

### Prior to each flight:

- Always make sure your Typhoon 2 3D is properly trimmed. From time to time, it may be necessary to re-trim your airplane. Simply turn the radio system (along with flight battery) and check all control surfaces. Most trim changes should be able to be made by using the trim levers on the transmitter. Greater changes will need to be made by removing clevis from control horn and turning it on pushrod in the appropriate direction.
- Always make sure the receiver, ESC, and battery are properly secured.
- Always verify the propeller is on securely.
- Always ensure the servo reversing switches on the transmitter are set correctly.
- Verify propeller is fitted in correct direction and is attached securely.

- Always verify the dual rates switch is set at where you plan on flying. We recommend LOW rates for your initial flying. The Typhoon 2 3D is VERY maneuverable on high rates and requires a lot of experience to handle properly.

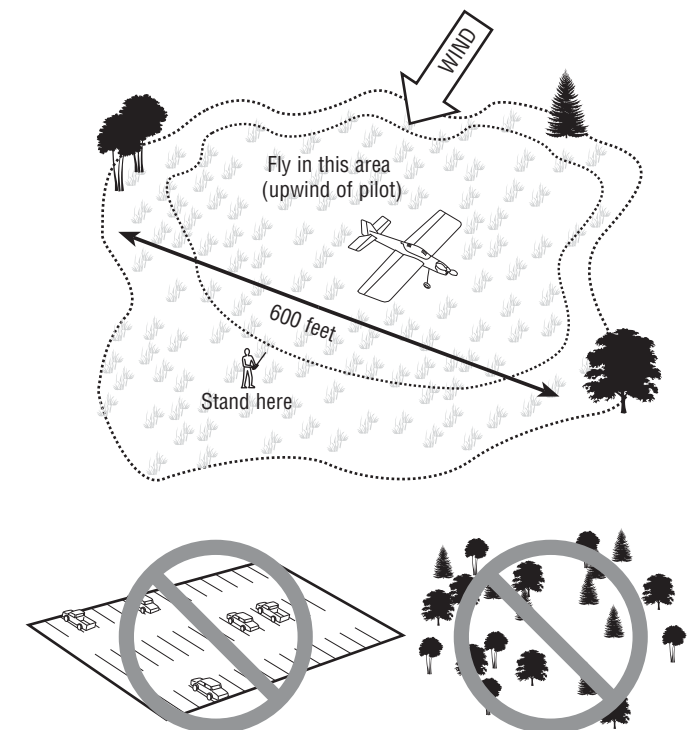



# Warranty and Follow-Up Procedures

## Warranty Period:

Exclusive Warranty- Horizon Hobby, Inc., (Horizon) warranties that the Products purchased (the “Product”) will be free from defects in materials and workmanship at the date of purchase by the Purchaser.

## Limited Warranty

(a) This warranty is limited to the original Purchaser (“Purchaser”) and is not transferable. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE PURCHASER. This warranty covers only those Products purchased from an authorized Horizon dealer. Third party transactions are not covered by this warranty. Proof of purchase is required for warranty claims. Further, Horizon reserves the right to change or modify this warranty without notice and disclaims all other warranties, express or implied.

(b) Limitations- HORIZON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCT. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER’S INTENDED USE.

(c) Purchaser Remedy- Horizon’s sole obligation hereunder shall be that Horizon will, at its option, (i) repair or (ii) replace, any Product determined by Horizon to be defective. In the event of a defect, these are the Purchaser’s exclusive remedies. Horizon reserves the right to inspect any and all equipment involved in a warranty claim. Repair or replacement decisions are at the sole discretion of Horizon. This warranty does not cover cosmetic damage or damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or modification of or to any part of the Product. This warranty does not cover damage due to improper installation, operation, maintenance, or attempted repair by anyone other than Horizon. Return of any goods by Purchaser must be approved in writing by Horizon before shipment.

## Damage Limits:

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCT, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY. Further, in no

event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability.

If you as the Purchaser or user are not prepared to accept the liability associated with the use of this Product, you are advised to return this Product immediately in new and unused condition to the place of purchase.

Law: These Terms are governed by Illinois law (without regard to conflict of law principals).

## Safety Precautions:

This is a sophisticated hobby Product and not a toy. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the Product or other property. This Product is not intended for use by children without direct adult supervision. The Product manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or injury.

## Questions, Assistance, and Repairs:

Your local hobby store and/or place of purchase cannot provide warranty support or repair. Once assembly, setup or use of the Product has been started, you must contact Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please direct your email to [productsupport@horizonhobby.com](mailto:productsupport@horizonhobby.com), or call 877.504.0233 toll free to speak to a service technician.

## Inspection or Repairs

If this Product needs to be inspected or repaired, please call for a Return Merchandise Authorization (RMA). Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as **Horizon is not responsible**

**for merchandise until it arrives and is accepted at our facility.** A Service Repair Request is available at [www.horizonhobby.com](http://www.horizonhobby.com) on the “Support” tab. If you do not have internet access, please include a letter with your complete name, street address, email address and phone number where you can be reached during business days, your RMA number, a list of the included items, method of payment for any non-warranty expenses and a brief summary of the problem. Your original sales receipt must also be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

## Warranty Inspection and Repairs

To receive warranty service, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be repaired or replaced free of charge. Repair or replacement decisions are at the sole discretion of Horizon Hobby.

## Non-Warranty Repairs

**Should your repair not be covered by warranty the repair will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost.** By submitting the item for repair you are agreeing to payment of the repair without notification. Repair estimates are available upon request. You must include this request with your repair. Non-warranty repair estimates will be billed a minimum of ½ hour of labor. In addition you will be billed for return freight. Please advise us of your preferred method of payment. Horizon accepts money orders and cashiers checks, as well as Visa, MasterCard, American Express, and Discover cards. If you choose to pay by credit card, please include your credit card number and expiration date. Any repair left unpaid or unclaimed after 90 days will be considered abandoned and will be disposed of accordingly. **Please note: non-warranty repair is only available on electronics and model engines.**

Electronics and engines requiring inspection or repair should be shipped to the following address:

## Horizon Service Center

**4105 Fieldstone Road**

**Champaign, Illinois 61822**

All other Products requiring warranty inspection or repair should be shipped to the following address:

## Horizon Product Support

**4105 Fieldstone Road**

**Champaign, Illinois 61822**

**Please call 877-504-0233 with any questions or concerns regarding this product or warranty.**

Replacement Parts

Make sure that you keep your Typhoon 2 3D flying! Replacement parts are available at your local hobby shop or from Horizon Hobby (www.horizonhobby.com). Please try your local hobby shop first. By supporting them, they will be there when you need them!

| Item #: | Description:                              | Retail: |
|---------|-------------------------------------------|---------|
| PKZ1006 | 13.5 x 7 Propeller: Typhoon 3D/2 3D       | \$3.49  |
| PKZ1007 | 12 x 8.75 Propeller: Typhoon 3D/2 3D      | \$3.49  |
| PKZ1090 | DSV130M Digital Metal Gear Servo          | \$13.99 |
| PKZ1064 | Metal Gear Set: DSV130M                   | \$5.99  |
| PKZ4302 | Decal Set: Typhoon 2 3D                   | \$4.99  |
| PKZ4104 | Prop Shaft w/Hardware: Typhoon 3D/2 3D    | \$2.29  |
| PKZ4107 | Spinner: Typhoon 3D/2 3D                  | \$2.29  |
| PKZ4113 | Canopy: Typhoon 3D/2 3D                   | \$3.29  |
| PKZ4114 | Firewall w/Screws: Typhoon 3D/2 3D        | \$2.19  |
| PKZ4315 | Instruction Manual: Typhoon 2 3D          | \$0.99  |
| PKZ4116 | Brushless Motor w/Pinion: Typhoon 3D/2 3D | \$46.99 |
| PKZ4317 | Instruction Manual: Typhoon 2 3D PNP      | \$0.99  |
| PKZ4320 | Wing Set: Typhoon 2 3D                    | \$21.99 |
| PKZ4321 | SFG's: Typhoon 2 3D                       | \$9.99  |
| PKZ4121 | Control Horns w/Hardware: Typhoon 3D/2 3D | \$4.99  |
| PKZ4122 | Pushrod and Clevis Set: Typhoon 3D/2 3D   | \$2.59  |
| PKZ4123 | Ailerons (2) w/Parts: Typhoon 3D/2 3D     | \$9.99  |
| PKZ4124 | Vertical Tail w/Parts: Typhoon 3D/2 3D    | \$9.99  |
| PKZ4325 | Horizontal Tail w/Parts: Typhoon 2 3D     | \$9.99  |
| PKZ4126 | Cowl: Typhoon 3D/2 3D                     | \$2.49  |
| PKZ4128 | Gearbox w/Pinion: Typhoon 3D/2 3D         | \$8.99  |
| PKZ4367 | Bare Fuselage: Typhoon 3D/2 3D            | \$28.99 |

Optional Parts

|          |                                         |         |
|----------|-----------------------------------------|---------|
| PKZ4161  | FM Crystal Set CH17, 72.130             | \$9.99  |
| PKZ4162  | FM Crystal Set CH19, 72.170             | \$9.99  |
| PKZ4163  | FM Crystal Set CH21, 72.210             | \$9.99  |
| PKZ4164  | FM Crystal Set CH50, 72.790             | \$9.99  |
| PKZ4165  | FM Crystal Set CH52, 72.830             | \$9.99  |
| PKZ4166  | FM Crystal Set CH54, 72.870             | \$9.99  |
| PKZ4341  | Tx: (T672) CH 17, 72.130: Typhoon 2 3D  | \$33.99 |
| PKZ4351  | Rx: (RA672) CH 17, 72.130: Typhoon 2 3D | \$29.99 |
| PKZ1040  | 2- to 3-Cell DC Li-Po Balancing Charger | \$34.99 |
| PKZ1031  | 1800mAh 11.1V Li-Po Battery             | \$69.99 |
| EFLA1025 | 25-Amp Pro Brushless ESC                | \$59.99 |





PKZ4315



ParkZone® products are distributed exclusively by  
Horizon Hobby, Inc.  
4105 Fieldstone Road  
Champaign, IL 61822  
©2007 Horizon Hobby, Inc.  
[www.parkzone.com](http://www.parkzone.com)  
10086

