

## D500SR AIR COMPRESSOR with ON/OFF SWITCH & R-75AR REGULATOR

OIL-LESS DIAPHRAGM AIR COMPRESSOR  
NEEDS NO LUBRICATION

(115 VOLT, 60 CYCLE, 3 AMPS., 1/10 H.P.)

The **D500SR** Air Compressor is suitable for all airbrushes spraying properly thinned fluids. This is the most economical Air Compressor Paasche offers to the art and hobby field. It is capable of delivering up to 40 lbs. pressure, is a diaphragm unit and comes with 3 wire cord. The D500SR operates on 115 Volt and delivers (.5 C.F.M. at 20 P.S.I.), 1 Phase, 60 Cycle, 1/10 H.P., 3 AMPS.

**INSTRUCTIONS:**  
BEFORE OPERATING COMPRESSOR, READ AND FOLLOW DIRECTIONS AS OUTLINED BELOW.

1. Assemble R-75AR to Air Outlet at end of handle in position shown in picture and tighten securely. Teflon tape can be used on fittings to prevent air leaks. First, attach Galv. Pipe to compressor air port then slide foam handle over pipe.
2. Part No. 24a Coupler has a small bleeder hole which prevents the compressor from trying to starting under back pressure. **Always bleed air from your airbrush while starting compressor.**
3. Set Compressor on floor. (Compressor vibrates and may "walk" off elevated surfaces, possibly causing damage to unit or injury to you). A small swatch of carpet placed under the compressor on the floor reduces vibration and noise.
4. Plug cord with ON/OFF Switch into 115V., 60 CY. grounded outlet.

### GROUNDING INSTRUCTIONS:

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER**—Improper use of the grounding plug can result in a risk of electrical shock.

**Paasche Airbrush Company**  
4311 North Normandy  
Chicago, IL 60634-1395  
**Phone:** 773-867-9191 • **Fax:** 773-867-9198  
**Website:** [paascheairbrush.com](http://paascheairbrush.com)  
**E-Mail:** [info@paascheairbrush.com](mailto:info@paascheairbrush.com)

**WARNING:** When a flammable liquid is sprayed, there may be danger of fire or explosion especially in a closed room. Keep compressor at least 20 feet away from areas where hazardous concentrations of flammable vapors are likely to occur. Disconnect power before servicing.

**ATTENTION:** Lorsqu'un liquide inflammable est pulvérisé, il peut y avoir danger d'incendie ou d'explosion, spécialement dans une pièce fermée; garder le compresseur à au moins 20 pieds des endroits où des concentrations dangereuses de vapeurs inflammables sont susceptibles de se produire. Débrancher avant toute maintenance.


If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. **DO NOT** modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

This product is for use on nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated in sketch (A). Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

### EXTENSION CORDS:

Use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the product. Make sure your extension cord is in good condition. When using an extension cord, be sure to use one heavy enough to carry the current your product will draw. An undersized cord will cause a drop in line voltage resulting in loss of power and overheating.

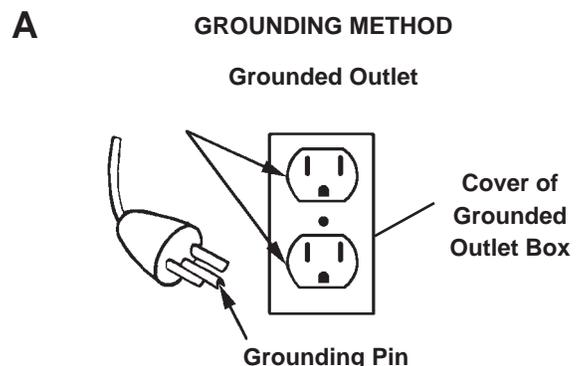

It is always a good idea to bleed air from your airbrush and air hose while starting your compressor.



**SERVICE:**



**Before returning D500SR unit for service carefully read and follow instructions. Disconnect before servicing.**

If Compressor should begin to pump less air, check six Head Screws and tighten if necessary. Check Exhaust Reed #9 and Intake Reed #8 for damage and proper position over holes in Valve Plates. When replacing parts, assemble in the same position as before they were removed. Normal operating temperature of compressor is 150°-160° F. Any electrical servicing should be done by the Factory.

**AUTOMATIC THERMAL LIMITER**

The D500SR Compressor will shut off automatically when overheated. To restart, release air pressure and let Compressor cool down.

**D500SR With On/Off switch is not CSA Approved.**

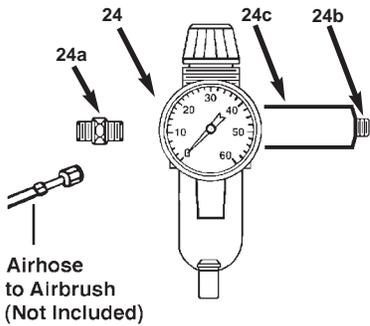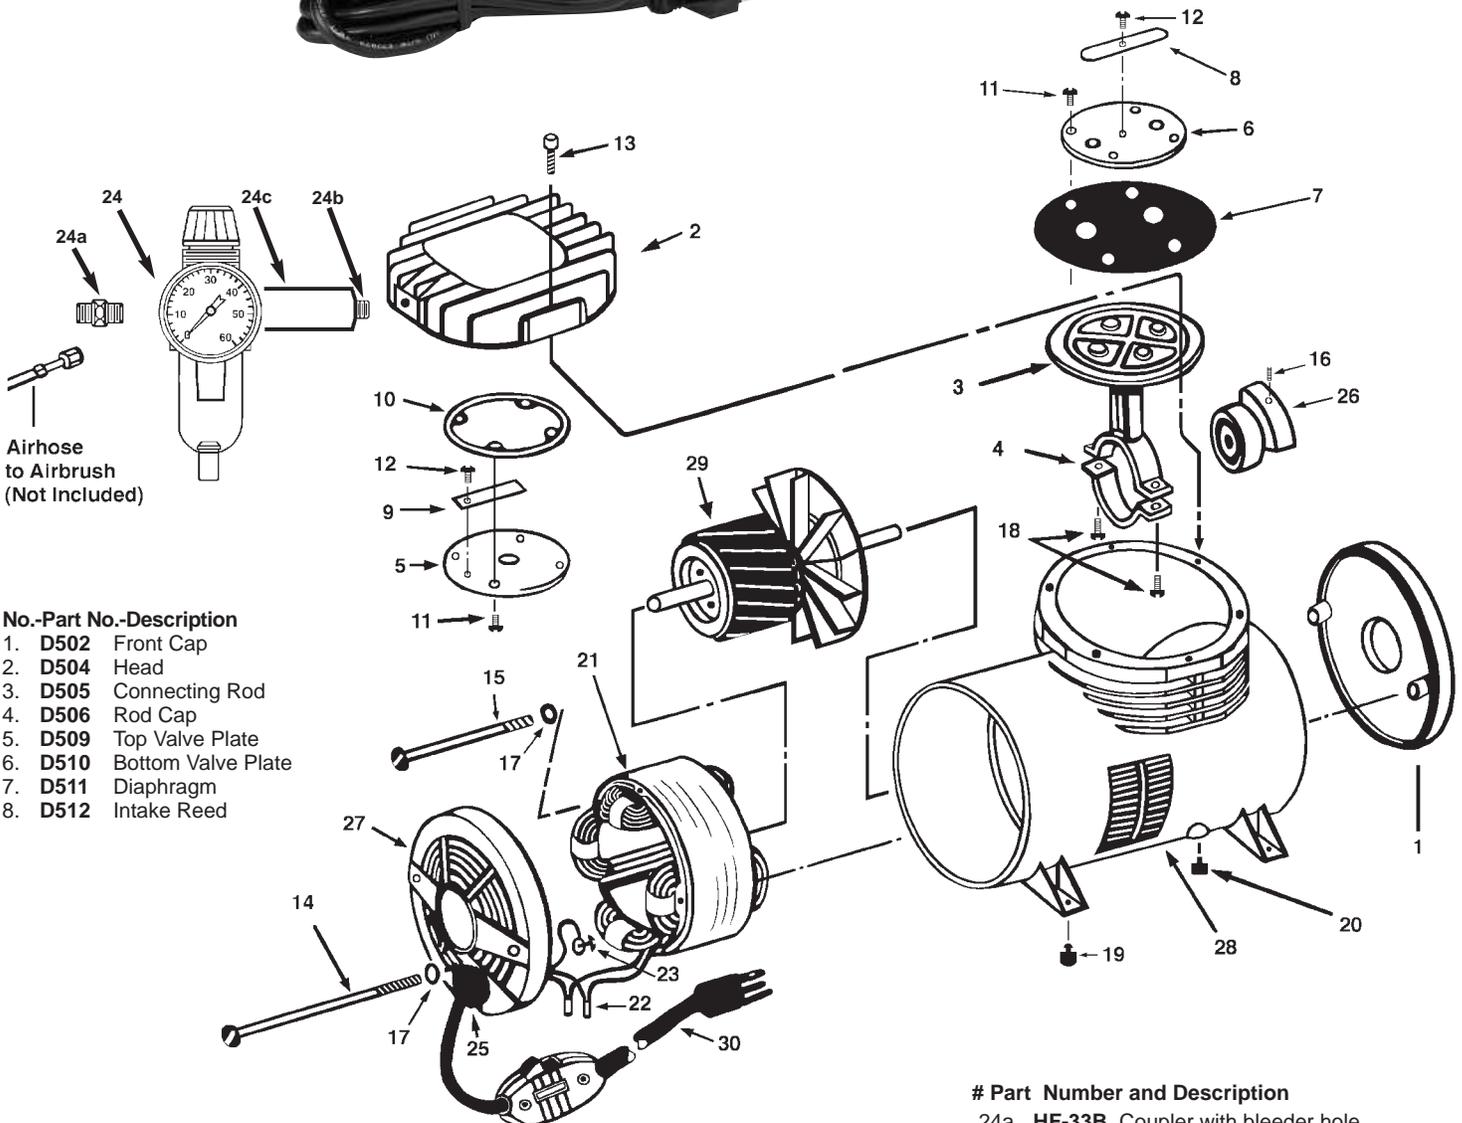

- No.-Part No.-Description
- 1. D502 Front Cap
- 2. D504 Head
- 3. D505 Connecting Rod
- 4. D506 Rod Cap
- 5. D509 Top Valve Plate
- 6. D510 Bottom Valve Plate
- 7. D511 Diaphragm
- 8. D512 Intake Reed

- # Part Number and Description
- 9. D513 Exhaust Reed
- 10. D514 Top Plate Gasket
- 11. D515 Valve Plate Screw (8 required)
- 12. D516 Reed Screw (2 required)
- 13. D517 Head Screw (6 required)
- 14. D518 Cap Retaining Screw (2 required)
- 15. D519 Stator Screw (2 required)
- 16. M-44 Counter Weight Screw

- # Part Number and Description
- 17. D521 Cap Split Lock Washer (4)
- 18. D523 Rod Screw (2)
- 19. D524 Rubber Foot (4)
- 20. D525 Plug Bushing (2)
- ★21. D526 Motor Stator 115 V., 60 CY.
- 22. D529 Insulated Crimp Connector (2)
- 23. D530 Ground Wire Screw
- 24. R-75AR Regulator & Filter W/Gauge

- # Part Number and Description
- 24a. HF-33B Coupler with bleeder hole
- 24b. 1/4"x3-1/2"NG Nipple Galv.
- 24c. D556 Foam Handle
- 25. D539 Cord Strain Relief
- 26. D540 Counter Weight/Rod Brg Assembly
- 27. D541 Rear Cap & Brg. Assembly.
- 28. D501 Housing Painted w/Ctr. Bearing
- ★29. D543 Shaft, Rotor & Fan Assembly
- 30. U-2769-6' Cord with Switch
- ★ These Items require Factory Installation!