

# DHC-2 *Beaver*

## ISLAND WINGS RX-R

### INSTRUCTION MANUAL UPDATE

On page 8 of the manual, under ***Hook Up the Rudder and Elevator***, it indicates that the throttle channel should be in the reverse **(R)** position. This is correct for Tactic, Futaba, and Hitec radios, but may not be the case for all radio brands. Other radio brands may require the throttle reversing switch to be in the normal **(N)** position to work with the ESC included with the Beaver.

**During set up of the ESC/motor and transmitter/receiver, make sure that the prop is not installed on the motor.** Install the propeller and spinner once the radio is operating properly and the throttle and failsafe have been set.



FLZA4024ADDN1

© 2015 Flyzone, a Hobbico company

**HOBIBICO**