



# PRO-LINE





## WRAP & TRIMMING INSTRUCTIONS

Congratulations on your purchase of the **MEGALODON** Desert Buggy: Blake Wilkey Edition body for your SC Truck! Please take a moment to review these instructions for correct decal placement and body trimming. We recommend applying the decals before trimming out your body.

**IMPORTANT:** Peel off protective film before you begin to apply decals!

### DECAL & TRIMMING TIPS

- For easy application and repositioning, use water in a spray bottle. Lightly mist the adhesive side of the decal. Squeegee out excess water once you are satisfied with decal placement.
- Start with number **1** and work your way through the decal sheets in numerical order for best results.
- Follow the cutlines on the 2 diagrams below for the correct trimming. Attach side fins with 2 screws each side and fenders with 3 screws each side.

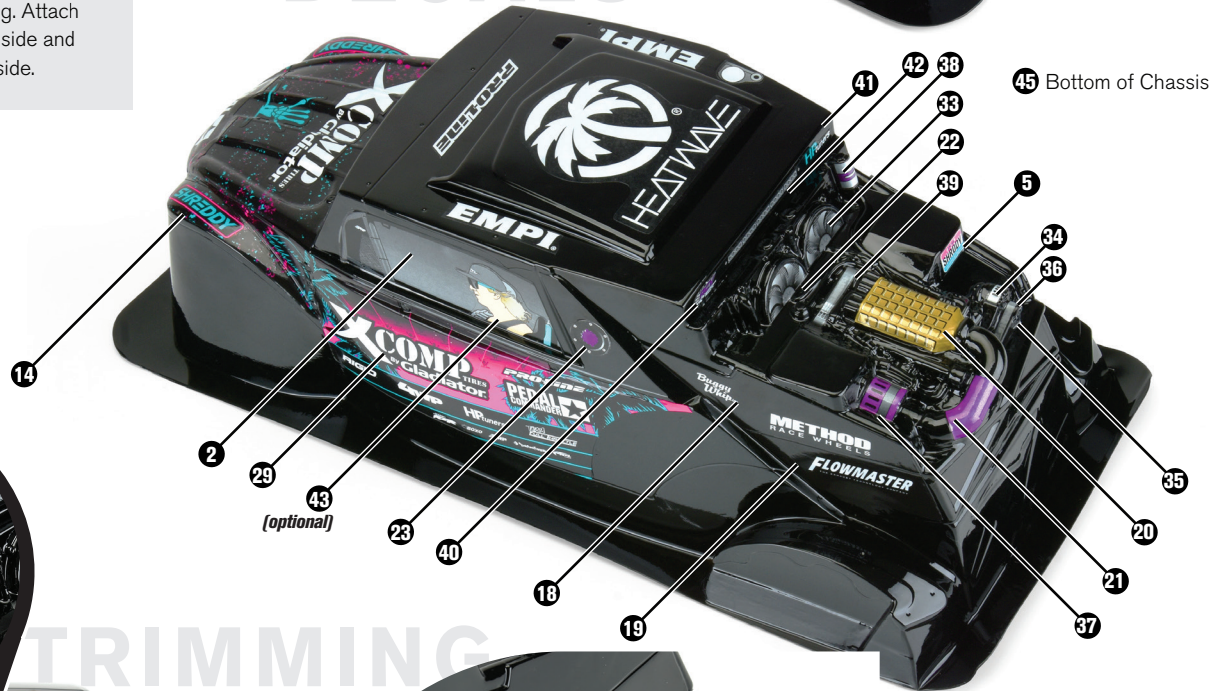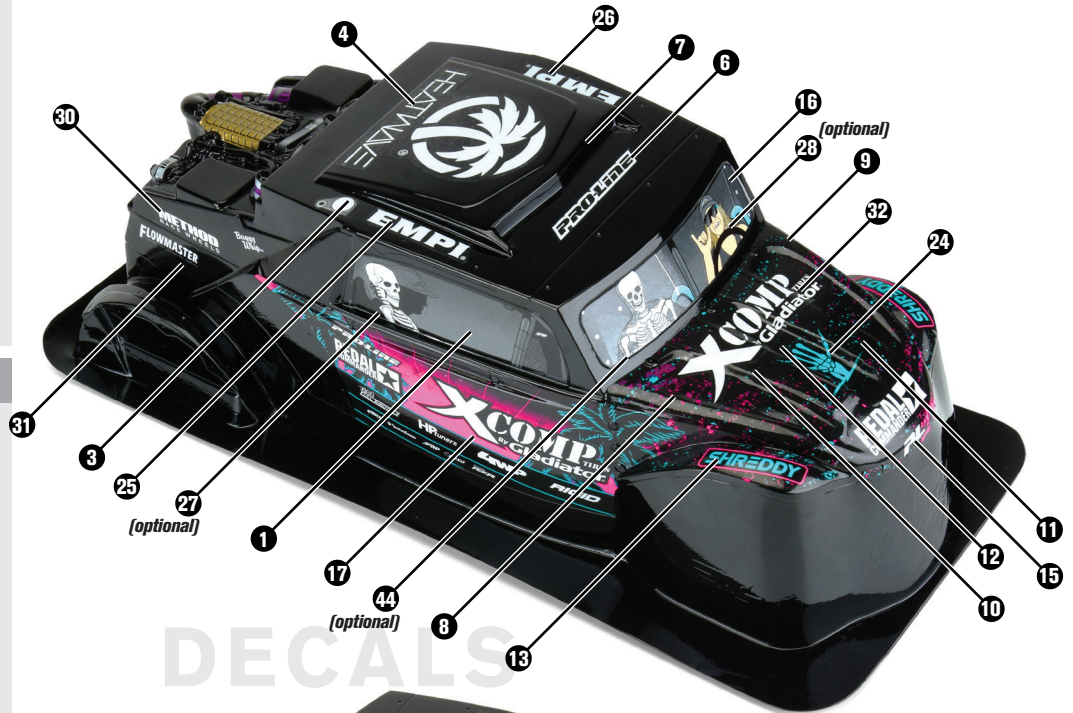

INSTALL  
SIDE FINS  
WITH 2x  
M3 SCREWS



DO NOT TRIM  
TRIM LINE



INSTALL  
FENDERS  
WITH 3x  
M3 SCREWS