


BLADE® 350 QX

Blade® 350 QX 2.0 Copper Foil Shielding Instructions

The Blade® 350 QX Firmware 2.0 includes two adhesive-backed, metal-foil sheets to provide GoPro® users with an extra measure of RF-shielding.

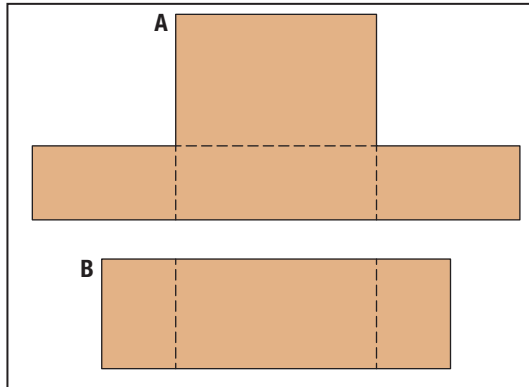

1. Fold the inner "T" sheet (**A**) around the camera with the metallic side facing away from the camera so it covers the top, sides and back. **DO NOT peel off the backing.**
 2. Peel the backing off the rectangular sheet (**B**).
 3. Wrap sheet **B** around the back of sheet **A**, sealing all the rear edges and holding everything together.
 4. The shield is removable and is held in place by the 350 QX camera mount.
- The front and bottom of the camera are left unshielded to allow any RF noise to radiate out and away from the 350 QX.

