

READY-TO-RUN  
**SCX10 III JEEP<sup>®</sup> XJ CHEROKEE**  
4WD ROCK CRAWLER

**INSTRUCTION MANUAL  
BEDIENUNGSANLEITUNG  
MANUEL D'UTILISATION  
MANUALE DI ISTRUZIONI**

Scan the QR code and select the Manuals and Support quick links from the product page for the most up-to-date manual information.

Scannen Sie den QR-Code und wählen Sie auf der Produktseite die Quicklinks Handbücher und Unterstützung, um die aktuellsten Informationen zu Handbüchern.

Scannez le code QR et sélectionnez les liens rapides Manuals and Support sur la page du produit pour obtenir les informations les plus récentes sur le manuel.

Scannerizzare il codice QR e selezionare i Link veloci Manuali e Supporto dalla pagina del prodotto per le informazioni manuali più aggiornate.



**AXI-2037**

## NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, LLC. For up-to-date product literature, visit [horizonhobby.com](http://horizonhobby.com) or [towerhobbies.com](http://towerhobbies.com) and click on the support or resources tab for this product.

## MEANING OF SPECIAL LANGUAGE

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

**WARNING:** Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

**CAUTION:** Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

**NOTICE:** Procedures, which if not properly followed, create a possibility of physical property damage AND a little or no possibility of injury.



**WARNING:** Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by Horizon Hobby, LLC. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

**Age Recommendation: Not for children under 14 years. This is not a toy.**

## SAFETY PRECAUTIONS AND WARNINGS

As the user of this product, you are solely responsible for operating in a manner that does not endanger yourself and others or result in damage to the product or property of others.

This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe distance in all directions around your model as this margin will help avoid collisions or injury.

- Never operate your model with low transmitter batteries.
- Always operate your model in open spaces away from full-size vehicles, traffic and people.
- Never operate the model in the street or in populated areas for any reason.
- Carefully follow the directions and warnings for this and any optional support equipment (chargers, rechargeable battery packs, etc.) you use.
- Keep all chemicals, small parts and anything electrical out of the reach of children.
- Never lick or place any portion of the model in your mouth as it could cause serious injury or even death.
- Exercise caution when using tools and sharp instruments.
- Take care during maintenance as some parts may have sharp edges.
- Immediately after using your model, do NOT touch equipment such as the motor, electronic speed control and battery, because they generate high temperatures. You may burn yourself seriously touching them.
- Do not put fingers or any objects inside rotating and moving parts, as this may cause damage or serious injury.
- Always turn on your transmitter before you turn on the receiver in the car. Always turn off the receiver before turning your transmitter off.
- Keep the wheels of the model off the ground when checking the operation of the radio equipment.



**WARNING AGAINST COUNTERFEIT PRODUCTS:** Always purchase from a Horizon Hobby, LLC authorized dealer to ensure authentic high-quality Spektrum product. Horizon Hobby, LLC disclaims all support and warranty with regards, but not limited to, compatibility and performance of counterfeit products or products claiming compatibility with Spektrum technology.

## TABLE OF CONTENTS

|                                                           |   |                                                     |    |
|-----------------------------------------------------------|---|-----------------------------------------------------|----|
| Water-resistant Vehicle with Waterproof Electronics ..... | 3 | Vehicle maintenance.....                            | 9  |
| Box Contents.....                                         | 4 | Binding.....                                        | 10 |
| Required Equipment .....                                  | 4 | Firma 40A Brushed ESC .....                         | 10 |
| Recommended tools.....                                    | 4 | Troubleshooting.....                                | 11 |
| Getting started checklist.....                            | 5 | Limited Warranty.....                               | 12 |
| Vehicle parts .....                                       | 5 | Warranty and Service Contact Information .....      | 12 |
| Charge the vehicle battery .....                          | 6 | FCC Information.....                                | 13 |
| Install the transmitter batteries.....                    | 6 | IC Information.....                                 | 13 |
| Transmitter functions .....                               | 6 | Compliance Information for the European Union ..... | 13 |
| Install the vehicle battery .....                         | 7 | Parts Lists.....                                    | 53 |
| Dig Programming Procedure .....                           | 8 | Optional Parts.....                                 | 56 |
| Range-check the radio system.....                         | 8 |                                                     |    |

## WATER-RESISTANT VEHICLE WITH WATERPROOF ELECTRONICS

Your new Horizon Hobby vehicle has been designed and built with a combination of waterproof and water-resistant components to allow you to operate the product in many “wet conditions,” including puddles, creeks, wet grass, snow and even rain.

While the entire vehicle is highly water-resistant, it is not completely waterproof and your vehicle should NOT be treated like a submarine. The various electronic components used in the vehicle, such as the Electronic Speed Control (ESC), servo(s) and receiver are waterproof, however, most of the mechanical components are water-resistant and should not be submerged.

Metal parts, including the bearings, hinge pins, screws and nuts, as well as the contacts in the electrical cables, will be susceptible to corrosion if additional maintenance is not performed after running in wet conditions. To maximize the long-term performance of your vehicle and to keep the warranty intact, the procedures described in the “Wet Conditions Maintenance” section below must be performed regularly if you choose to run in wet conditions. If you are not willing to perform the additional care and maintenance required, then you should not operate the vehicle in those conditions.



**CAUTION:** Failure to exercise caution while using this product and complying with the following precautions could result in product malfunction and/or void the warranty.

### GENERAL PRECAUTIONS

- Read through the wet conditions maintenance procedures and make sure that you have all the tools you will need to properly maintain your vehicle.
- Not all batteries can be used in wet conditions. Consult the battery manufacturer before use. Caution should be taken when using Li-Po batteries in wet conditions.
- Most transmitters are not water-resistant. Consult your transmitter’s manual or the manufacturer before operation.
- Never operate your transmitter or vehicle where lightning may be present.
- Do not operate your vehicle where it could come in contact with salt water (ocean water or water on salt-covered roads), contaminated or polluted water. Salt water is very conductive and highly corrosive, so use caution.
- Even minimal water contact can reduce the life of your motor if it has not been certified as water-resistant or waterproof. If the motor becomes excessively wet, apply very light throttle until the water is mostly removed from the motor. Running a wet motor at high speeds may rapidly damage the motor.
- Driving in wet conditions can reduce the life of the motor. The additional resistance of operating in water causes excess strain. Alter the gear ratio by using a smaller pinion or larger spur gear. This will increase torque (and motor life) when running in mud, deeper puddles, or any wet conditions that will increase the load on the motor for an extended period of time.

### WET CONDITIONS MAINTENANCE

- Drain any water that has collected in the tires by spinning them at high speed. With the body removed, place the vehicle upside down and pull full throttle for a few short bursts until the water has been removed.



**CAUTION:** Always keep hands, fingers, tools and any loose or hanging objects away from rotating parts when performing the above drying technique.


- Remove the battery pack(s) and dry the contacts. If you have an air compressor or a can of compressed air, blow out any water that may be inside the recessed connector housing.
- Remove the tires/wheels from the vehicle and gently rinse the mud and dirt off with a garden hose. Avoid rinsing the bearings and transmission.

**NOTICE:** Never use a pressure washer to clean your vehicle.

- Use an air compressor or a can of compressed air to dry the vehicle and help remove any water that may have gotten into small crevices or corners.
- Spray the bearings, drive train, fasteners and other metal parts with a water-displacing light oil. Do not spray the motor.
- Let the vehicle air dry before you store it. Water (and oil) may continue to drip for a few hours.
- Increase the frequency of disassembly, inspection and lubrication of the following:
  - Front and rear axle hub assembly bearings.
  - All transmission cases, gears and differentials.
  - Motor—clean with an aerosol motor cleaner and re-oil the bushings with lightweight motor oil.

## BOX CONTENTS


- Spektrum™ SLT3 3-Channel 2.4GHz Transmitter (SPMRSLT380)
- SCX10 III Jeep® XJ Cherokee 4WD Crawler RTR
  - 35T 540 Brushed Motor (AXI-1376)
  - S683 S683 Waterproof Steel Gear Servo 25T (SPMS683)
  - SR515 DSMR 5 Channel Receiver (SPMSR515)
  - Firma 40A Brushed Waterproof ESC, IC3™ (SPMXSE1040)
- (4) AA Alkaline batteries

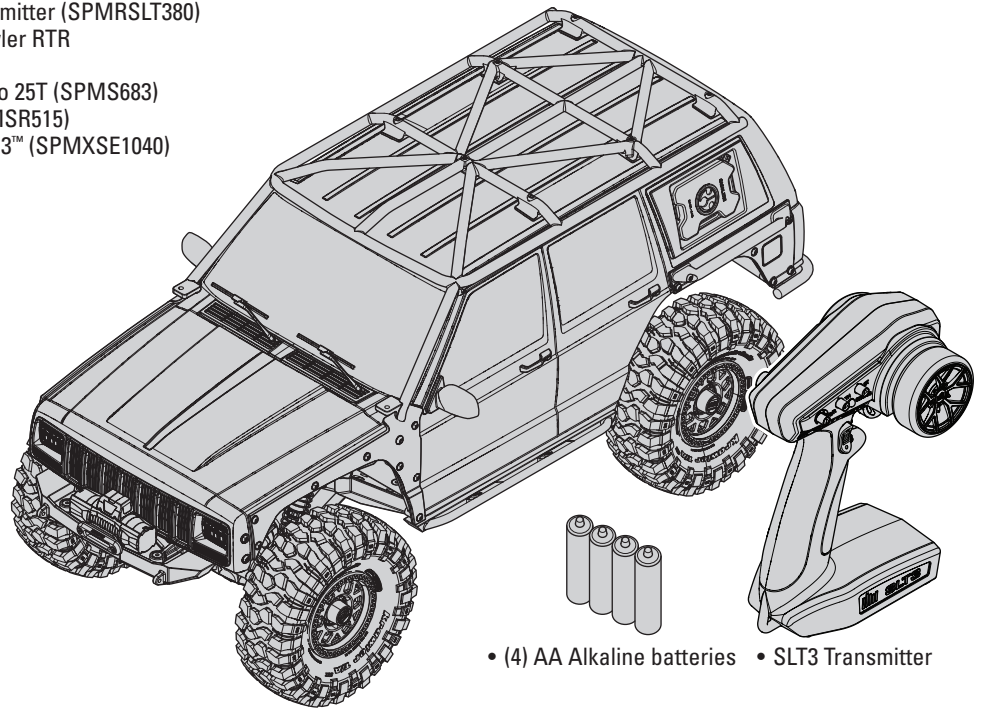


• (4) AA Alkaline batteries • SLT3 Transmitter

## REQUIRED EQUIPMENT


- 3S LiPo Battery (IC3™ Connector Required)

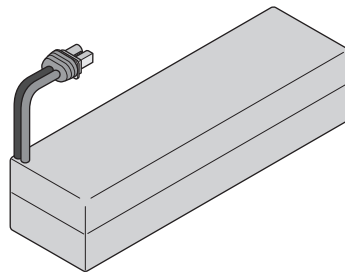


- Battery charger compatible with the chosen vehicle battery

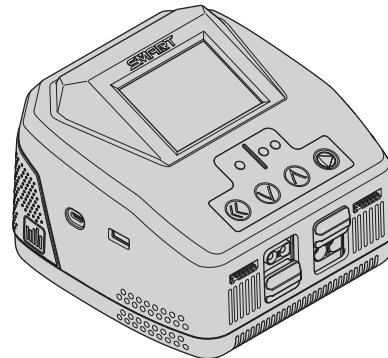


## RECOMMENDED TOOLS

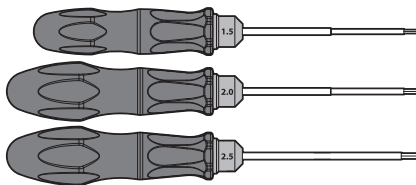


• Hex Drivers (1.5, 2.0, 2.5mm)

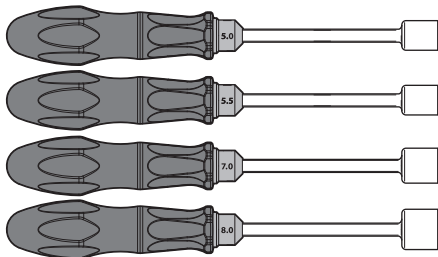


• Nut Drivers (5.0, 5.5, 7.0, 8.0mm)




• Hobby Knife

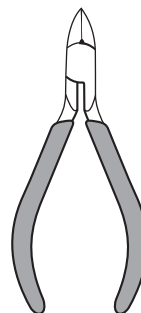

• Side Cutter

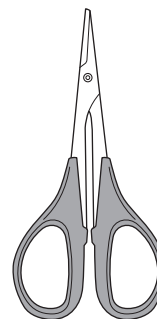

• Curved Scissors

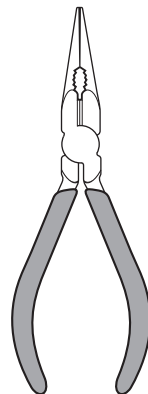


• Long-nose Plier

## GETTING STARTED CHECKLIST

|                                                                                       |
|---------------------------------------------------------------------------------------|
| Read the manual                                                                       |
| Familiarize yourself with the vehicle and its components                              |
| Check all screws, especially the driveshaft setscrews, for tightness from the factory |
| Charge the vehicle battery                                                            |
| Install 4 AA batteries in the transmitter                                             |

|                                                        |
|--------------------------------------------------------|
| Power on the transmitter                               |
| Install the vehicle battery in the vehicle             |
| Check for proper function of the throttle and steering |
| Range check the radio system                           |
| Drive the vehicle, challenge yourself and have FUN!    |
| Perform any necessary vehicle maintenance              |

## VEHICLE PARTS

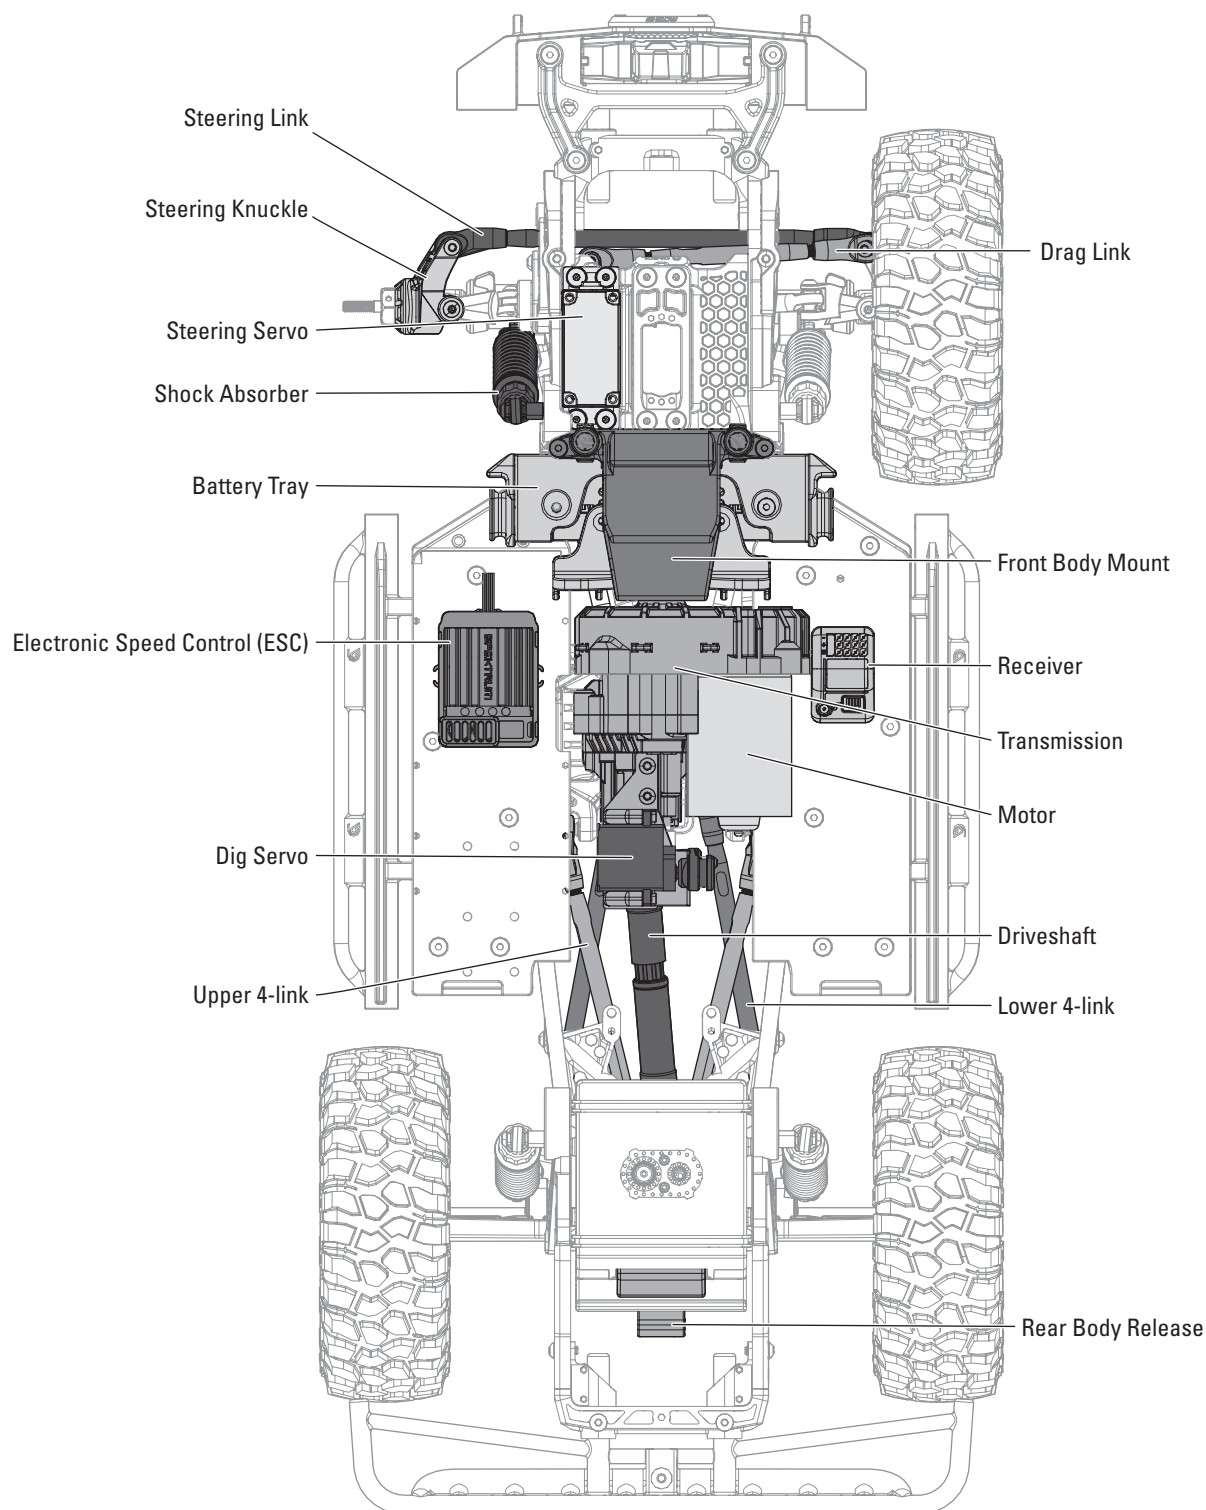


## CHARGE THE VEHICLE BATTERY

Follow the charger manufacturer instructions to properly charge the vehicle battery.



**CAUTION:** Only use chargers designed to charge the chosen battery type. Using an incorrect charger or incorrect charger settings could cause the battery to catch fire or explode.

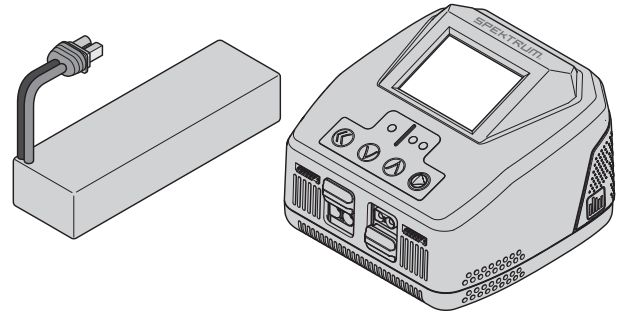


## INSTALL THE TRANSMITTER BATTERIES

This transmitter requires 4 AA batteries.

1. Remove the battery cover from the transmitter.
2. Install the batteries as shown.
3. Install the battery cover.



**CAUTION:** NEVER remove the transmitter batteries while the model is powered on. Loss of model control, damage, or injury may occur.

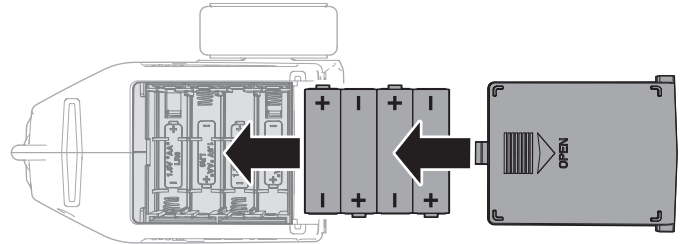

## TRANSMITTER FUNCTIONS

### SPECIFICATIONS

**Power Supply:** 4 AA Batteries

**Operating Frequency:** 2.4GHz

**Transmit Power:** <100mw

**Control Protocol:** SLT

**Control:** Proportional Steering and Throttle/Brake with Trim Knobs, Third Channel with 3 Position Momentary Switch

**Auxiliary Functions:** 3 Position Throttle Limit Switch, Steering Rate Knob to Change Steering Travel on-the-fly, Programmable Servo Travel for Steering and Throttle/Brake

#### A. Throttle Trim

Adjusts the throttle neutral point.

#### B. Steering Trim

Adjusts the steering center point. Normally, the steering trim is adjusted until the vehicle tracks straight.

#### C. LED

- Solid red lights: Indicates the power is ON and adequate battery power.
- Flashing red lights: Indicates the battery voltage is critically low. Replace batteries

#### D. Steering Wheel

#### E. Throttle/Brake

#### F. Steering Rate

On-The-Fly knob for travel adjustment on the steering

#### G. Channel 3 – A/B Button

3 position momentary switch, middle position is neutral

Press and hold the "A" or "B" button to activate the DIG function.

#### H. Throttle Limit

Limits throttle output to 50/75/100%

Select 50% or 75% for less experienced drivers or when you are driving the vehicle in a small area.



#### I. Throttle (TH) Servo Reversing

Move the switch to reverse the throttle channel


#### J. Steering (ST) Servo Reversing

Move the switch to reverse the steering channel

#### K. Power Button

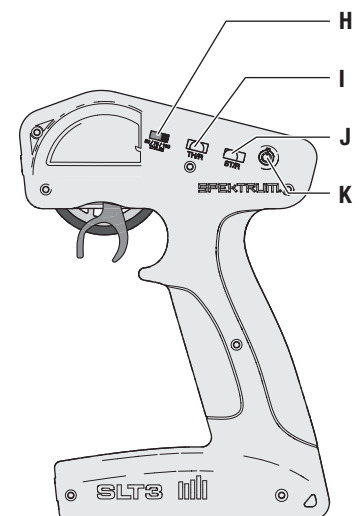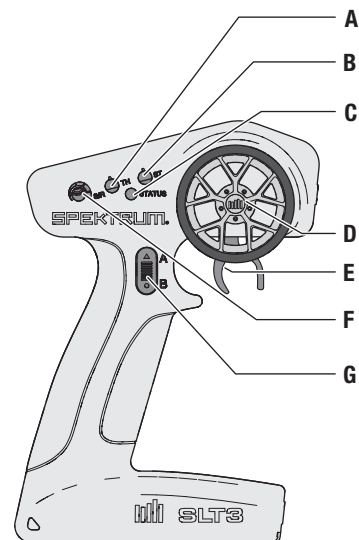



## INSTALL THE VEHICLE BATTERY

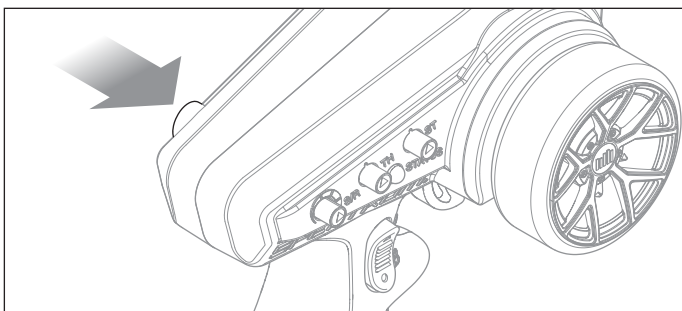


1. Power on the transmitter.

**NOTICE:** Always power on the transmitter before powering on the vehicle.

2. Press the rear body release located under the vehicle, and lift the rear of the body away from the chassis.
3. Push firmly on the front grill area to release the body from the front body mount.

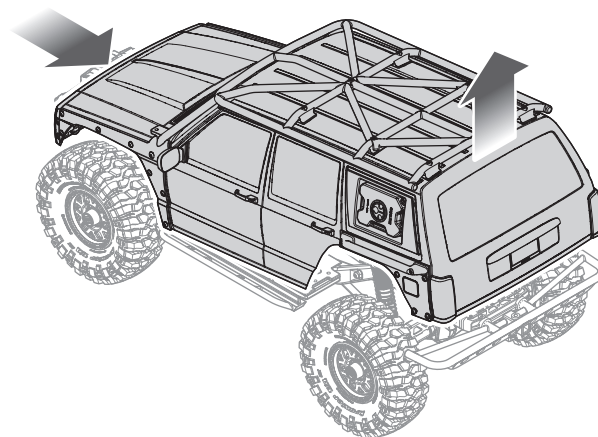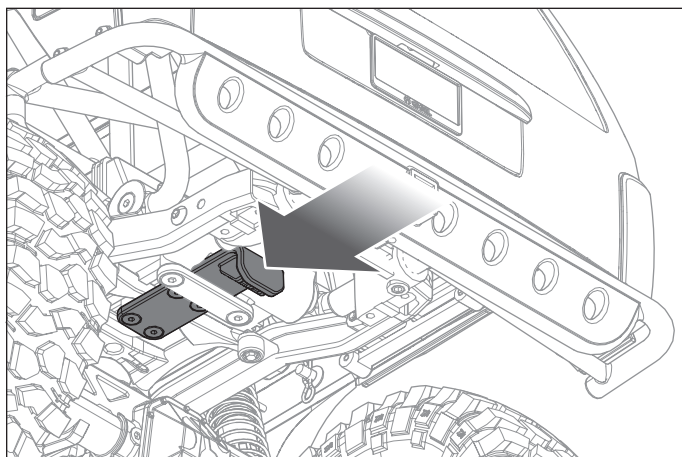


4. Install the recommended vehicle battery into the battery tray.  
**TIP:** The width of the battery tray may be adjusted to better fit the selected battery. Use a hex driver to remove the two screws holding the center section of the tray. Reposition the center section to the desired width. Reinstall the screws.

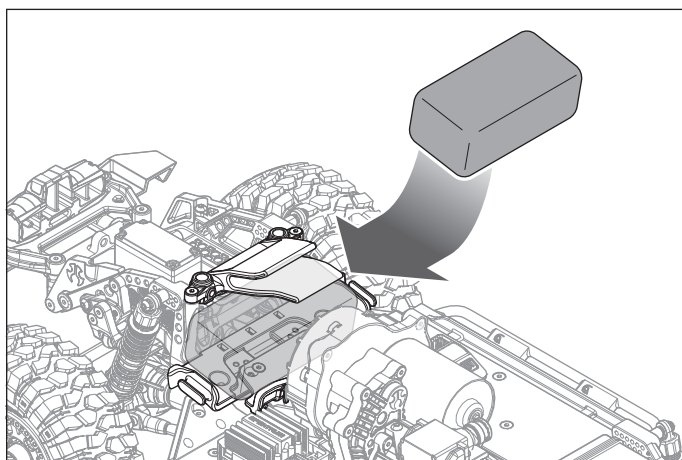


5. Pull the battery strap across the battery and secure it over the hook on the end of the tray.

**TIP:** Keep the battery lead connection secure by capturing the battery lead under the battery strap.


6. Connect the battery power lead to the ESC connector, noting proper polarity.

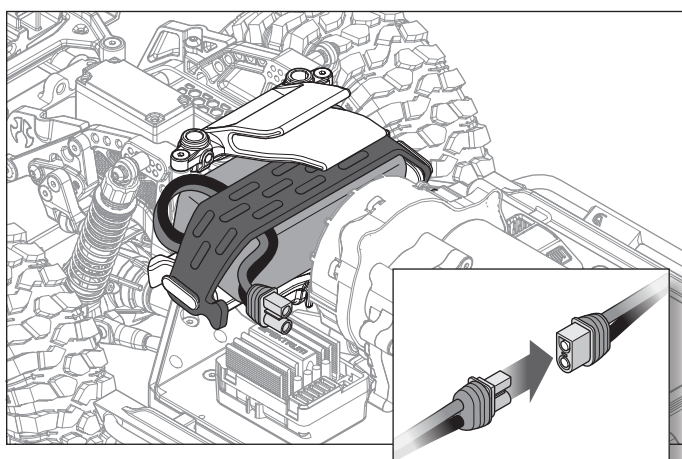

7. Tilting the body slightly forward, insert the front body bar, located on the underside of the body, into the front body mount.

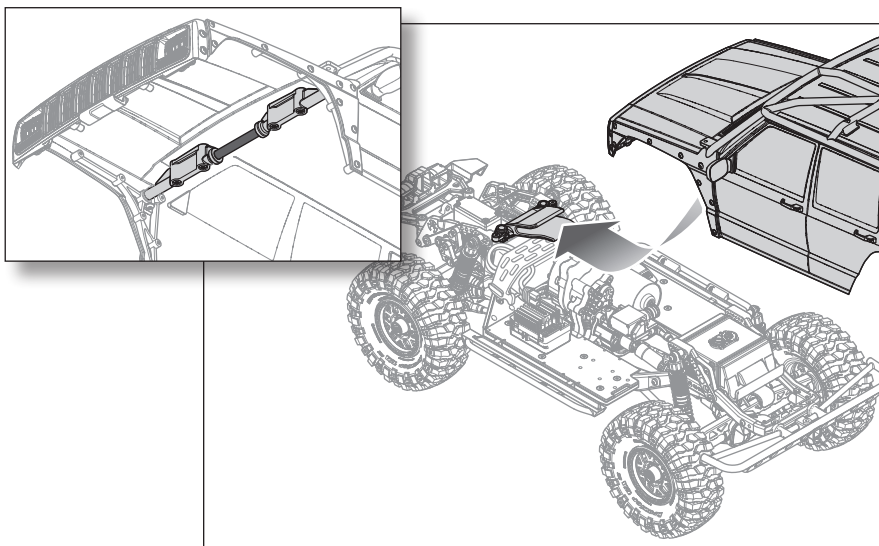

8. Push the rear of the body down over the chassis until the body latch locks.

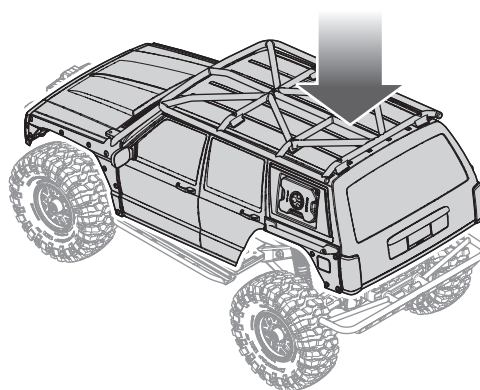

## DIG PROGRAMMING PROCEDURE

The vehicle includes a DIG transmission which allows the rear axle to lock while allowing the front wheels to spin. Use this feature in close quarters to turn the vehicle tighter than is possible with normal 4 wheel drive or to preload the suspension when needed.

To enter programming mode:


1. Hold the transmitter trigger at full forward and the transmitter steering wheel full left. Power ON the transmitter.
2. Release the transmitter trigger and steering wheel. The status light will blink every 2 seconds indicating AUX1/DIG programming mode.

To adjust normal 4WD end points:

1. Use the transmitter steering trim knob to set 4WD position. The dig shifting linkage pushes into the transmission.

To adjust the dig end point value:

1. In programming mode, hold down the A or B button.
2. Use the steering rate knob to adjust the end point.  
The end point is set correctly when the front wheels rotate and the rear wheels are locked.
3. Power OFF the vehicle and transmitter.
4. Reset the steering rate and trim to the default positions.
5. Power ON the transmitter and the vehicle.

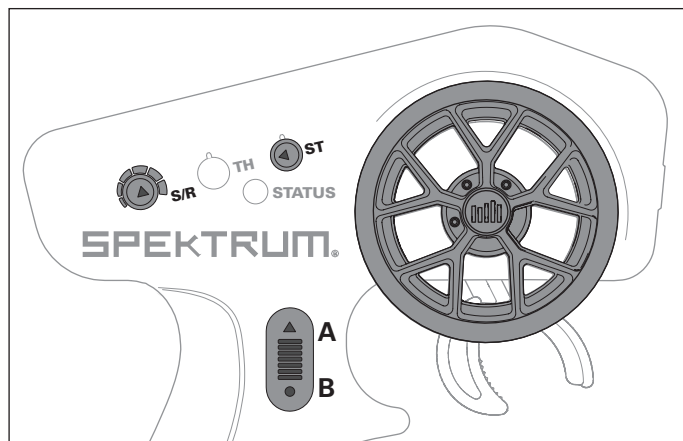

## RANGE-CHECK THE RADIO SYSTEM



The radio system should be checked before operating the vehicle to ensure proper operation and adequate range.

1. Power on the transmitter.
2. Connect the vehicle battery and power on the vehicle.
3. Have a friend hold the vehicle while keeping hands and loose clothing away from moving parts.
4. Walk away until you are at the maximum planned operating distance from the vehicle.
5. Turn the steering wheel side to side and operate the throttle, both forward and reverse, checking for any erratic behavior.
6. If any erratic behavior is exhibited, DO NOT operate the vehicle. Call customer service for assistance.




## VEHICLE MAINTENANCE


Just like a full size car or truck your RC vehicle must undergo periodic maintenance in order to ensure peak performance. Preventative maintenance will also help avoid needless breakages which could result in costly repairs. Below are some suggestions to properly maintain your vehicle.

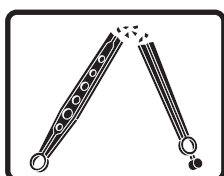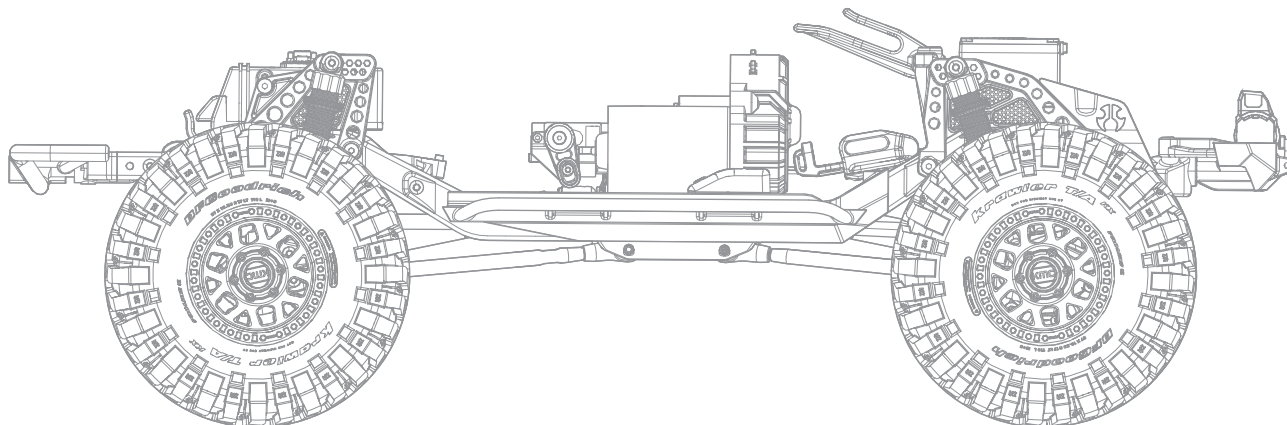


Replace any noticeably bent or broken parts

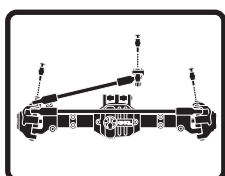


Check for wear on the ball joints in the steering and suspension links (replace if necessary)

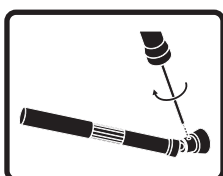


Check driveshaft set screws and apply thread locking compound if necessary

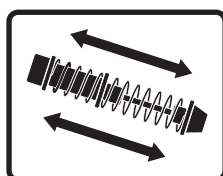


Inspect shock absorbers for smooth dampened operation

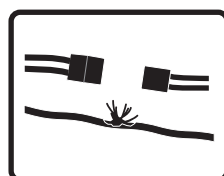


Check for any loose connections or frayed wiring

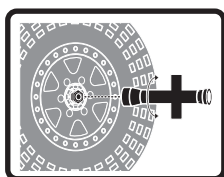


Check the wheel nuts for tightness

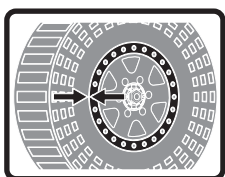


Ensure the wheel beads are still firmly bonded around the entire circumference of the rim

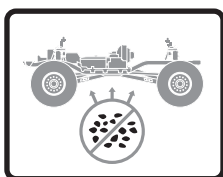


Clean the chassis of any dirt and debris

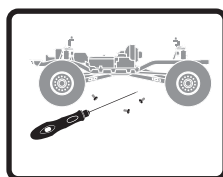


Check for loose screws on the chassis, especially the knuckle, C-hub and axle lockout screws

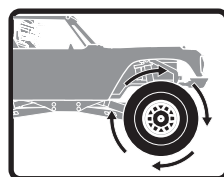


Check the driveline for smooth, bind free operation

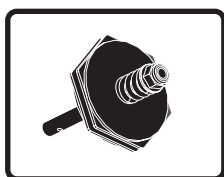


If applicable, check the slipper clutch for proper operation

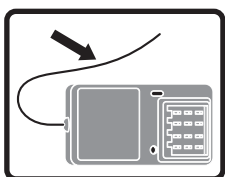


Check the receiver antenna for damage

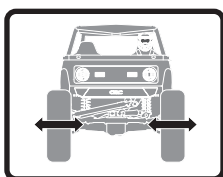

Check the steering operation for any binding

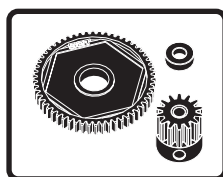

Inspect the spur and pinion gears for damage

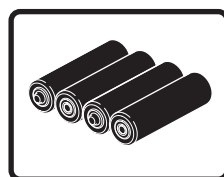

Replace the transmitter batteries when indicated by the transmitter, as described in the Transmitter Functions section


## BINDING

Binding is the process of programming the receiver to recognize the GUID (Globally Unique Identifier) code of a single specific transmitter. **The transmitter and receiver are bound at the factory.** If you need to rebind, follow the instructions below.



1. Power ON the receiver.
2. Press the bind button 3 times quickly (within 1.5 seconds of the first button press).  
The LED flashes with a pause.
3. Set the trims and control positions at the desired failsafe settings, and power ON the SLT3 transmitter.
4. When the SLT3 transmitter LED and the receiver LED remain lit, binding is complete.

You must rebind when:

- Different failsafe positions are desired (e.g., when throttle or steering reversing has changed).
- Binding the receiver to a different transmitter.

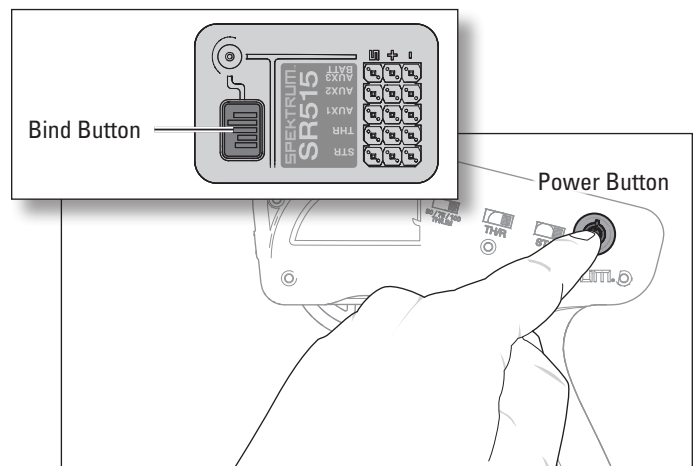

## FIRMA 40A BRUSHED ESC

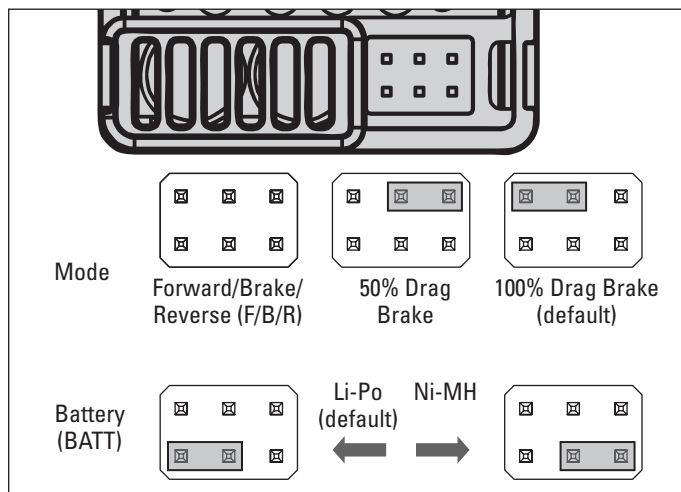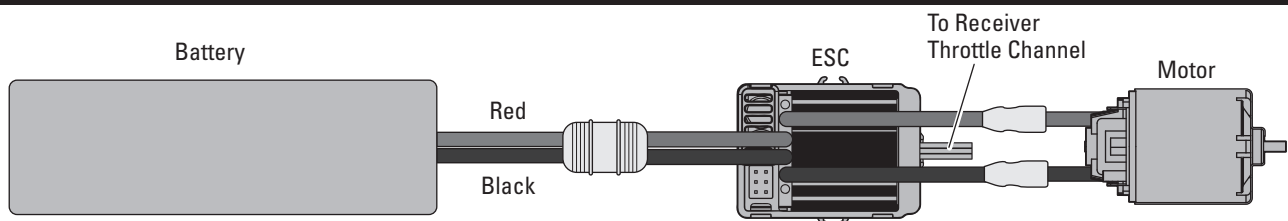

### SETUP

Throttle calibration should not be needed out of the box. However, in order to make the throttle range of different transmitters, the calibration of the ESC is necessary:

- Mount the ESC in an area that is well ventilated and isolated from vibration and shock.
- Connect the ESC motor wires to the motor red-to-red and black-to-black.
- Plug the receiver into the throttle channel of the receiver.
- Before plugging the battery into the ESC, make sure your transmitter is on and the throttle trim is set to zero.
- Connect the battery to the ESC. The vehicle will be powered on when the battery is connected.

**CAUTION:** Keep all body parts and loose clothing away from any moving parts while the battery is connected to the ESC.

**CAUTION:** Always connect the ESC only to a proper power source that has the correct voltage and polarity. Incorrect voltages or reversed polarity will damage the ESC. Damage to the ESC caused by improper voltage or polarity is not covered under warranty.

- Test forward and reverse control using the transmitter.

### SPECIFICATIONS

|                            |                                                                             |
|----------------------------|-----------------------------------------------------------------------------|
| Type                       | Brushed                                                                     |
| Constant/Peak              | 40A/180A                                                                    |
| Resistance                 | 0.002 Ohms                                                                  |
| Function                   | Forward/Brake/Reverse, Forward/Brake, Forward/Reverse (Crawler Mode)        |
| Vehicle Type               | 1/10 on-road and off-road; 1/10 rock crawler                                |
| Operation                  | Proportional forward, proportional reverse with braking delay, Crawler Mode |
| Battery Type/Input Voltage | 2–3 cell Li-Po/Li-Fe; 5–9 cell Ni-MH/Ni-Cd                                  |
| Motor Type                 | 2S Li-Po down to 12T; 3S Li-Po down to 18T                                  |
| BEC Output                 | 6V/3A                                                                       |
| Dimensions                 | 46.5mm x 34mm x 28.5mm (1.8 x 1.3 x 1.1 in)                                 |
| Weight                     | 70g (2.5 oz)                                                                |
| Battery Connector          | IC3™ connector                                                              |

### SOUND INDICATOR

| OPERATION           | SOUND         |
|---------------------|---------------|
| Ni-MH/Ni-CD Battery | 1 Short Beep  |
| 2S Li-Po Battery    | 2 Short Beeps |
| 3S Li-Po Battery    | 3 Short Beeps |
| ESC Ready           | 1 Long Beep   |

### TO CALIBRATE THE ESC:

- Power the transmitter on and set the throttle control to neutral.
- Connect the battery to the ESC and wait 3 seconds to let the ESC initiate a self-test and automatic throttle calibration.
- The ESC is ready to run when a long beep sound is emitted from the motor.
- Always disconnect the battery when the vehicle is not in use.

**IMPORTANT:** The LiPo cut-off is set to "ON" and the drag brake is set to 100% from the factory.

## TROUBLESHOOTING

| PROBLEM                                                                    | POSSIBLE CAUSE                                                                                                                                     | SOLUTION                                                                                                    |
|----------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| The system will not connect                                                | Your transmitter and receiver are too close together                                                                                               | Move transmitter 8 to 12 feet away from receiver                                                            |
|                                                                            | You are near metal objects                                                                                                                         | Move to an area with less metal                                                                             |
|                                                                            | The receiver is bound to a different model memory                                                                                                  | Make sure the correct model memory is active in your transmitter                                            |
|                                                                            | Your transmitter was placed into bind mode and is no longer bound to your receiver                                                                 | Rebind your transmitter and receiver, and then re-calibrate                                                 |
| The receiver goes into failsafe a short distance away from the transmitter | Check for damage on the receiver antenna                                                                                                           | Make sure your receiver antenna is protected and located as high as practical                               |
|                                                                            |                                                                                                                                                    | Replace the receiver or contact Horizon Product Support                                                     |
| The receiver stops responding during operation                             | Low receiver battery voltage. If the battery voltage is low, it may drop below 3.5V momentarily, causing the receiver to brown-out, then reconnect | Charge the receiver or vehicle battery. Spektrum receivers require at least 3.5V to operate                 |
|                                                                            | Loose or damaged wires or connectors between battery and receiver                                                                                  | Check the wires and connection between the battery and receiver. Repair or replace wires and/or connectors  |
| Vehicle does not move                                                      | Batteries are not installed properly in the transmitter                                                                                            | Ensure the transmitter batteries are properly installed                                                     |
|                                                                            | Weak or no battery in the vehicle                                                                                                                  | Install a freshly charged vehicle battery                                                                   |
|                                                                            | Damaged motor                                                                                                                                      | Replace the motor                                                                                           |
|                                                                            | Frayed or broken wiring                                                                                                                            | Replace any damaged wiring                                                                                  |
|                                                                            | ESC is shut down by heat protection circuit                                                                                                        | Allow the ESC to cool down completely                                                                       |
| Loss of vehicle control                                                    | Improper antenna placement                                                                                                                         | Ensure the transmitter antenna is not blocked and the receiver antenna is located properly                  |
|                                                                            | Weak or no batteries in the transmitter or vehicle                                                                                                 | Install a freshly charged vehicle battery and new transmitter batteries                                     |
|                                                                            | Neutral or trim position is incorrect                                                                                                              | Adjust the steering trim                                                                                    |
|                                                                            | Receiver and/or battery not connected properly                                                                                                     | Check all receiver and battery connections                                                                  |
| Steering and/or throttle function is reversed                              | Servo travel is reversed at the transmitter                                                                                                        | Set the transmitter servo reversing switch to the correct position                                          |
|                                                                            | Motor wires are not connected properly                                                                                                             | Check all motor wires for correct polarity and secure connection                                            |
| ESC ON - No motor function, audible tone or LED                            | Battery/connection issue                                                                                                                           | Recharge/replace battery. Secure all connections                                                            |
|                                                                            | Damaged ESC/switch                                                                                                                                 | Repair/replace ESC switch/ESC                                                                               |
|                                                                            | Damaged motor                                                                                                                                      | Repair/replace                                                                                              |
| Motor- Stops and LED blinks                                                | Low voltage protection                                                                                                                             | When the ESC LED blinks, recharge/replace battery                                                           |
|                                                                            | Overheat protection                                                                                                                                | When the LED blinks, let motor/ESC cool, change set up or gearing to avoid overheating                      |
| Motor- Accelerates irregularly                                             | Battery issue                                                                                                                                      | Repair damaged wiring/replace battery                                                                       |
|                                                                            | Incorrect gearing                                                                                                                                  | Adjust/replace gearing                                                                                      |
|                                                                            | Worn or damaged motor                                                                                                                              | Repair/replace motor                                                                                        |
| Motor- Does not turn continuously in response to throttle                  | ESC/motor damaged                                                                                                                                  | Repair/replace wiring or motor/ESC                                                                          |
| Motor- Slows but will not stop                                             | Incorrect transmitter/ESC calibration                                                                                                              | Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure |
| Steering servo- Operates; motor does not run                               | Damaged motor                                                                                                                                      | Test the motor apart from the vehicle system, repair/replace motor as needed                                |
|                                                                            | Incorrect transmitter/ESC calibration                                                                                                              | Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure |
| Steering/motor- not functioning                                            | Low battery voltage                                                                                                                                | Recharge/replace                                                                                            |
|                                                                            | Wrong model memory selected on transmitter                                                                                                         | Select correct model settings on your transmitter, refer to transmitter and/or receiver manual              |
|                                                                            | Receiver not bound to transmitter                                                                                                                  | Bind transmitter to receiver, refer to transmitter and/or receiver manual                                   |
| Vehicle- Does not operate at full speed                                    | Battery issue                                                                                                                                      | Recharge/replace                                                                                            |
|                                                                            | Incorrect transmitter/ESC calibration                                                                                                              | Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure |

LIMITED WARRANTY

What this Warranty Covers

Horizon Hobby, LLC, (Horizon) warrants to the original purchaser that the product purchased (the "Product") will be free from defects in materials and workmanship for a period of 2 years from the date of purchase.

What is Not Covered

This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations or (vii) use that violates any applicable laws, rules, or regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER'S INTENDED USE.

Purchaser's Remedy

Horizon's sole obligation and purchaser's sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law

These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services

Your local hobby store and/or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions

or assistance, please visit our website at [www.horizonhobby.com](http://www.horizonhobby.com), submit a Product Support Inquiry, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services

If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at [http://www.horizonhobby.com/content/service-center\\_render-service-center](http://www.horizonhobby.com/content/service-center_render-service-center). If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

**NOTICE:** Do not ship Li-Po batteries to Horizon. If you have any issue with a Li-Po battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements

For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service

Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of 1/2 hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website [http://www.horizonhobby.com/content/service-center\\_render-service-center](http://www.horizonhobby.com/content/service-center_render-service-center).

**ATTENTION:** Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender's choice and at the sender's expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

10/15

WARRANTY AND SERVICE CONTACT INFORMATION

| COUNTRY OF PURCHASE      | HORIZON HOBBY                                          | CONTACT INFORMATION                                                                                          | ADDRESS                                       |
|--------------------------|--------------------------------------------------------|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------|
| United States of America | Horizon Service Center (Repairs and Repair Requests)   | <a href="http://servicecenter.horizonhobby.com/RequestForm/">servicecenter.horizonhobby.com/RequestForm/</a> | 2904 Research Rd<br>Champaign, IL 61822       |
|                          | Horizon Product Support (Product Technical Assistance) | <a href="mailto:productsupport@horizonhobby.com">productsupport@horizonhobby.com</a><br>877-504-0233         |                                               |
|                          | Sales                                                  | <a href="mailto:websales@horizonhobby.com">websales@horizonhobby.com</a><br>800-338-4639                     |                                               |
|                          |                                                        |                                                                                                              |                                               |
| European Union           | Horizon Technischer Service                            | <a href="mailto:service@horizonhobby.eu">service@horizonhobby.eu</a>                                         | Hanskampring 9<br>D 22885 Barsbüttel, Germany |
|                          | Sales: Horizon Hobby GmbH                              | +49 (0) 4121 2655 100                                                                                        |                                               |

## FCC INFORMATION

FCC ID: BRWSPMSLT300

FCC ID: BRWSRIRVINGV1

This equipment complies with FCC and IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and/or antenna and your body (excluding fingers, hands, wrists, ankles and feet). This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### SUPPLIER'S DECLARATION OF CONFORMITY

#### Axial SCX10 III Jeep XJ Cherokee RTR (AXI-2037)

**FCC** This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



**CAUTION:** changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Horizon Hobby, LLC

2904 Research Rd.,

Champaign, IL 61822

Email: [compliance@horizonhobby.com](mailto:compliance@horizonhobby.com)

Web: [HorizonHobby.com](http://HorizonHobby.com)

## IC INFORMATION

CAN ICES-3 (B)/NMB-3(B)

IC: 6157A-SPMSLT300

IC: 6157A-SRIRVINGV1

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## COMPLIANCE INFORMATION FOR THE EUROPEAN UNION

### EU COMPLIANCE STATEMENT:

#### Axial SCX10 III Jeep XJ Cherokee RTR (AXI-2037):

Hereby, Horizon Hobby, LLC declares that the device is in compliance with the following: Radio Equipment Directive (RED) 2014/53/EU; Low Voltage Directive (LVD) 2014/35/EU; 2014/30/EU EMC Directive; RoHS 2 Directive 2011/65/EU; RoHS 3 Directive - Amending 2011/65/EU Annex II 2015/863.

**NOTE:** This product contains batteries that are covered under the 2006/66/EC European Directive, which cannot be disposed of with normal household waste. Please follow local regulations.

### Wireless Frequency Range and Wireless Output Power

#### Transmitter

2403.0 - 2480.0 MHz

16.3 dBm

#### Receiver

2404-2476 MHz

-1.33dBm

### EU Manufacturer of Record:

Horizon Hobby, LLC

2904 Research Road

Champaign, IL 61822 USA

### EU Importer of Record:

Horizon Hobby, GmbH

Hanskampring 9

22885 Barsbüttel Germany

### WEEE NOTICE:




This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.




**EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE**

**FRONT AXLE  
VORDERACHSE  
ESSIEU AVANT  
ASSALE ANTERIORE**

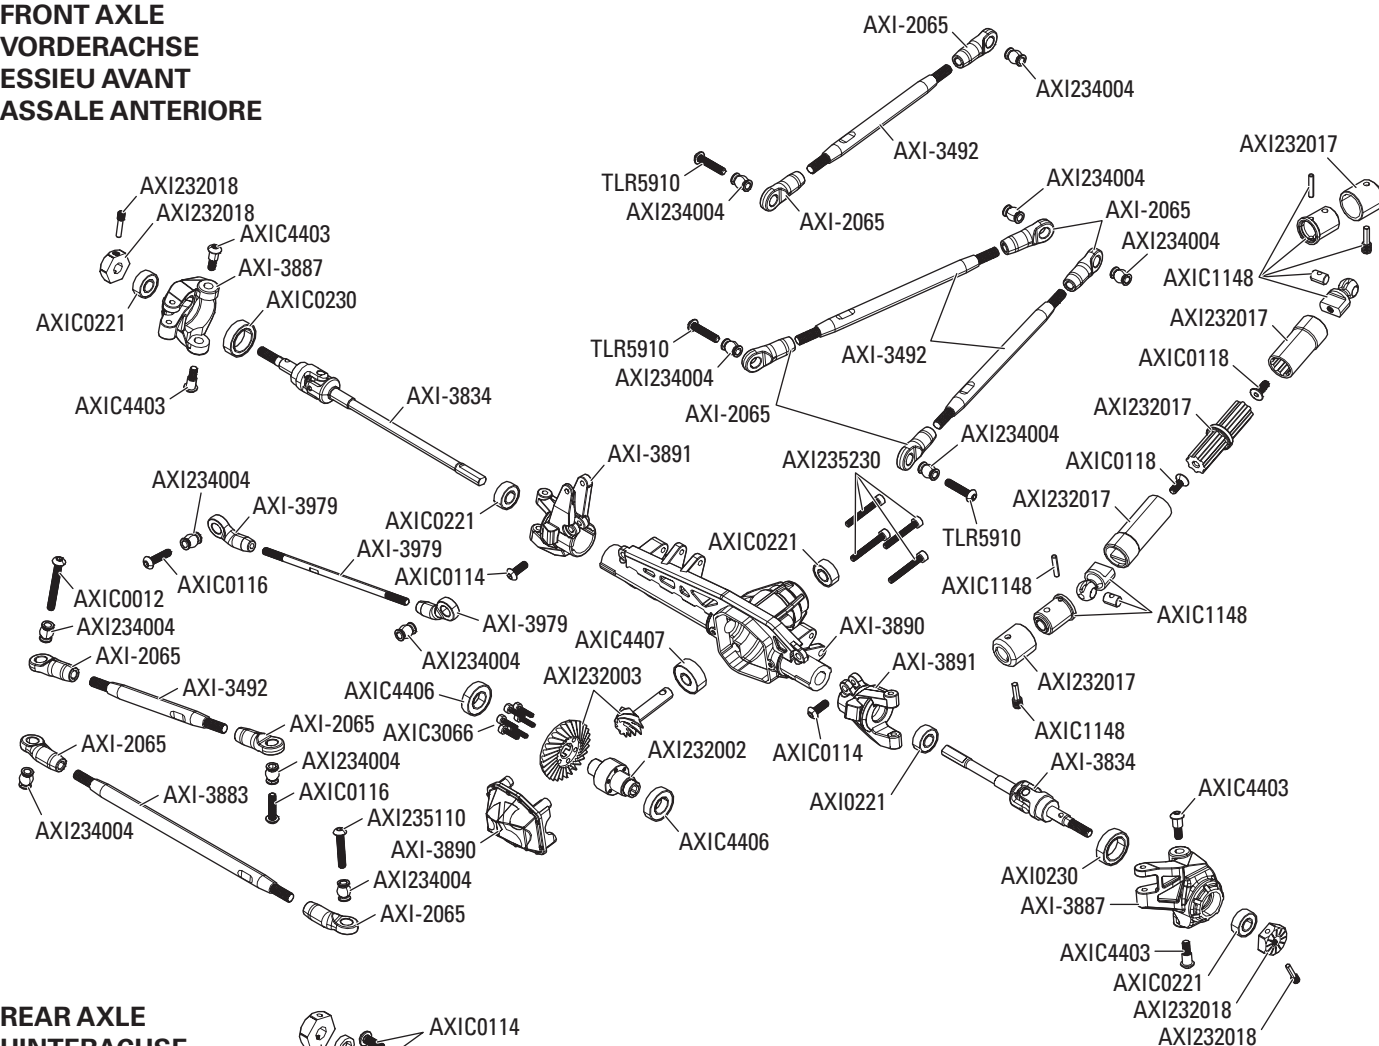


**REAR AXLE  
HINTERACHSE  
ESSIEU ARRIÈRE  
ASSALE POSTERIORE**

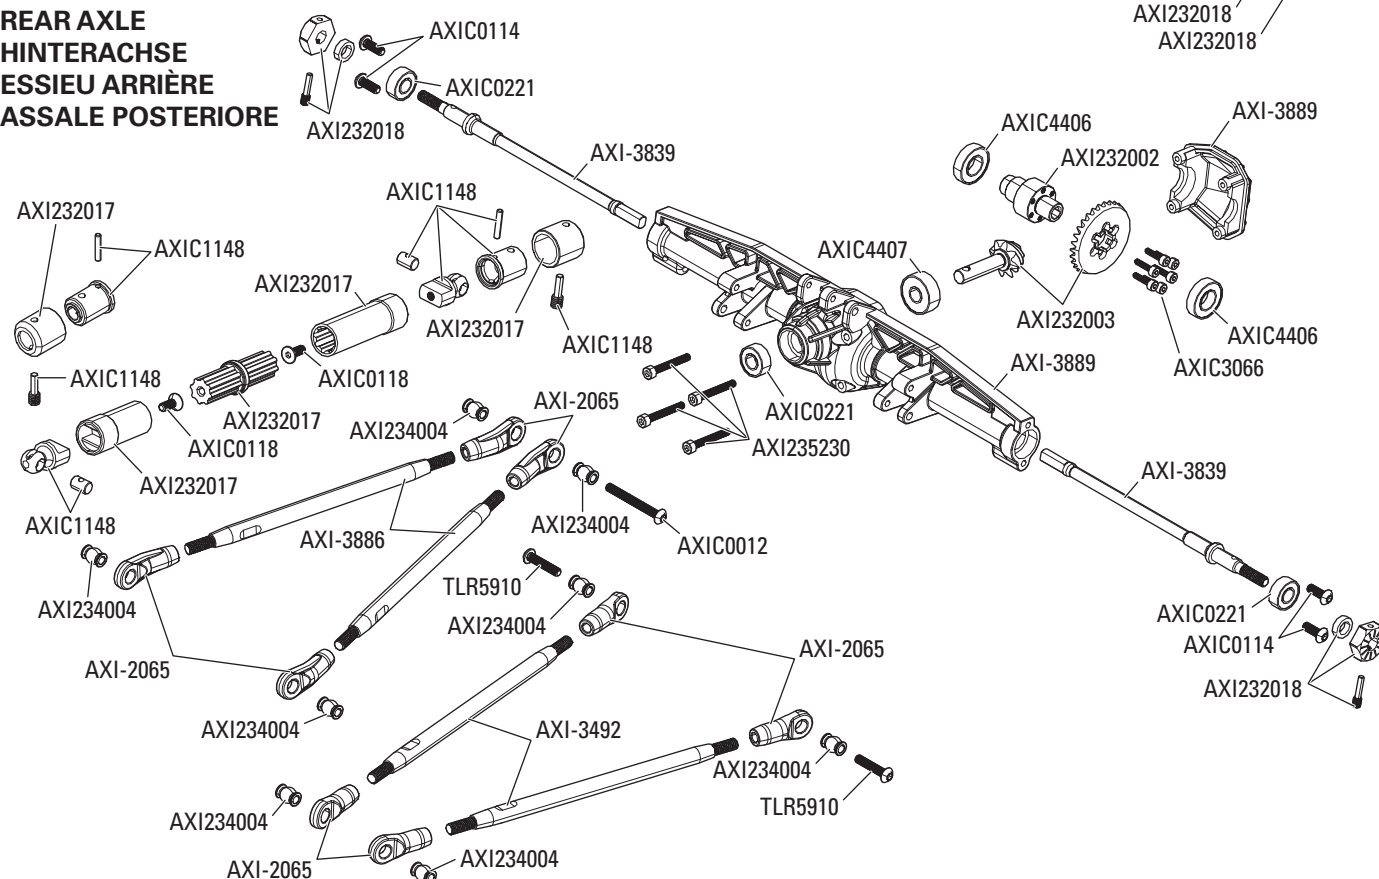


## EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE

### CHASSIS KAROSSERIE CHÂSSIS TELAIO

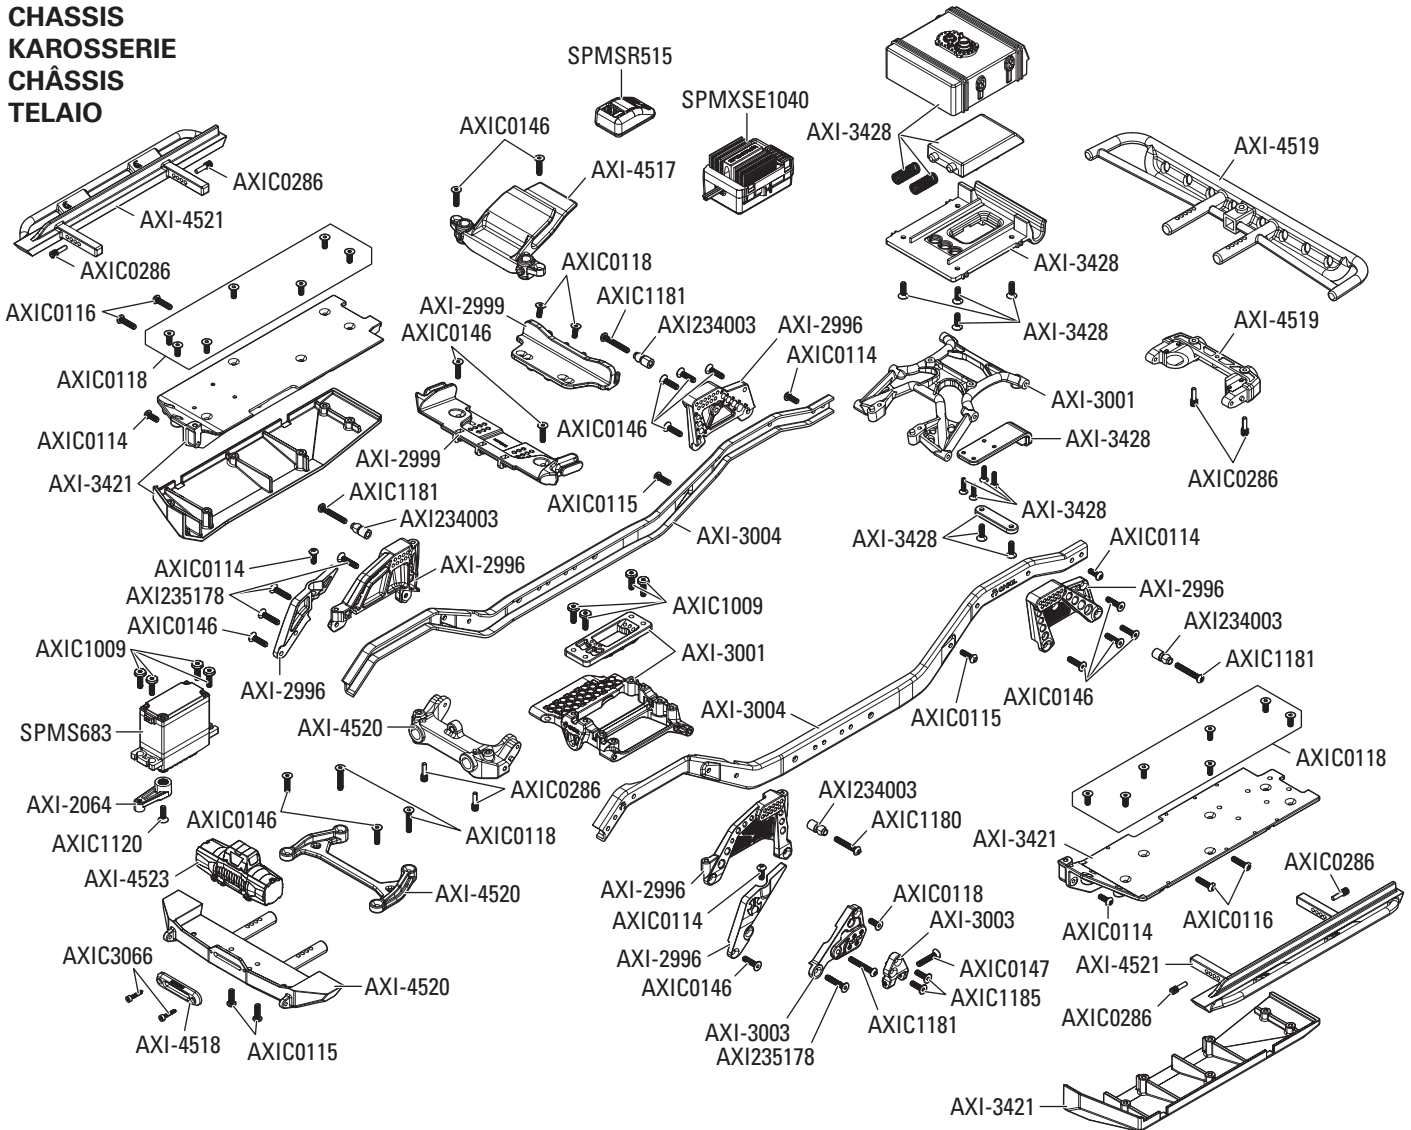


### TRANSMISSION GETRIEBE TRANSMISSION TRASMISSIONE

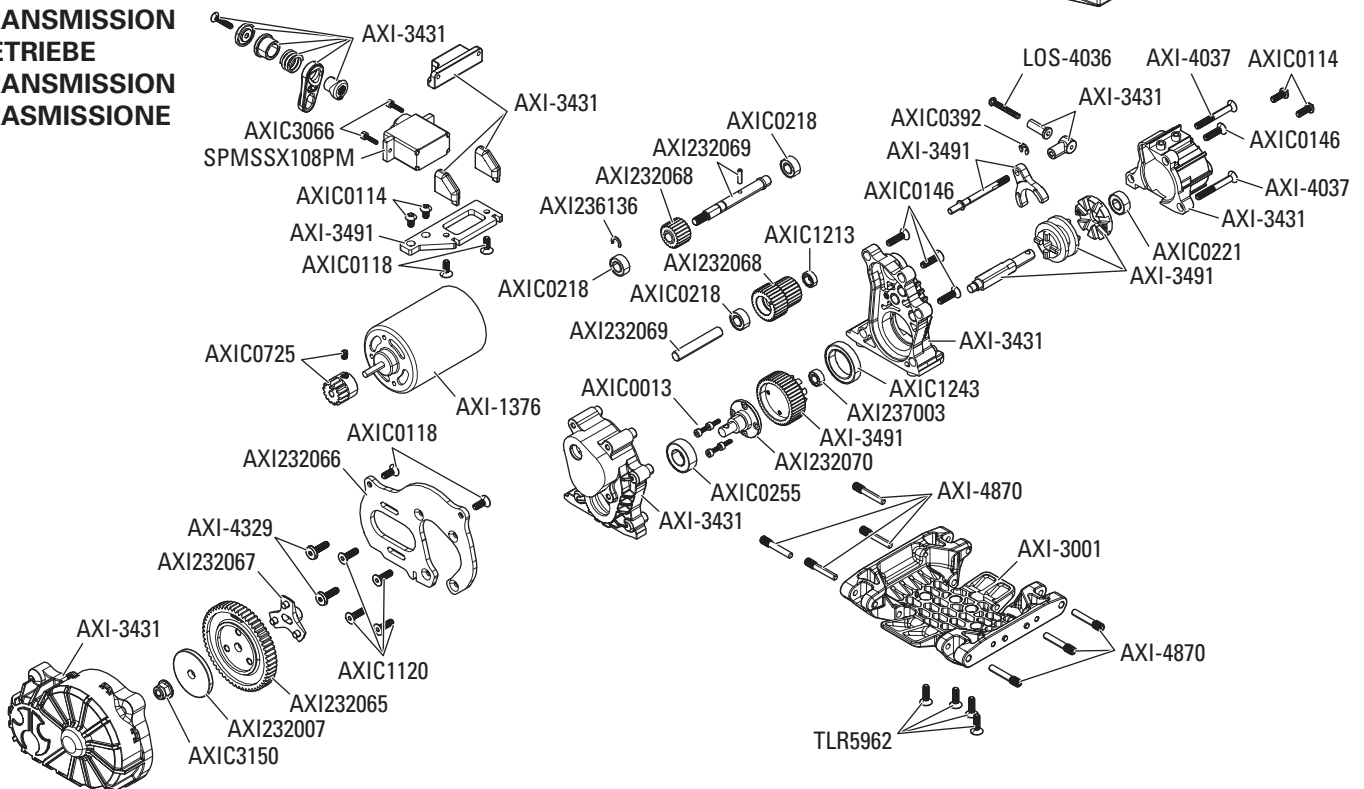


**EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE**


**WHEELS**  
**RÄDER**  
**ROUES**  
**RUOTE**

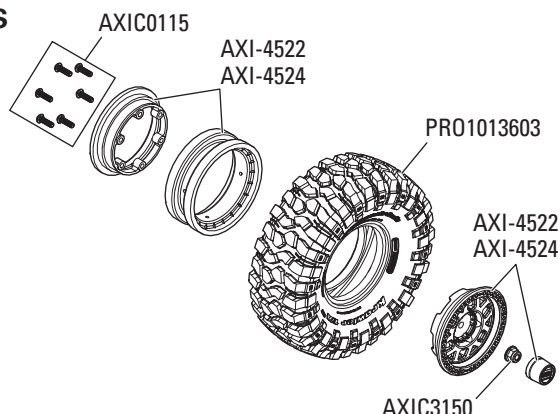

**SHOCK ABSORBERS  
STOSSDÄMPFER  
AMORTISSEURS  
AMMORTIZZATORI**

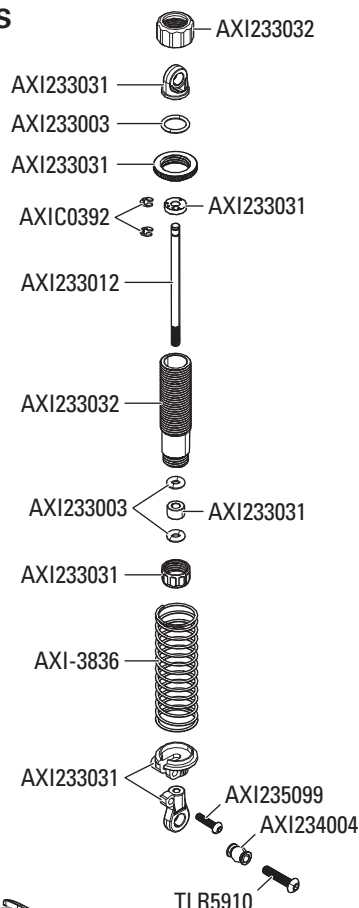

**BODY ASSEMBLY**  
**KAROSSERIEMONTAGE**  
**ENSEMBLE DE CARROSSERIE**  
**GRUPPO CARROZZERIA**

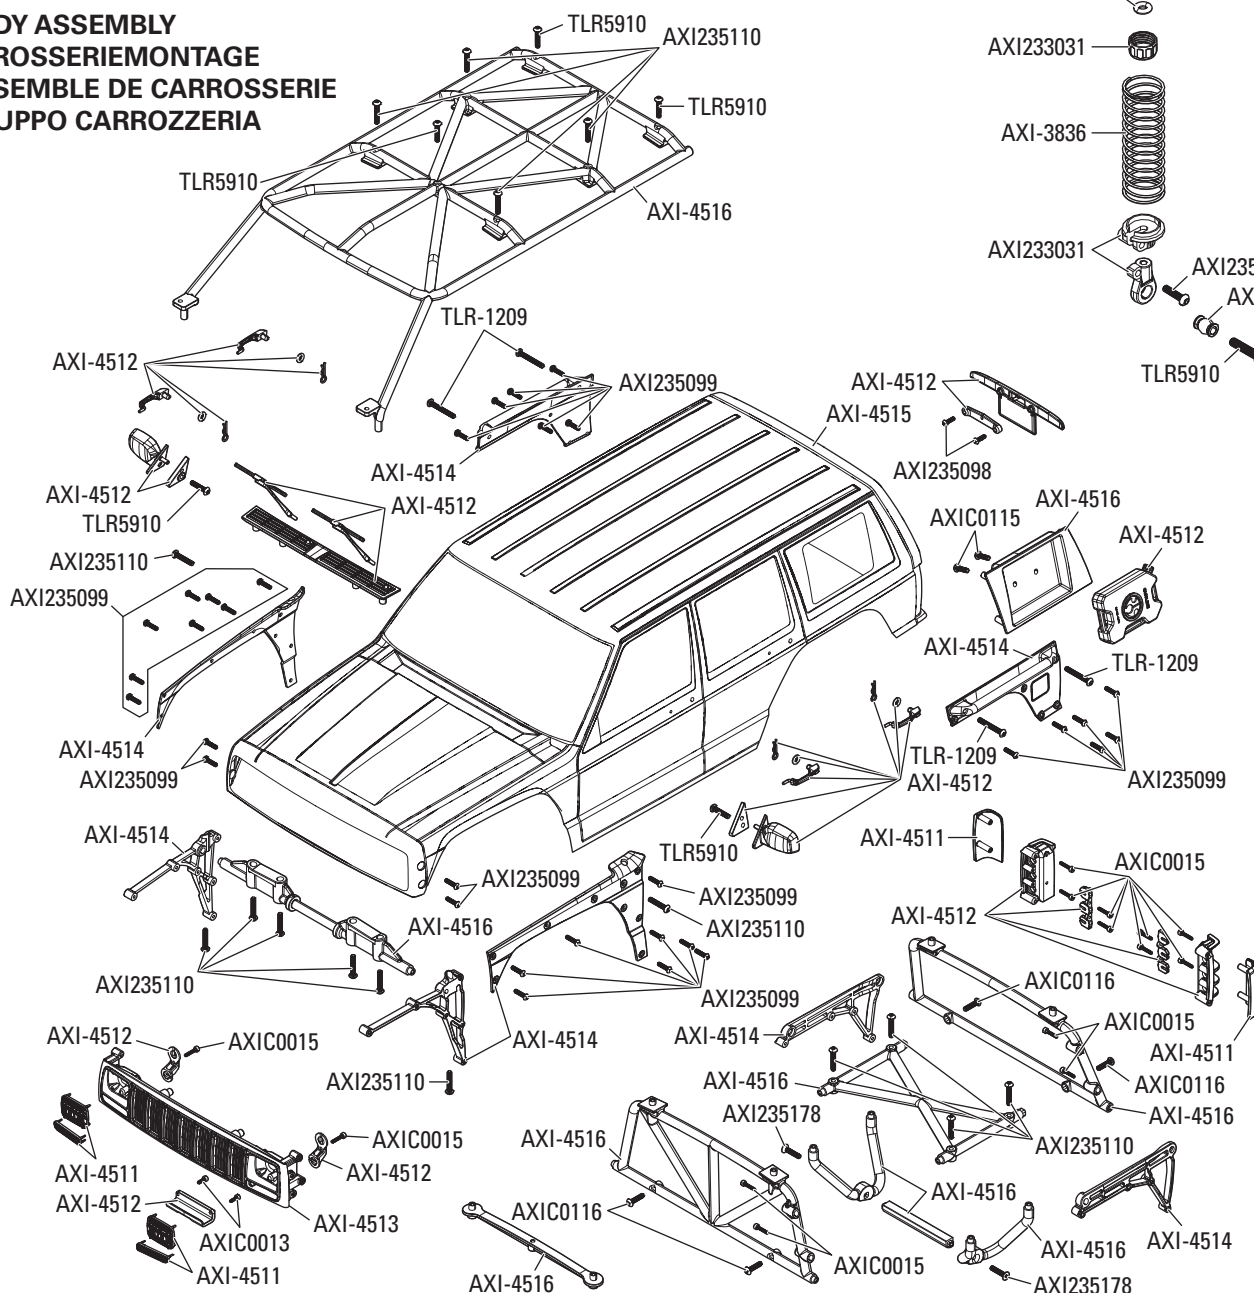

# PARTS LISTS // TEILELISTEN // LISTE DES PIÈCES // ELENCO COMPONENTI

| Part #   | Description                                        | Beschreibung                                                   | Description                                                            | Descrizione                                                                 |
|----------|----------------------------------------------------|----------------------------------------------------------------|------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| AXI-1376 | 35-Turn 540 Brushed Motor                          | 35T 540 Bürstenmotor                                           | Moteur à balais 35T 540                                                | Motore a spazzole 35T 540                                                   |
| AXI-2064 | Servo Horn Metal, 25T: SCX10 III                   | Servo-Horn, Metall 25T                                         | Renvoi de commande de servo, métallique, 25T                           | Squadretta servo metallo, 25T                                               |
| AXI-2065 | HD Rod Ends M4 (20): Capra 1.9 UTB                 | HD Stangenkopf M4 (20)                                         | Embouts de bielle HD M4 (20)                                           | Teste a snodo HD M4 (20)                                                    |
| AXI-2996 | Shock Towers with Supports, FR/R: SCX10 III HP     | Stoßdämpferbrücke und Panhard-Halterungen, FR/RR: SCX10 III HP | Tours d'amortisseurs et montages Panhard, avant/arrière : SCX10 III HP | Torri ammortizzatori e supporti Panhard, anteriore/posteriore: SCX10 III HP |
| AXI-2997 | Bumper Set Front, Rear HP: SCX10 III               | Stoßstangensatz Front/Heck HP: SCX10 III                       | Ensemble de pare-chocs avant, arrière HP : SCX10 III                   | Kit paraurti ant./post. HP: SCX10 III                                       |
| AXI-2999 | Adjustable Battery Tray Set: SCX10 III HP          | Einstellbarer Akkufach-Satz: SCX10 III HP                      | Ensemble de batterie standard ajustable : SCX10 III HP                 | Set vassoio batteria regolabile: SCX10 III HP                               |
| AXI-3001 | Servo Mount, Skid, Cross Members: SCX10 III HP     | Servo-Halterung, Kufe, Querträger: SCX10 III HP                | Support de servo, patin, traverses : SCX10 III HP                      | Supporto servo, pattino, traverse: SCX10 III HP                             |
| AXI-3003 | Adjustable Pan Hard Mount: SCX10 III               | Verstellbare Panhard-Halterungen                               | Montage Panhard réglable                                               | Supporto Panhard regolabile                                                 |
| AXI-3004 | One Piece Frame Rail Set: SCX10 III                | Einteiliger Rahmenschienensatz: SCX10 III                      | Ensemble de rails de cadre en une pièce : SCX10 III                    | Set longeroni telaio in un unico pezzo: SCX10 III                           |
| AXI-3431 | LCXU Transmission Case & Dig Parts: SCX10III       | LCXU-Getriebeabdeckung und Dig-Teile                           | Boîtier de transmission et pièces dig LCXU                             | Scatola trasmissione e parti Dig LCXU                                       |
| AXI-3491 | LCXU Dig Internals V2: SCX10III                    | LCXU Dig Interna V2                                            | Pièces internes dig LCXU V2                                            | LCXU Dig Internals V2                                                       |
| AXI-3492 | F/R Link Set SR5: SCX10III                         | F/R-Verbindungssatz                                            | Ensemble de liens A/A                                                  | Set leveraggi Av./Ind.                                                      |
| AXI-3834 | AR45 Universal Axles (2): SCX10 III                | AR45 Universalachsensatz (2)                                   | Ensemble essieu universel AR45 (2)                                     | Set assali universali AR45 (2)                                              |
| AXI-3839 | AR45 Straight Axles (2): SCX10 III                 | AR45P gerader Achsensatz (2)                                   | Ensemble essieu droit AR45 (2)                                         | Set assali dritti AR45 (2)                                                  |
| AXI-3881 | Spring, 13x70mm, 0.72lbs/in, Purple Extra Soft (2) | Feder, 13 x 70mm 0,72lbs/in, Lila Extra Weich (2)              | Ressort, 13 x 70 mm, 0,72 lb/po, violet extra-souple (2)               | Molle, 13x70 mm, 0,72 lb/in, Viola, extra morbide (2)                       |
| AXI-3883 | Steering Links, Stainless Steel: SCX10 III Std Axl | Spurstangen, Edelstahl                                         | Tringleries de direction en acier inoxydable                           | Braccetti sterzo, acciaio inox                                              |
| AXI-3886 | M6 x 106mm Links, Stainless Steel (2): SCX10 III   | Edelstahlglieder M6 x 106mm (2)                                | Liaisons en acier inoxydable M6 x 106 mm (2)                           | Braccetti acciaio inox M6x106 mm (2)                                        |
| AXI-3887 | AR45 Steering Knuckle, L/R: SCX10 III              | AR45 Lenkrolle, L/R                                            | Rotule de direction AR45, G/D                                          | Fusi a snodo AR45, SX/DX                                                    |
| AXI-3889 | AR45 Axle Housing w/Diff Cover, Rear: SCX10 III    | AR45 Achsgehäuse mit Differentialabdeckung, Heck               | Carter d'essieu AR45 avec cache de différentiel, arrière               | Alloggiamento assale AR45 con carter differenziale, posteriore              |
| AXI-3890 | AR45 Axle Housing w/Diff Cover, Front: SCX10 III   | AR45 Achsgehäuse mit Differentialabdeckung, Front              | Carter d'essieu AR45 avec cache de différentiel, avant                 | Alloggiamento assale AR45 con carter differenziale, anteriore               |
| AXI-3891 | AR45 C-Hub, L/R: SCX10                             | AR45 C-Nabe, L/R                                               | Moyeu de support AR45, G/D                                             | Portafuso a C AR45 SX/DX                                                    |
| AXI-3979 | Panhard Bar and Rod Ends: SCX10 III Builders Kit   | Panhardstab und Stangenenden: SCX10III Einbausatz              | Barre Panhard et embouts de bielle : Kit de construction SCX10III      | Barra Panhard Bar e teste a snodo: SCX10III Builders Kit                    |
| AXI-4329 | Hex Socket Oversize Head 3x8mm (10)                | Sechskant-Zylinderkopf in Übergröße M3 x 8 mm (10)             | Douille à six pans à tête bombée 3 x 8 mm (10)                         | Vite a testa maggiorata con esagono interno 3x10 mm (10)                    |
| AXI-4511 | Headlight, Taillight Lens Set: SCX10 III XJ        | Frontscheinwerfer, Rückleuchten, Linsenset: SCX10 III XJ       | Jeu de lentilles de phares et de feux arrière : SCX10 III XJ           | Set di lenti per fari e fanali: SCX10 III XJ                                |
| AXI-4512 | Body Detail Set: SCX10 III XJ                      | Gehäusedetail-Satz: SCX10 III XJ                               | Ensemble de détails de carrosserie : SCX10 III XJ                      | Set dettagli carrozzeria: SCX10 III XJ                                      |
| AXI-4513 | Grille Set: SCX10 III XJ                           | Kühlergrill-Set: SCX10 III XJ                                  | Ensemble de calandres : SCX10 III XJ                                   | Set griglia: SCX10 III XJ                                                   |
| AXI-4514 | Body Armor & Mounts: SCX10 III XJ                  | Gehäuse-Rüstungen und -halterungen: SCX10 III XJ               | Supports et blindage de carrosserie : SCX10 III XJ                     | Protezioni carrozzeria e supporti: SCX10 III XJ                             |
| AXI-4515 | Body & Decal Set, Clear: SCX10 III XJ              | Gehäuse- und Decal-Satz, farblos: SCX10 III XJ                 | Ensemble autocollants et carrosserie, transparent : SCX10 III XJ       | Set carrozzeria e decalcomanie, trasparente: SCX10 III XJ                   |
| AXI-4516 | Body Mount & Cage Set: SCX10 III XJ                | Gehäusehalterung & Überrollkäfig-Satz: SCX10 III XJ            | Ensemble cage et support de carrosserie : SCX10 III XJ                 | Set supporto carrozzeria e roll cage: SCX10 III XJ                          |
| AXI-4517 | Body Mount, Chassis, Front: SCX10 III XJ           | Gehäusehalterung, Karosserie, vorne: SCX10 III XJ              | Support de carrosserie, châssis, avant : SCX10 III XJ                  | Supporto carrozzeria, telaio, anteriore: SCX10 III XJ                       |
| AXI-4518 | Factor 55 Hawse Fairlead, 1": SCX10 III XJ         | Factor 55 Hawse Fairlead, 1": SCX10 III XJ                     | Guide-câble Hawse Factor 55, 1 po : SCX10 III XJ                       | Guida cavo Factor 55 Hawse, 1": SCX10 III XJ                                |
| AXI-4519 | Rear Bumper Set: SCX10 III XJ                      | Stoßstangensatz hinten: SCX10 III XJ                           | Ensemble de pare-chocs arrière : SCX10 III XJ                          | Set paraurti posteriore: SCX10 III XJ                                       |

| Part #    | Description                                        | Beschreibung                                        | Description                                                     | Descrizione                                                   |
|-----------|----------------------------------------------------|-----------------------------------------------------|-----------------------------------------------------------------|---------------------------------------------------------------|
| AXI-4520  | DirtBound Front Bumper Set: SCX10 III XJ           | DirtBound Stoßstangensatz, Front: SCX10 III XJ      | Ensemble de pare-chocs avant DirtBound : SCX10 III XJ           | Set paraurti anteriore DirtBound: SCX10 III XJ                |
| AXI-4521  | DirtBound Rock Slider Set: SCX10 III XJ            | DirtBound Rock-Schieber-Satz: SCX10 III XJ          | Ensemble de bas de caisse DirtBound : SCX10 III XJ              | Set Rock Slider DirtBound: SCX10 III XJ                       |
| AXI-4523  | Warn EVO 10S Faux Winch: SCX10 III XJ              | Warn EVO 10S Seilwinden-Attrappe: SCX10 III XJ      | Treuil factice Warn EVO 10S : SCX10 III XJ                      | Verricello finto Warn EVO 10S: SCX10 III XJ                   |
| AXI-4524  | 1.9" KMC Mesa Beadlock Wheels, Satin Chrome (2)    | 1.9" KMC Mesa Beadlock-Räder, matt verchromt (2)    | Roues 1,9 po à verrou de talon KMC Mesa, chrome satiné (2)      | Cerchi 1.9" KMC Mesa Beadlock, Satinati (2)                   |
| AXI232002 | AR44 6-Bolt Differential Locker                    | 6-Schrauben-Differenzial-Sicherung                  | Blocage différentiel à 6 boulons                                | Blocco differenziale 6 bulloni                                |
| AXI232003 | 6 Bolt Heavy Duty Gear Set                         | 6-Schrauben-Schwerlast-Zahnradatz                   | Ensemble d'engrenages haute résistance à 6 boulons              | Set ingranaggio impieghi gravosi 6 bulloni                    |
| AXI232007 | 32P Portal Gear Set, 23T/12T (2 pieces each)       | 32P Portalachssatz, 23T/12T (jeweils 2 Stck)        | Ensemble d'engrenages de portique 32P 23T/12T (2 pièces chacun) | Set ingranaggi Portal 32P, 23T/12T (2 pezzi ciascuno)         |
| AXI232017 | WB Driveshaft Set: Capra 1.9 UTB                   | Wild Boar-Antriebswellensatz                        | Ensemble d'arbres de transmission Wild Boar                     | Set albero di trasmissione Wild Boar                          |
| AXI232018 | 12mm Hex Screw Shaft & Spacer (4): Capra 1.9 UTB   | 12-mm-Sechskantstift und Abstandhalter (4): UTB     | Broche hexagonale 12mm et entretoise (4) : UTB                  | Distanziale e perno esagonale 12mm (4): UTB                   |
| AXI232064 | Gear Cover & Transmission Housings: LCXU           | Fahrwerkabdeckung und Getriebegehäuse               | Cache d'engrenage et boîtes de transmission                     | Carter ingranaggi e alloggiamenti trasmissione                |
| AXI232065 | Spur Gear, 56T 32P: LCXU                           | Stirnrad, 56T, 32P: LCXU                            | Engrenage roue droite, 56T, 32P : LCXU                          | Corona, 56T, 32P: LCXU                                        |
| AXI232066 | Motor Plate: LCXU                                  | Motorplatte                                         | Plaque moteur                                                   | Piastra motore                                                |
| AXI232067 | Slipper Eliminator Hub & Plate: LCXU               | Gleiter-Eliminator-Nabe und -Platte                 | Moyeu et plaque de sabot éliminateur                            | Piastra e mozzo sostitutivi della frizione antisaltellamento  |
| AXI232068 | Transmission Metal Gear Set: LCXU                  | Metallgetriebesatz                                  | Ensemble de boîte de transmission métallique                    | Set ingranaggio in metallo trasmissione                       |
| AXI232069 | Transmission Shaft Set: LCXU                       | Getriebewellensatz                                  | Ensemble d'arbre de transmission                                | Set albero trasmissione                                       |
| AXI232070 | Transmission Center Output Shaft: LCXU             | Getriebe-Mittelantriebswelle                        | Arbre de sortie de transmission centrale                        | Albero di uscita centrale della trasmissione                  |
| AXI233003 | Shock O-Ring Set: Capra 1.9 UTB, SCX10III BaseCamp | O-Ring-Satz für den Stoßdämpfer: UTB                | Ensemble de joints toriques d'amortisseur : UTB                 | Set O-Ring ammortizzatore: UTB                                |
| AXI233012 | Shock Shaft M3x50mm (2pc):SCX10III                 | Stoßdämpferkolbenstange M3 x 50mm (2)               | Tiges d'amortisseur M3 x 50mm (2)                               | Alberino ammort., M3 x 50mm (2)                               |
| AXI233031 | Shock Parts, Composite: SCX10 III BC               | Stoßdämpferteile, Verbundwerkstoff                  | Composites des pièces de l'amortisseur                          | Parti ammortizzatori, composito                               |
| AXI233032 | Aluminum Shock Body, 11 x 39.5mm: SCX10 III BC     | Gewinde-Stoßdämpfergehäuse Alum 11 x 39,5 mm        | Corps d'amortisseur fileté aluminium 11 x 39,5 mm               | Scocca ammortizzatore filettata in alluminio 11x39,5 mm       |
| AXI234004 | Susp Pivot Ball, Stainless Steel 7.5mm (10pc)      | Kugelzapfen für Federung, Edelstahl 7,5 mm (10)     | Rotule de suspension, acier inoxydable 7,5 mm (10)              | Pivot ball suspensioni, acciaio inox 7,5 mm (10)              |
| AXI235099 | M2.5 x 10mm Button Head Screw (10)                 | Rundkopfschraube, M2,5x10mm (10)                    | Vis à tête bombée, M2,5x10mm (10)                               | Vite a testa tonda M2,5x10mm (10)                             |
| AXI235230 | M2.5 x 18mm Cap Head Screws (10)                   | Inbusschraube, M2,5 x 18mm (10)                     | Vis d'assemblage creuse, M2,5 x 18mm (10)                       | Vite a testa cilindrica M2,5 x 18mm (10)                      |
| AXI236136 | C-Clip, 5mm (10)                                   | C-Clips, 5 mm (10)                                  | Clip en C, 5 mm (10)                                            | C-clip, 5 mm (10)                                             |
| AXI237003 | 4mm x 8mm x 3mm Ball Bearing (2)                   | 4x8x3mm Kugellager (2)                              | Roulement 4x8x3mm (2)                                           | Cuscinetti 4x8x3mm (2)                                        |
| AXIC0012  | Hex Socket Button Head M3x25mm Black (10)          | M3 x 25 mm Sechskant-Rundkopfschraube, Schwarz (10) | Vis à tête bombée creuse hexagonale M3 x 25 mm, noire (10)      | Vite a testa bombata cava esagonale M3x25 mm, Nero (10)       |
| AXIC0013  | Cap Head M2x6mm Black Oxide (10)                   | M2 x 6 mm, Inbusschrauben (10)                      | Vis d'assemblage creuse, M2 x 6 mm (10)                         | Viti testa cilindrica M2 x 6 mm (10)                          |
| AXIC0016  | AXA016 Cap Head M2x12mm Black Oxide (10)           | M2 x 12 mm, Inbusschraube (10)                      | Vis d'assemblage creuse, M2 x 12 mm (10)                        | Viti testa cilindrica M2 x 12 mm (10)                         |
| AXIC0114  | Hex Socket Button Head 3x8mm (10)                  | M3 x 8 mm Sechskant-Rundkopf, Schwarzoxid (10)      | Douille à six pans à tête bombée M3 x 8 mm, brunie (10)         | Vite a testa bombata cava esagonale M3x8 mm, Nero ossido (10) |
| AXIC0116  | Hex Socket Button Head M3x12mm Black (10)          | M3 x 12 mm Sechskant-Rundkopf, Schwarz (10)         | Douille à six pans à tête bombée M3 x 12 mm, noire (10)         | Vite a testa bombata cava esagonale M3x12 mm, Nero (10)       |
| AXIC0118  | Hex Flat Head M3X8mm Black (10)                    | Sechskant-Flachkopfschraube M3 x 8 mm Schwarz (10)  | Vis à tête plate hexagonale M3 x 8 mm, noire (10)               | Vite a testa svasata cava esagonale M3x8 mm, Nero (10)        |

| Part #      | Description                                          | Beschreibung                                                               | Description                                                               | Descrizione                                                      |
|-------------|------------------------------------------------------|----------------------------------------------------------------------------|---------------------------------------------------------------------------|------------------------------------------------------------------|
| AXIC0146    | Hex Socket Flat Head M3x12mm Black (10)              | M3 x 12 mm Sechskant-Flachkopfschraube, Schwarz (10)                       | Vis à tête plate creuse hexagonale M3 x 12 mm, noire (10)                 | Vite a testa svasata cava esagonale M3x12 mm, Nero (10)          |
| AXIC0147    | Hex Socket Flat Head M3x16mm, Black (10)             | M3 x 16 mm Sechskant-Flachkopfschraube, Schwarz (10)                       | Douille à six pans à tête plate M3 x 16 mm, noire (10)                    | Vite a testa svasata cava esagonale M3x16 mm, Nero (10)          |
| AXIC0218    | Bearing 5x10x4mm (2)                                 | Lager 5 x 10 x 4 mm (2)                                                    | Roulement 5 x 10 x 4 mm (2)                                               | Cuscinetti 5x10x4 mm (2)                                         |
| AXIC0221    | Bearing 5x11x4mm (2)                                 | Lager 5 x 11 x 4 mm (2)                                                    | Roulement 5 x 11 x 4 mm (2)                                               | Cuscinetto 5x11x4 mm (2)                                         |
| AXIC0230    | Bearing 10x15x4mm                                    | Lager 10 x 15 x 4 mm                                                       | Roulement 10 x 15 x 4 mm                                                  | Cuscinetto 10x15x4 mm                                            |
| AXIC0286    | Screw Shaft M4x2.5x12mm (6)                          | Schraubenschaft M4 x 2,5 x 12 mm (6)                                       | Tige de vis M4 x 2,5 x 12 mm (6)                                          | Albero filettato M4x2.5x12 mm (6)                                |
| AXIC0392    | AXA1392 E-Clip E2 (10)                               | E-Clip E2 (10)                                                             | Attache en E E2 (10)                                                      | E-Clip E2 (10)                                                   |
| AXIC1009    | Hex Socket Oversize Head 3x10mm (10)                 | M3 x 10 mm Übergröße-Flachkopf (10)                                        | Tête surdimensionnée creuse hexagonale 3 x 10 mm (10)                     | Vite con testa esagonale maggiorata 3x10 mm (10 pezzi)           |
| AXIC1120    | Hex Socket Flat Head 3x10mm (10)                     | M3 x 10 mm Sechskant-Flachkopf, Schwarz (10)                               | Douille à six pans à tête plate M3 x 10 mm, noire (10)                    | Viti testa piatta es. inc. M3 x 10 mm nero (10)                  |
| AXIC1148    | AX31148 WB8-HD Driveshaft Coupler Set Yeti           | WB8-HD-Antriebswellenkupplungssatz Yeti                                    | Ensemble de couplage d'arbre de transmission Yeti WB8-HD                  | Set accoppiamento albero trasmissione WB8-HD Yeti                |
| AXIC1180    | Hex Socket Button Head M3x18mm (10)                  | Sechskant-Rundkopfschraube M3 x 18 mm (10)                                 | Vis à tête bombée creuse hexagonale M3 x 18 mm (10)                       | Vite testa bombata cava esagonale M3x18 mm (10)                  |
| AXIC1181    | Hex Socket Button Head M3x20mm (10)                  | Sechskant-Rundkopfschraube M3 x 20 mm (10)                                 | Douille à six pans à tête bombée M3 x 20 mm (10)                          | Vite testa bombata cava esagonale M3x20 mm (10)                  |
| AXIC1185    | AX31185 M3x10mm Hex Socket Flat Head (10)            | M3 x 10 mm Sechskant-Flachkopf (10)                                        | Douille à six pans à tête plate M3 x 10 mm (10)                           | Viti testa piatta es. inc. M3 x 10 mm (10)                       |
| AXIC1213    | Bearing 5x8x2.5mm (2)                                | Lager 5 x 8 x 2,5 mm (2)                                                   | Roulement 5 x 8 x 2,5 mm (2)                                              | Cuscinetto 5x8x2,5mm (2)                                         |
| AXIC1243    | Bearing 15x21x4mm (2)                                | Lager 15 x 21 x 4 mm (2)                                                   | Roulement 15 x 21 x 4 mm (2)                                              | Cuscinetto 15 x 21 x 4 mm (2)                                    |
| AXIC3066    | Cap Head M2x8mm Black (10)                           | Inbusschraube M2 x 8 mm Schwarz (10)                                       | Vis d'assemblage creuse M2 x 8 mm, noire (10)                             | Vite a testa cilindrica M2x8 mm, Nero (10)                       |
| AXIC3150    | Serrated Nylon Lock Nut Black 4mm (10)               | Nylon-Feststellflanschmutter, 4mm, Schwarz (10)                            | Contre-écrou en nylon strié 4 mm (10)                                     | Dado di bloccaggio in nylon zigrinato 4 mm, Nero (10)            |
| AXIC4403    | M3x4x10mm Hex Button Head Shoulder Screw (6)         | Sechskant-Pass-Schultererschraube M 3 x 4 x 10mm (6)                       | Vis à épaulement à six pans creuse à tête bombée M3 x 4 x 10 mm (6)       | Vite a brugola testa bombata spalla liscia M3x4x10mm (6)         |
| AXIC4406    | Bearing 7x14x3.5mm (2)                               | Lager 7 x 14 x 3,5 mm (2)                                                  | Roulement 7 x 14 x 3,5 mm (2)                                             | Cuscinetto 7x14x3,5 mm (2)                                       |
| AXIC4407    | Bearing 5x14x5mm (2)                                 | Lager 5 x 14 x 5 mm (2)                                                    | Roulement 5 x 14 x 5 mm (2)                                               | Cuscinetto 5x14x5 mm (2)                                         |
| LOS-4037    | Hex Socket Flat Head M3x25mm Black Oxide (10)        | M3 x 25 mm Sechskant-Flachkopf, Schwarz (10)                               | Douille à six pans à tête plate M3 x 25 mm, noire (10)                    | Viti testa piatta es. inc. M3 x 25 mm nero (10)                  |
| PRO1013603  | BFG Krawler T/A KX 1.9 Predator Tires F/R            | BFGKrwlrTA KX 1,9Prdtr Reifen FR                                           | Pneus Predator 1,9 KX BFG Krawler TA avant                                | BFG Krawler TA KX 1.9 Prdtr Av/Pst                               |
| SPMRSLT380  | SLT3 3CH 2.4Ghz Transmitter Only - Axial Programming | Nur SLT3 3-Kanal SLT-Sender                                                | Émetteur SLT à 3 canaux SLT3 uniquement                                   | SLT3 3 canali solo trasmittente                                  |
| SPMS683     | S683 Steel Gear Servo 25T, WP                        | 683 Standard Wasserdichtes Metallgetriebe Servo 25T                        | Servo étanche à engrenages métalliques standard 683 25T                   | Servo 683 impermeabile standard con ingranaggi in metallo 25T    |
| SPMSR515    | SR515 DSMR 5 CH Receiver                             | DSMR-Sportempfänger SR515 mit 5 Kanälen                                    | Récepteur sport DSMR à 5 canaux SR515                                     | SR515 DSMR Sport, ricevitore, 5 canali                           |
| SPMSSX108PM | SX108PM Micro Gear Servo Promoto                     | SX108 Mikro-Metallgetriebeservo                                            | Micro servo à engrenage métallique SX108                                  | Servo micro ingranaggi metallo SX108                             |
| SPMXSE1040  | Firma 40A Brushed WP ESC : IC3                       | Firma 40A wasserdichter Geschwindigkeitsregler mit Bürstenmotor 2S-3S: IC3 | Contrôle de vitesse électronique étanche à balais Firma 40 A, 2S-3S : IC3 | ESC Firma 40A a spazzole impermeabile, 2S-3S: IC3                |
| TLR5910     | Button Head Screws, M3 x 14mm (10)                   | Rundkopfschraube, M3 x 14mm (10)                                           | Vis à tête bombée, M3 x 14mm (10)                                         | Vite a testa tonda M3 x 14mm (10)                                |
| TLR5962     | Flathead Screws, M3 x 10mm (10)                      | Sechskant-Flachkopfschraube M3 x 10mm (10)                                 | Vis à tête plate hexagonale M3 x 10mm (10)                                | Vite a testa svasata cava esagonale M3 x 10mm (10)               |
| TLR74008    | Silicone Shock Oil, 35wt, 420cst, 2oz                | Stoßdämpfer-Silikonöl, 35 WT, 420 cST, 2 oz. (59 ml)                       | Huile silicone pour amortisseur, 35 WT, 420 cST, 2 oz. (59 ml)            | Olio silconico per ammortizzatori, 35 WT, 420 cST, 2 oz. (59 ml) |
| TLR76009    | TLR Lok, Threadlock, Blue                            | TLR Lok, Schraubensicherung, blau                                          | Frein fi let TLR Lok, bleu                                                | TLR Lok, frenafi letti, blu                                      |
| TLR77000    | High-Pressure Black Grease, 8cc                      | High-Pressure Fett Schwarz/8cc                                             | Graisse noire haute pression, 8cc                                         | Grasso nero alta pressione, 8cc                                  |

# OPTIONAL PARTS / OPTIONALE TEILE / PIÈCES EN OPTION / PARTI OPZIONALI

| Part #     | Description                                                                                                                    | Beschreibung                                                                                                                                 | Description                                                                                                                                                                     | Descrizione                                                                                                                                           |
|------------|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| AXI-4522   | 1.9" KMC Mesa Beadlock Wheels, Black & Silver(2)                                                                               | 1.9" KMC Mesa Beadlock-Räder, Schwarz und Silber (2)                                                                                         | Roues 1,9 po à verrou de talon KMC Mesa, noires et argentées (2)                                                                                                                | Cerchi 1.9" KMC Mesa Beadlock, Nero e Argento (2)                                                                                                     |
| AXI232026  | AR45 Differential Cover: SCX10 III                                                                                             | AR45 Differenzialgehäuse: SCX10 III                                                                                                          | Couvercle de différentiel AR45 : SCX10 III                                                                                                                                      | Carter differenziale AR45: SCX10 III                                                                                                                  |
| AXI43014   | 1.9 Falken WILDPEAK M/T 4.7 R35 Tire w/Insert (2)                                                                              | 1.9 Falken WILDPEAK M/T 4.7 R35 Reifen mit Einsatz (2)                                                                                       | Pneus 1,9 po Falken WILDPEAK M/T R35 4,7 avec insertions (2)                                                                                                                    | Pneumatico Falken WILDPEAK M/T 4.7 R35 1.9 con inserto (2)                                                                                            |
| AXI43015   | Black Rhino Primm 1.9" Wheels, 12mm Hex, Black (2)                                                                             | Black Rhino Primm 1.9"-Räder, 12mm Sechskant, Schwarz (2)                                                                                    | Roues 1,9 po Black Rhino Primm, montées en 12 mm, hexagonal, noires (2)                                                                                                         | Ruote Black Rhino Primm da 1,9", esagono da 12 mm, nero (2)                                                                                           |
| AXI70000   | Axial Foam Pit Mat, 24 x 48                                                                                                    | Axiale Schaumstoff-Boxenmatte, 24"x 48"                                                                                                      | Pit mat en mousse Axial, 24 po x 48 po                                                                                                                                          | Tappetino in schiuma assiale, 24"x 48"                                                                                                                |
| AXIC0724   | AX30724 Pinion Gear 32P 13T Steel 3mm Motor Shaft                                                                              | AX30724 Zahnradgetriebe 32P 13T Stahl 3mm Motorwelle                                                                                         | Arbre de moteur à engrenages à pignons en acier 32P 13T de 3 mm AX30724                                                                                                         | AX30724 Pignone 32P 13T acciaio 3mm albero motore                                                                                                     |
| AXIC0726   | AX30726 Pinion Gear 32P 15T 3mm                                                                                                | AX30726 AX30728 Zahnradgetriebe 32P 15T 3mm                                                                                                  | Engrenage à pignons 32P 15T 3 mm AX30726                                                                                                                                        | AX30728 Pignone 32P 15T 3mm                                                                                                                           |
| AXIC0727   | AX30727 Pinion Gear 32P 16T Steel 3mm Motor Shaft                                                                              | AX30727 Zahnradgetriebe 32P 16T Stahl 3mm Motorwelle                                                                                         | Arbre de moteur à engrenages à pignons en acier 32P 16T 3 mm AX30727                                                                                                            | AX30727 Pignone 32P 16T acciaio 3mm albero motore                                                                                                     |
| AXIC2014   | AX12014 Gate Marker Set Green/Orange (10)                                                                                      | AX12014 Gate Marker-Set Grün/Orange (10)                                                                                                     | Ensemble de marqueurs de porte vert orange AX12014 (10)                                                                                                                         | AX12014 Set di marcatori per cancelli verde arancione (10)                                                                                            |
| DYNT0500   | Startup Tool Set: ECX/VTR/HPI                                                                                                  | Startup-Werkzeugsatz: ECX/VTR/HPI                                                                                                            | Ensemble d'outils de démarrage : ECX/VTR/HPI                                                                                                                                    | Set attrezzi base: ECX/VTR/HPI                                                                                                                        |
| PRO1013314 | 1/10 Interco Bogger G8 Front/Rear 1.9" Rock Crawling Tires                                                                     | 1/10 Interco Bogger G8 Front/Heck 1,9" Rock Crawling Reifen                                                                                  | Pneus d'avancée sur les roches 1,9 po avant/arrière Interco Bogger G8 1/10                                                                                                      | Ruote 1/10 Interco Bogger G8 F/R 1.9" Rock Crawling                                                                                                   |
| PRO1015014 | BFGoodrich Mud-Terrain T/A KM3 1.9 Crawler Tire                                                                                | BFGoodrich Mud-Terrain T/A KM3 1.9 Crawler-Reifen                                                                                            | Pneus Crawler 1,9 BFGoodrich pour terrain boueux T/A KM3                                                                                                                        | Ruote BFGoodrich Mud-Terrain T/A KM3 1.9 Crawler                                                                                                      |
| PRO1018303 | Trencher 1.9 Predator Rock Terrain Tires F/R                                                                                   | Trencher 1.9 Predator Rock Terrain-Reifen Vo/Hi                                                                                              | Pneus pour terrain rocailleux 1,9 Predator avant/arrière                                                                                                                        | Ruote Trencher 1.9 Predator Rock Terrain F/R                                                                                                          |
| PRO1025403 | Aztek 1.9" Predator (Super Soft) Rock Crawling Truck Tires (2) for Front or Rear                                               | Aztek 1.9" Predator (Super Soft) Rock Crawling Truck-Reifen (2) für vorne oder hinten                                                        | Pneus 1,9 po camion d'avancée sur les roches Aztek Predator (Super Soft) avant/arrière (2)                                                                                      | Cerchi Aztek 1.9" Predator (Super Soft) Rock Crawling Truck (2) per Ant. o Post.                                                                      |
| PRO278100  | Rock Shooter 1.9 Alum Bead-Loc Wheels Crawlers F/R                                                                             | Rock Shooter 1.9 Alum Bead-Loc Räder Crawler F/R                                                                                             | Roues 1,9 po à verrou de talon Crawler en aluminium Rock Shooter avant/arrière                                                                                                  | Cerchi Rock Shooter 1.9 Alum Bead-Loc Crawler A/R                                                                                                     |
| PRO361500  | 1/10 Cliffhanger HP Cab-Only Clr Bdy 12.3 Cwlr                                                                                 | 1/10 Cliffhanger HP Nur-Kab. Clr Gehäuse 12.3 Cwlr                                                                                           | Carrosserie transparente (cabine uniquement) HP à l'échelle 1/10 12,3 po Crawlers                                                                                               | Cliffhanger HP 1/10 – Carrozzeria trasparente (solo cabina) per crawler 12.3"                                                                         |
| PRO362000  | 1997 Dodge Dakota Clear Body for 12.3" (313mm) Wheelbase Scale Crawlers                                                        | 1997 Dodge Dakota transparentes Gehäuse: für 12,3" (313mm) Radstand maßstabsgetreuem Crawler                                                 | Carrosserie transparente Dodge Dakota 1997 pour crawlers à l'échelle à empattement de 12,3 po (313 mm)                                                                          | Carrozzeria trasparente Dodge Dakota del 1997 per modellini in scala con passo da 313 mm                                                              |
| PRO362300  | 1979 Toyota Land Cruiser FJ40 Clear Body with Trail Cage & Scale Molded Accessories for 12.3" (313mm) Wheelbase Scale Crawlers | 1979 Toyota Land Cruiser FJ40, transparentes Gehäuse mit Trail Cage und maßstabsgetreuem Zubehör für Crawler mit 12,3 Zoll (313 mm) Radstand | Carrosserie transparente Toyota Land Cruiser FJ40 de 1979 avec cage de protection et accessoires moulés à l'échelle pour crawlers à l'échelle à empattement de 12,3 po (313 mm) | Carrozzeria trasparente Toyota Land Cruiser FJ40 del 1979 con gabbia di traino e accessori stampati in scala per crawler in scala con passo da 313 mm |
| PRO362500  | Coyote Grande Clear Body for 12.3" (313mm) Wheelbase Scale Crawlers                                                            | Coyote Grande transparentes Gehäuse: für 12,3" (313mm) Radstand maßstabsgetreuem Crawler                                                     | Carrosserie transparente Coyote Grande pour crawlers à l'échelle à empattement de 12,3 po (313 mm)                                                                              | Carrozzeria trasparente Coyote Grande per crawler in scala con passo da 313 mm                                                                        |
| PRO644900  | PRO Car Stand with Multi-Use Toppers                                                                                           | PRO Fahrzeugständer mit Mehrzweckaufsätzen                                                                                                   | Socle de voiture PRO avec plateaux multi-usages                                                                                                                                 | Cavalletto professionale per auto con supporti multipli                                                                                               |
| PRO647900  | Rock-Tek Tire Weight System for 1.9" Crawler Wheels                                                                            | Rock-Tek Reifengewichtssystem für 1,9" Crawler-Räder                                                                                         | Système de lestage de pneus Rock-Tek pour roues Crawler 1,9 po                                                                                                                  | Sistema di pesi Rock-Tek per pneumatici Crawler da 1,9"                                                                                               |
| SPM2340    | DX3 SMART DSMR 3CH TX w/ SR315                                                                                                 | DX3 SMART DSMR TX mit 3 Kanälen mit SR315                                                                                                    | Émetteur DX3 SMART DSMR 3 canaux avec SR315                                                                                                                                     | TX DX3 SMART DSMR 3CH con SR315                                                                                                                       |
| SPM6220    | DX Rugged+ TX w/SR615 RX                                                                                                       | DX6 Robuster 6-Kanal DSMR-Sender nur                                                                                                         | Émetteur DSMR à 6 canaux DX6 Rugged uniquement                                                                                                                                  | Solo trasmettente DSMR DX6 Rugged a 6 canali                                                                                                          |

| Part #        | Description                                         | Beschreibung                                                            | Description                                                                                   | Descrizione                                                                      |
|---------------|-----------------------------------------------------|-------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|
| SPMR5035      | DX Pro+ DSMR TX Only                                | Nur DX Pro+ DSMR TX                                                     | Émetteur DX Pro+ DSMR uniquement                                                              | DX Pro+ DSMR solo TX                                                             |
| SPMR6220G     | DX Rugged+ TX Only- Green                           | DX6 Robuster 6-Kanal DSMR-Sender nur, grün                              | Émetteur DSMR à 6 canaux DX6 Rugged uniquement, vert                                          | Solo trasmettente DSMR DX6 Rugged a 6 canali, verde                              |
| SPMR62200     | DX Rugged+ TX Only- Orange                          | DX6 Robuster 6-Kanal DSMR-Sender nur, orange                            | Émetteur DSMR à 6 canaux DX6 Rugged uniquement, orange                                        | Solo trasmettente DSMR DX6 Rugged a 6 canali, arancia                            |
| SPMSS6250     | S6250 Ultra Torque High Speed Digi WP Metal Servo   | S6250 Metall-Servo mit Ultra-Drehmoment, Digit WP Metallservo           | Servo métallique étanche numérique à vitesse et couple élevés S6250                           | Servo digitale S6250 – alta coppia e velocità, waterproof, ingranaggi in metallo |
| SPMSS7110     | Spektrum 1/10 Servo Winch                           | Spektrum 1/10 Servo Winde                                               | Bobine de servo 1/10 Spektrum                                                                 | Argano servo Spektrum 1/10                                                       |
| SPMX-1047     | Smart G2 Trail Pro 3400mAh 3S 11.1V 50C LiPo w/ IC3 | Smart G2 Trail Pro 3400 3S 11,1 V 50C LiPo mit IC3                      | Batterie Li-Po Smart G2 Trail Pro 3400 mAh 3S 11,1 V 50C avec IC3                             | Smart G2 Trail Pro 3400 mAh 3S 11.1 V 50C LiPo con IC3                           |
| SPMX-1051     | Smart G2 Trail Pro 650mAh 3S 11.1V 50C LiPo w/ IC2  | Smart G2 Trail Pro 650 mAh 3S 11,1 V 50C LiPo mit IC2                   | Batterie Li-Po Smart G2 Trail Pro 650 mAh 3S 11,1 V 50C avec IC2                              | Smart G2 Trail Pro 650 mAh 3S 11.1 V 50C LiPo con IC2                            |
| SPMX13003S30M | 1300mAh 3S 11.1V Smart LiPo Battery 30C IC3         | 1300 mAh 3S 11,1 V Smart G2 LiPo-Akku 30C; IC3                          | Batterie Li-Po 1300 mAh 3S 11,1 V 30C ; IC3                                                   | 1300 mAh 3S 11.1 V batteria Smart LiPo 30C IC3                                   |
| SPMX133S30    | 1300mAh 3S 11.1V Smart G2 LiPo 30C; IC3             | 1300 mAh 3S 11,1 V Smart G2 LiPo 30C; IC3                               | Li-Po Smart G2 1300 mAh 3S 11,1 V 30C ; IC3                                                   | 1300mAh 3S 11.1V Smart G2 LiPo 30C; IC3                                          |
| SPMX223S50    | 2200mAh 3S 11.1V Smart G2 LiPo 50C; IC3             | 2200 mAh 3S 11,1 V Smart G2 LiPo 50C; IC3                               | Li-Po Smart G2 2200 mAh 3S 11,1 V 50C ; IC3                                                   | 2200 mAh 3S 11,1 V Smart G2 LiPo 50C; IC3                                        |
| SPMXC2050     | S155 55W G2 Smart Charger                           | S155 55 W AC G2 Smart-Ladegerät                                         | Chargeur c.a. Smart S155 G2 55 W                                                              | Caricabatterie Smart S155 G2 55 W CA                                             |
| SPMXC2010     | Smart S2200 G2 AC Charger 2X200W                    | Smart S2200 G2 Wechselstrom-Ladegerät, 2x200 W                          | Chargeur c.a. G2 S2200 Smart, 2x200 W                                                         | Caricabatterie Smart S2200 G2 CA, 2x200 W                                        |
| SPMXSEM1040A  | Firma 2 in 1 Brushless Crawler Motor/ESC: 1400Kv    | Firma 2-in-1 Bürstenloser Crawler-Motor Geschwindigkeitsregler: 1400Kv  | Variateur ESC/moteur sans balais 2-en-1 Crawler Firma : 1400 Kv                               | Motore ESC 2 in 1 Firma Brushless Crawler: 1400Kv                                |
| SPMXSEM1040B  | Firma 2 in 1 Brushless Crawler Motor/ESC: 2300Kv    | Firma 2-in-1 Bürstenloser Crawler-Motor Geschwindigkeitsregler: 2300 Kv | Variateur ESC/moteur sans balais 2-en-1 Crawler Firma : 2300 kV                               | Motore ESC 2 in 1 Firma Brushless Crawler: 2300 Kv                               |
| SPMXSEMC09    | Firma 60A BL Smart ESC/2800Kv Sense Mot Crawl Com   | Firma 60A BL Smart ESC 2800 Kv Sense Mot Crawl Com                      | Combinaison variateur ESC Smart sans balais 60 A Firma / moteur Crawler avec capteurs 2800 Kv | Combo ESC motore Firma 60 A BL Smart 2800 Kv con sensori Crawler                 |
| SPMXSM5205    | Firma 20T Rebuildable 5 Pole Brushed Crawler Motor  | Firma 20T Erneuerbarer 5-poliger Crawler-Bürstenmotor                   | Moteur Crawler à balais 5 pôles reconstruisible 20 T Firma                                    | Motore per crawler Firma 20T ricostruibile a 5 poli a spazzole                   |
| TLR74006      | Silicone Shock Oil, 30wt, 338cst, 2oz               | Stoßdämpfer-Silikonöl, 30 WT, 338 cst, 2 oz. (59 ml)                    | Huile silicone pour amortisseur, 30 WT, 338 cst, 2 oz. (59 ml)                                | Olio silconico per ammortizzatori, 30 WT, 338 cst, 2 oz. (59 ml)                 |
| TLR74010      | Silicone Shock Oil, 40wt, 516cst, 2oz               | Stoßdämpfer-Silikonöl, 35 WT, 420 cST, 2 oz. (59 ml)                    | Huile silicone pour amortisseur, 35 WT, 420 cST, 2 oz. (59 ml)                                | Olio silconico per ammortizzatori, 35 WT, 420 cST, 2 oz. (59 ml)                 |

[facebook.com/axialinc](https://facebook.com/axialinc) | [instagram.com/axialracing](https://instagram.com/axialracing) | [twitter.com/axialrc](https://twitter.com/axialrc)  
[youtube.com/axialvideos](https://youtube.com/axialvideos) | [flickr.com/axialrc](https://flickr.com/axialrc)



[WWW.AXIALADVENTURE.COM](http://WWW.AXIALADVENTURE.COM)

©2026 Horizon Hobby, LLC.

Axial, the Axial logo, DSM, SLT3, Firma, IC3, SCX10, and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC.

The Spektrum trademark is used with permission of Bachmann Industries, Inc. Jeep, the Jeep grille and related logos, vehicle model names and trade dress are trademarks of FCA US LLC and used under license by Horizon Hobby, LLC, ©2026 FCA US LLC.

All other trademarks, service marks and logos are property of their respective owners.

Completed 5/26

AXI-2037

1279722