

1/10th SCALE ROCK CRAWLER READY-TO-RUN

SCX10™ III MOTOBILT WAYPOINT JT GLADIATOR



**INSTRUCTION MANUAL
BEDIENUNGSANLEITUNG
MANUEL D'UTILISATION
MANUALE DI ISTRUZIONI**

Scan the QR code and select the Support tab from the product page for the most up-to-date manual information.
Scannen Sie den QR-Code und wählen Sie auf der Produktseite die Registerkarte „Support“, um die aktuellsten Informationen zu Handbüchern.
Scannez le code QR et sélectionnez l'onglet Support sur la page du produit pour obtenir les informations les plus récentes sur le manuel.
Scannerizzare il codice QR e selezionare la scheda Supporto dalla pagina del prodotto per le informazioni manuali più aggiornate.



AXI-2443

NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, LLC. For up-to-date product literature, visit horizonhobby.com or towerhobbies.com and click on the support or resources tab for this product.

MEANING OF SPECIAL LANGUAGE

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND a little or no possibility of injury.



WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury.

This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by Horizon Hobby, LLC. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

Age Recommendation: Not for children under 14 years. This is not a toy.

SAFETY PRECAUTIONS AND WARNINGS

As the user of this product, you are solely responsible for operating in a manner that does not endanger yourself and others or result in damage to the product or property of others.

This model is controlled by a radio signal subject to interference from many sources outside your control. This interference can cause momentary loss of control, so it is advisable to always keep a safe distance in all directions around your model as this margin will help avoid collisions or injury.

- Never operate your model with low transmitter batteries.
- Always operate your model in open spaces away from full-size vehicles, traffic and people.
- Never operate the model in the street or in populated areas for any reason.
- Carefully follow the directions and warnings for this and any optional support equipment (chargers, rechargeable battery packs, etc.) you use.
- Keep all chemicals, small parts and anything electrical out of the reach of children.
- Never lick or place any portion of the model in your mouth as it could cause serious injury or even death.
- Exercise caution when using tools and sharp instruments.
- Take care during maintenance as some parts may have sharp edges.
- Immediately after using your model, do NOT touch equipment such as the motor, electronic speed control and battery, because they generate high temperatures. You may burn yourself seriously touching them.
- Do not put fingers or any objects inside rotating and moving parts, as this may cause damage or serious injury.
- Always turn on your transmitter before you turn on the receiver in the car. Always turn off the receiver before turning your transmitter off.
- Keep the wheels of the model off the ground when checking the operation of the radio equipment.



WARNING AGAINST COUNTERFEIT PRODUCTS: Always purchase from a Horizon Hobby, LLC authorized dealer to ensure authentic high-quality Spektrum product. Horizon Hobby, LLC disclaims all support and warranty with regards, but not limited to, compatibility and performance of counterfeit products or products claiming compatibility with DSM® or Spektrum technology.

TABLE OF CONTENTS

Water-Resistant Vehicle With Waterproof Electronics.....	3	Vehicle Maintenance	9
Box Contents.....	4	Binding.....	9
Required Equipment	4	Firma 40A Brushed ESC	10
Recommended Tools	4	Gear Ratios.....	10
Getting Started Checklist.....	5	Troubleshooting.....	11
Vehicle Parts.....	5	Limited Warranty.....	12
Charge the Vehicle Battery	6	Warranty and Service Contact Information	12
Install the Transmitter Batteries	6	FCC Information.....	13
Transmitter Functions.....	6	IC Information.....	13
Spmsr515 Dual Protocol Receiver.....	7	Compliance Information for the European Union	13
Adjusting the Vehicle Battery Tray.....	7	Parts Lists.....	55
Dig Programming Procedure	7	Optional Parts.....	58
Power On.....	8	Electronics	59
Range-Checking the Radio System	8		

WATER-RESISTANT VEHICLE WITH WATERPROOF ELECTRONICS

Your new Horizon Hobby vehicle has been designed and built with a combination of waterproof and water-resistant components to allow you to operate the product in many “wet conditions,” including puddles, creeks, wet grass, snow and even rain.

While the entire vehicle is highly water-resistant, it is not completely waterproof and your vehicle should NOT be treated like a submarine. The various electronic components used in the vehicle, such as the Electronic Speed Control (ESC), servo(s) and receiver are waterproof, however, most of the mechanical components are water-resistant and should not be submerged.

Metal parts, including the bearings, hinge pins, screws and nuts, as well as the contacts in the electrical cables, will be susceptible to corrosion if additional maintenance is not performed after running in wet conditions. To maximize the long-term performance of your vehicle and to keep the warranty intact, the procedures described in the “Wet Conditions Maintenance” section below must be performed regularly if you choose to run in wet conditions. If you are not willing to perform the additional care and maintenance required, then you should not operate the vehicle in those conditions.

 **CAUTION:** Failure to exercise caution while using this product and complying with the following precautions could result in product malfunction and/or void the warranty.

GENERAL PRECAUTIONS

- Read through the wet conditions maintenance procedures and make sure that you have all the tools you will need to properly maintain your vehicle.
- Not all batteries can be used in wet conditions. Consult the battery manufacturer before use. Caution should be taken when using Li-Po batteries in wet conditions.
- Most transmitters are not water-resistant. Consult your transmitter’s manual or the manufacturer before operation.
- Never operate your transmitter or vehicle where lightning may be present.
- Do not operate your vehicle where it could come in contact with salt water (ocean water or water on salt-covered roads), contaminated or polluted water. Salt water is very conductive and highly corrosive, so use caution.

- Even minimal water contact can reduce the life of your motor if it has not been certified as water-resistant or waterproof. If the motor becomes excessively wet, apply very light throttle until the water is mostly removed from the motor. Running a wet motor at high speeds may rapidly damage the motor.
- Driving in wet conditions can reduce the life of the motor. The additional resistance of operating in water causes excess strain. Alter the gear ratio by using a smaller pinion or larger spur gear. This will increase torque (and motor life) when running in mud, deeper puddles, or any wet conditions that will increase the load on the motor for an extended period of time.

WET CONDITIONS MAINTENANCE

- Drain any water that has collected in the tires by spinning them at high speed. With the body removed, place the vehicle upside down and pull full throttle for a few short bursts until the water has been removed.



CAUTION: Always keep hands, fingers, tools and any loose or hanging objects away from rotating parts when performing the above drying technique.


- Remove the battery pack(s) and dry the contacts. If you have an air compressor or a can of compressed air, blow out any water that may be inside the recessed connector housing.
- Remove the tires/wheels from the vehicle and gently rinse the mud and dirt off with a garden hose. Avoid rinsing the bearings and transmission.

NOTICE: Never use a pressure washer to clean your vehicle.

- Use an air compressor or a can of compressed air to dry the vehicle and help remove any water that may have gotten into small crevices or corners.
- Spray the bearings, drive train, fasteners and other metal parts with a water-displacing light oil. Do not spray the motor.
- Let the vehicle air dry before you store it. Water (and oil) may continue to drip for a few hours.
- Increase the frequency of disassembly, inspection and lubrication of the following:
 - Front and rear axle hub assembly bearings.
 - All transmission cases, gears and differentials.
 - Motor—clean with an aerosol motor cleaner and re-oil the bushings with lightweight motor oil.

BOX CONTENTS

- Spektrum™ SLT3 3-Channel 2.4GHz Transmitter (SPMRSLT380)
- (4) AA Alkaline Batteries
- Axial® SCX10™ III Motobilt Waypoint JT Gladiator 1/10 Scale 4WD RTR
 - Axial Slickrock 35T 540 Brushed Motor (AXI-1376)
 - Spektrum™ SR515 DSMR 5-Channel Sport Receiver (SPMSR515)
 - Spektrum™ SX108 Micro Metal Gear Servo (SPMSX108PM)
 - Spektrum™ S683 Standard Waterproof Metal Gear Servo 25T (SPMS683)
 - Spektrum™ Firma™ 40A Brushed Waterproof ESC, 2S-3S: IC3 (SPMXSE1040)

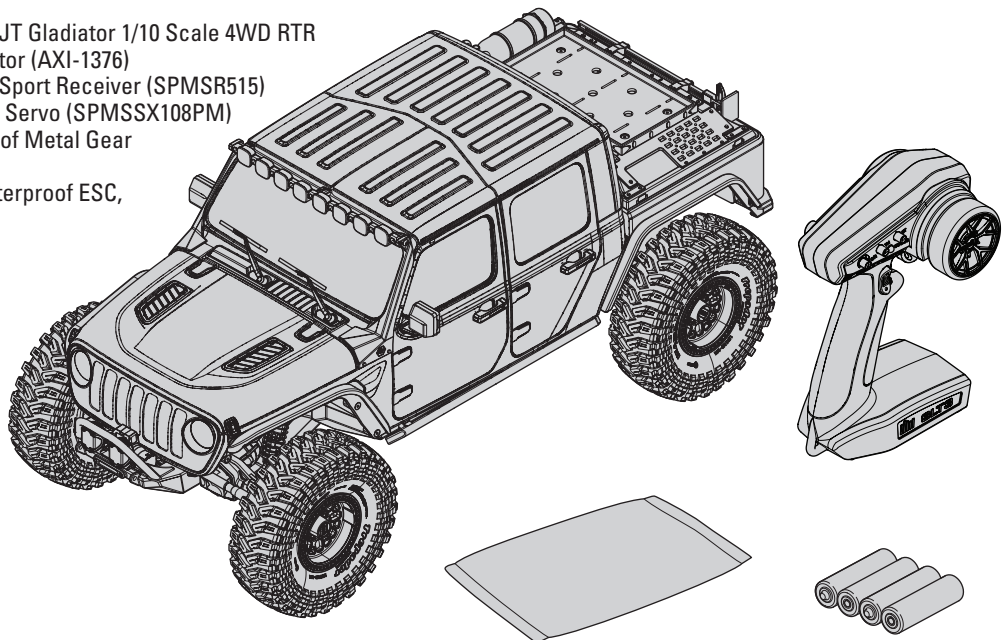


• Parts Bag


• (4) AA Alkaline batteries

REQUIRED EQUIPMENT


- 2–3S LiPo Battery with EC3 or IC3 Connector

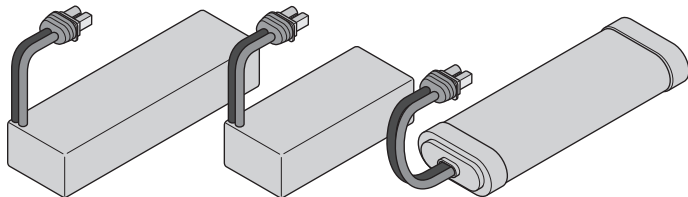

- Battery charger compatible with the chosen vehicle battery type

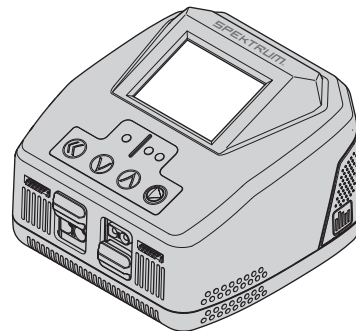

RECOMMENDED TOOLS

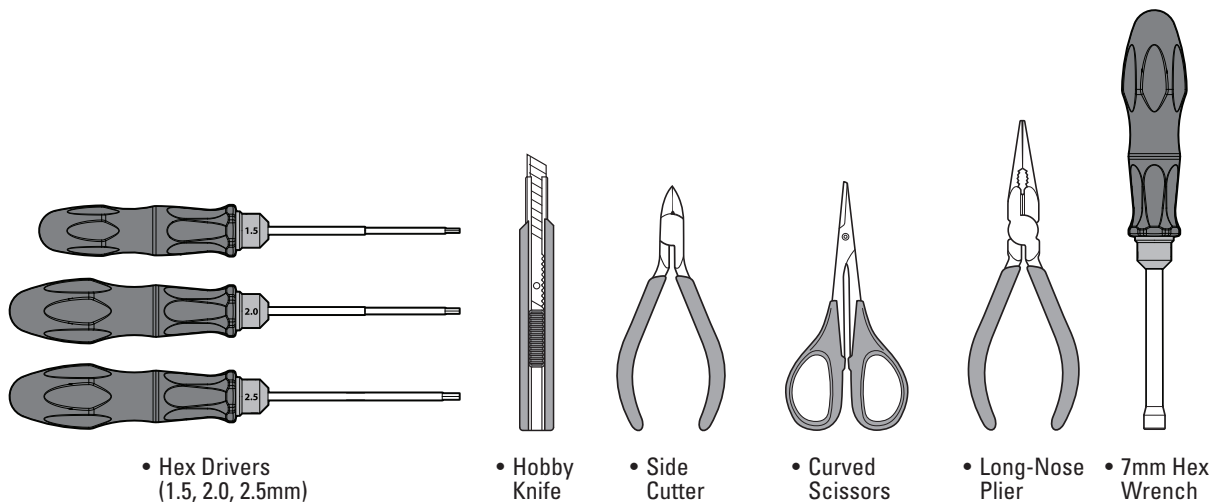
• Hex Drivers
(1.5, 2.0, 2.5mm)• Hobby
Knife• Side
Cutter• Curved
Scissors• Long-Nose
Plier• 7mm Hex
Wrench

GETTING STARTED CHECKLIST

Read the manual
Familiarize yourself with the vehicle and its components
Check all screws, especially the driveshaft setscrews, for tightness from the factory
Charge the vehicle battery
Install 4 AA batteries in the transmitter

Power on the transmitter
Install the vehicle battery in the vehicle
Check for proper function of the throttle and steering
Range check the radio system
Drive the vehicle, challenge yourself and have FUN!
Perform any necessary vehicle maintenance


VEHICLE PARTS

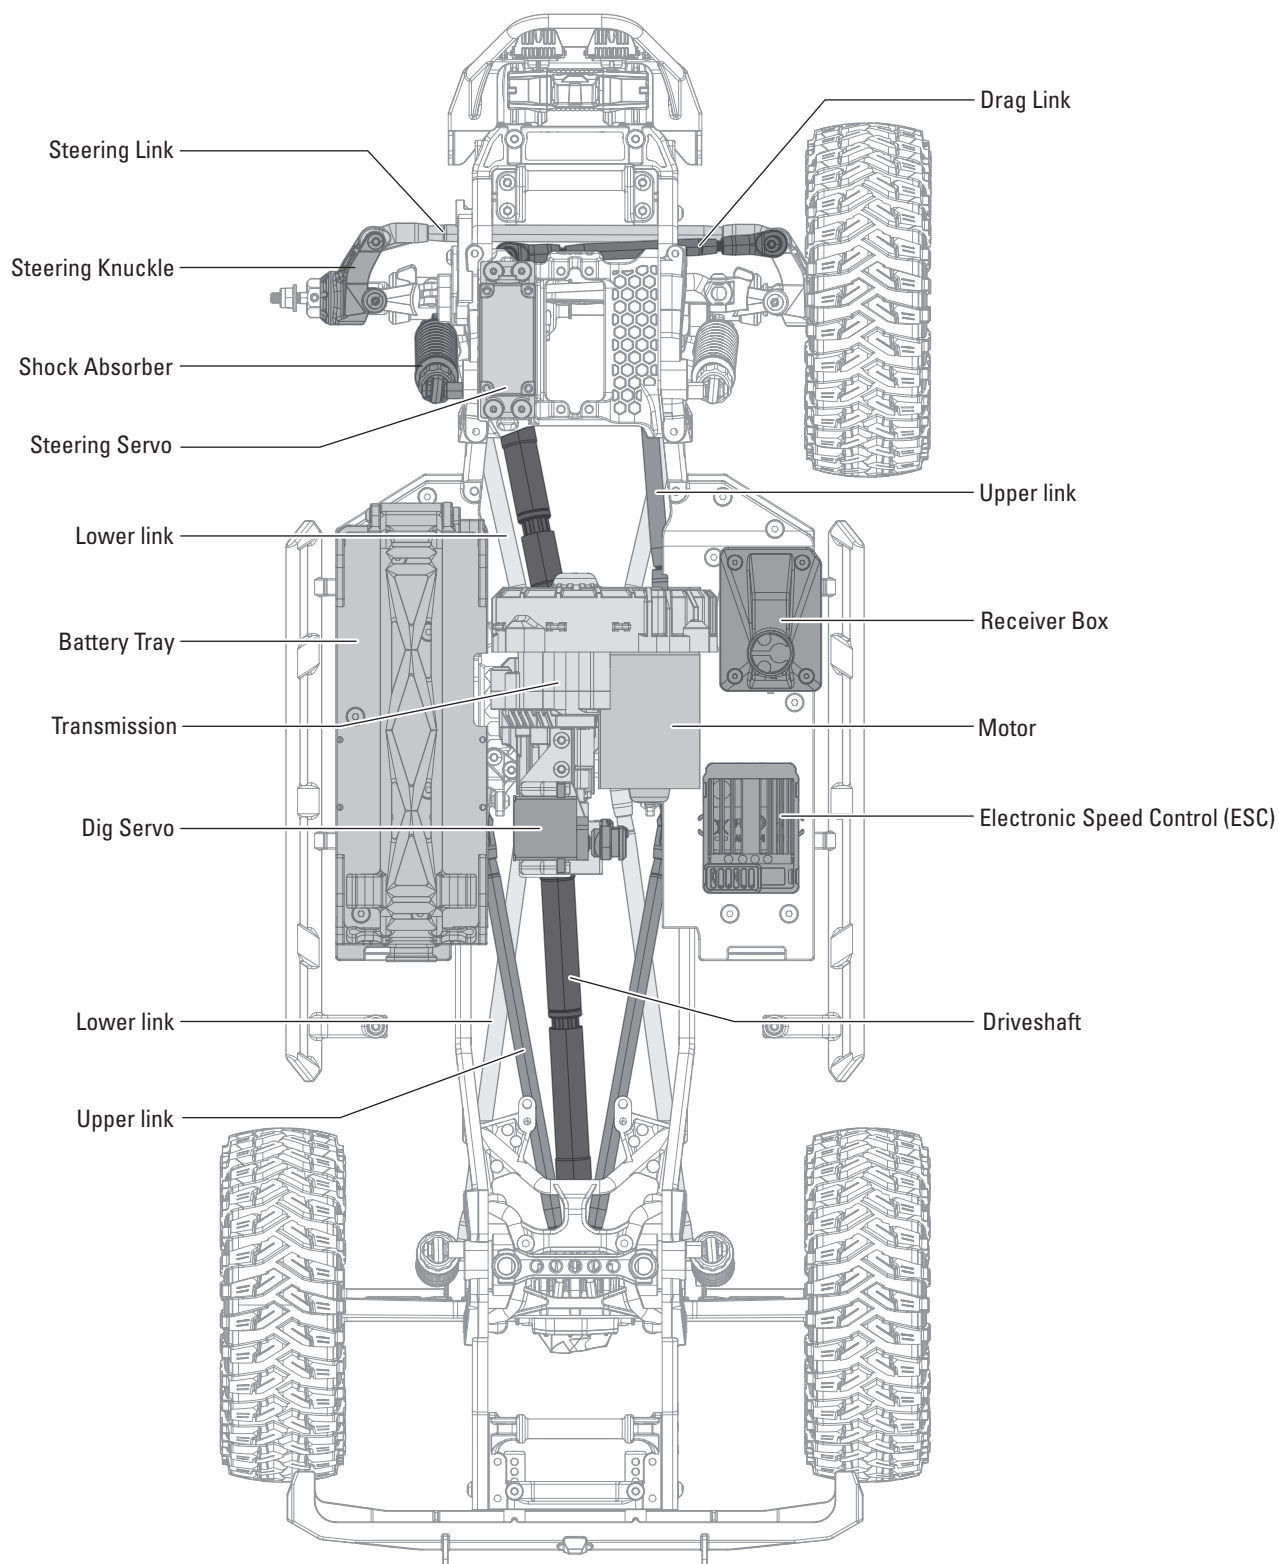

CHARGE THE VEHICLE BATTERY

Follow the charger manufacturer instructions to properly charge the vehicle battery.

CAUTION: Only use chargers designed to charge the chosen battery type. Using an incorrect charger or incorrect charger settings could cause the battery to catch fire or explode.

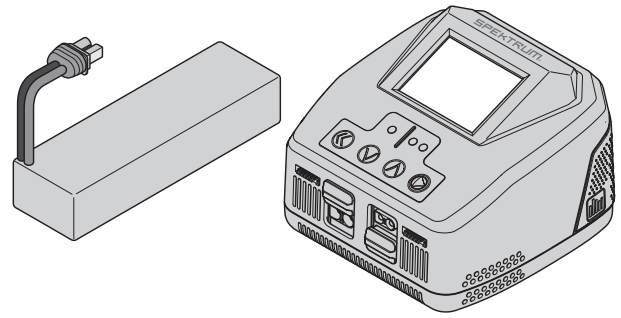


INSTALL THE TRANSMITTER BATTERIES

This transmitter requires 4 AA batteries.

1. Remove the battery cover from the transmitter.
2. Install the batteries as shown.
3. Install the battery cover.

CAUTION: NEVER remove the transmitter batteries while the model is powered on. Loss of model control, damage, or injury may occur.

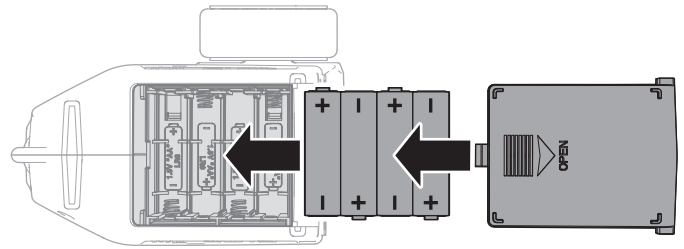

TRANSMITTER FUNCTIONS

SPECIFICATIONS

Power Supply: 4 AA Batteries

Operating Frequency: 2.4GHz

Transmit Power: <100mw

Control Protocol: SLT

Control: Proportional Steering and Throttle/Brake with Trim Knobs, Third Channel with 3 Position Momentary Switch

Auxiliary Functions: 3 Position Throttle Limit Switch, Steering Rate Knob to Change Steering Travel on-the-fly, Programmable Servo Travel for Steering and Throttle/Brake

A. Throttle Trim

Adjusts the throttle neutral point.

B. Steering Trim

Adjusts the steering center point. Normally, the steering trim is adjusted until the vehicle tracks straight.

C. LED

- Solid red lights: Indicates the power is ON and adequate battery power.
- Flashing red lights: Indicates the battery voltage is critically low. Replace batteries

D. Steering Wheel

E. Throttle/Brake

F. Steering Rate

On-The-Fly knob for travel adjustment on the steering

G. Channel 3 – A/B Button

3 position momentary switch, middle position is neutral

For DIG function press up for A button, press down for B button.

H. Throttle Limit

Limits throttle output to 50/75/100%

Select 50% or 75% for less experienced drivers or when you are driving the vehicle in a small area.



I. Throttle (TH) Servo Reversing

Move the switch to reverse the throttle channel

J. Steering (ST) Servo Reversing


Move the switch to reverse the steering channel

K. Power Button

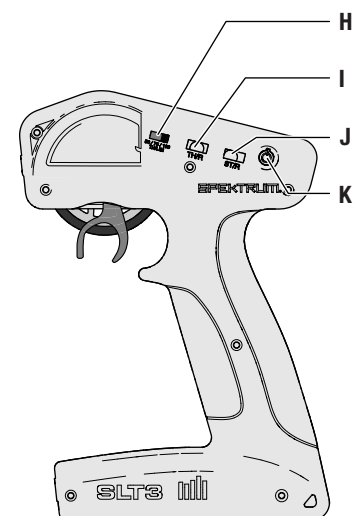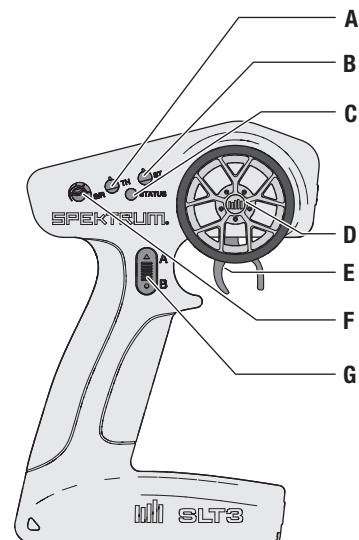

SPMSR515 DUAL PROTOCOL RECEIVER

SPECIFICATIONS	
Type	Dual Protocol 5-Channel Receiver (SLT/DSMR)
Dimensions (L x W x H)	32.5 x 21.5 x 12.4mm
Antenna Length	120mm
Channels	5
Weight	6g
Band	2.4GHz
Voltage Range	3.5–9.6V
Bind Type	Button

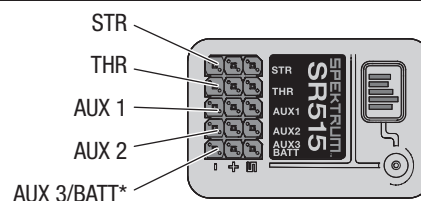




***IMPORTANT:** AUX 3 on the SR515 shares the servo port with the battery. A Y-harness (SPMA3008) is required on the AUX 3 port to use all 5 channels with a receiver battery.

ADJUSTING THE VEHICLE BATTERY TRAY

The battery tray may be adjusted to fit a wide range of battery sizes.

To adjust the battery tray:

1. Remove the seven M3 X 8mm flathead screws from the top of the battery tray.
2. Remove the boat-side slider panel from the bottom of the battery tray.
3. Remove two M3 X 10mm button head screws from the rear battery tray support.
4. Adjust the rear battery tray support forward or backward to fit the battery.
5. Re-install the two M3 X 10mm button head screws to secure the rear battery tray support, taking care not to over-tighten them.
6. Re-install the boat-side slider panel to the bottom of the battery tray, and secure it with seven M3 X 8mm flathead screws.

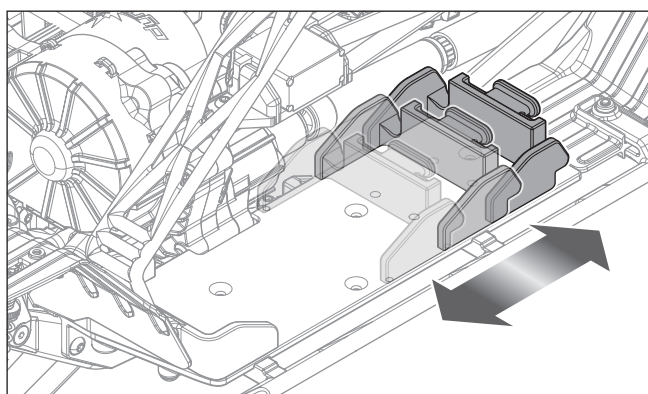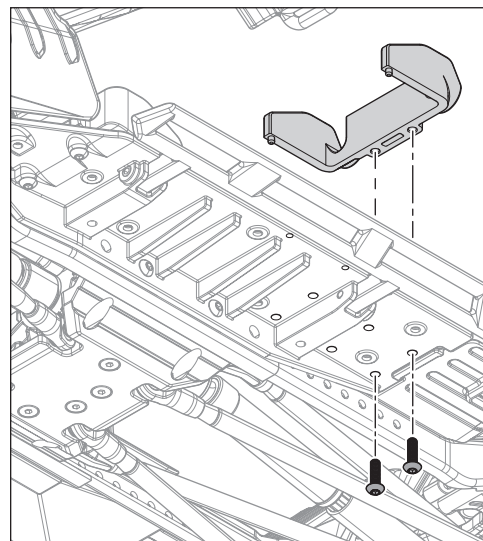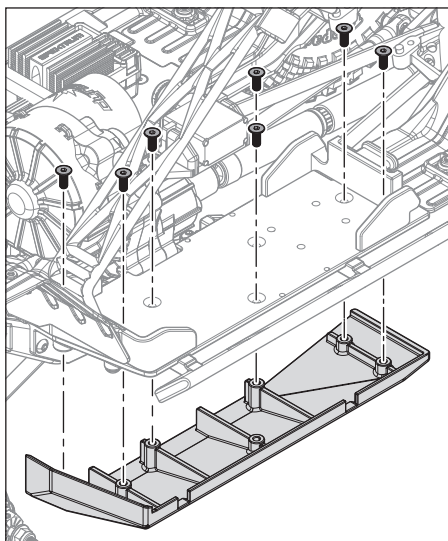

DIG PROGRAMMING PROCEDURE

The vehicle includes a DIG transmission which allows the rear axle to lock while allowing the front wheels to spin. Use this feature in close quarters to turn the vehicle tighter than is possible with normal 4 wheel drive or to preload the suspension when needed.

To enter programming mode:


1. Hold the transmitter trigger at full forward and the transmitter steering wheel full left. Power ON the transmitter.
2. Release the transmitter trigger and steering wheel. The status light will blink every 2 seconds indicating AUX1/DIG programming mode.

To adjust normal 4WD end points:


1. Use the transmitter steering trim knob to set 4WD position. The dig shifting linkage pushes into the transmission.

To adjust the dig end point value:




1. In programming mode, hold down the A or B button.
2. Use the steering rate knob to adjust the end point.
The end point is set correctly when the front wheels rotate and the rear wheels are locked.
3. Power OFF the vehicle and transmitter.
4. Reset the steering rate and trim to the default positions.
5. Power ON the transmitter and the vehicle.

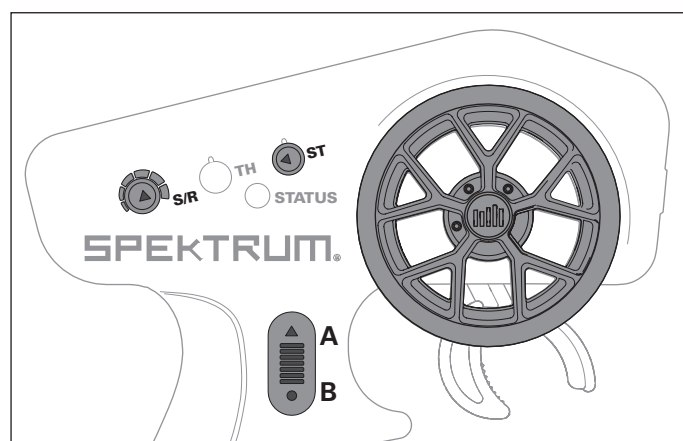




POWER ON

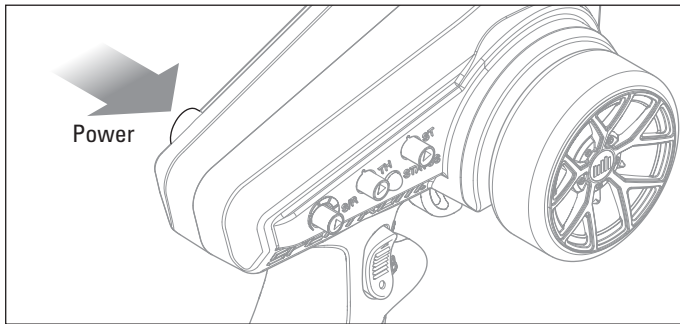

1. Power ON the transmitter.
2. Push firmly on the front and rear body release tabs on the bottom of the chassis.

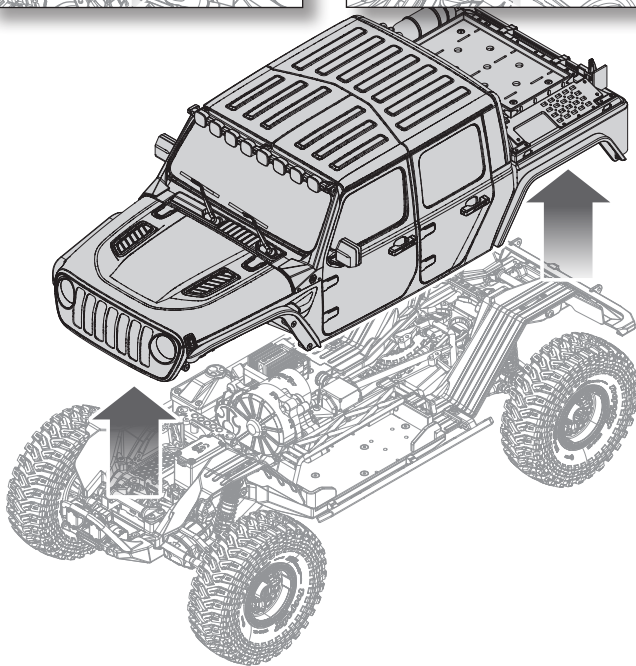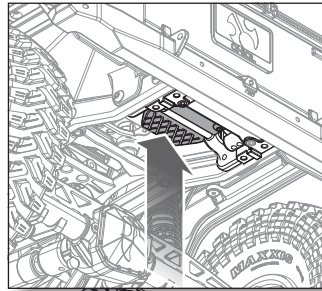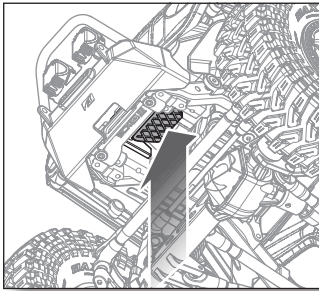

3. Lift the body from the chassis.

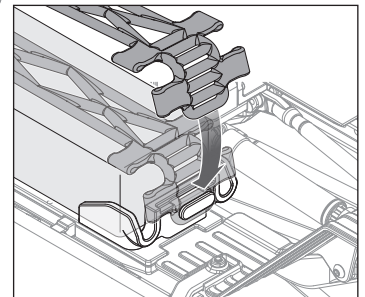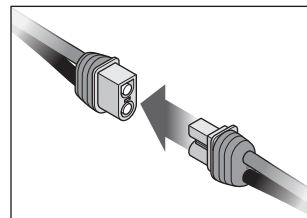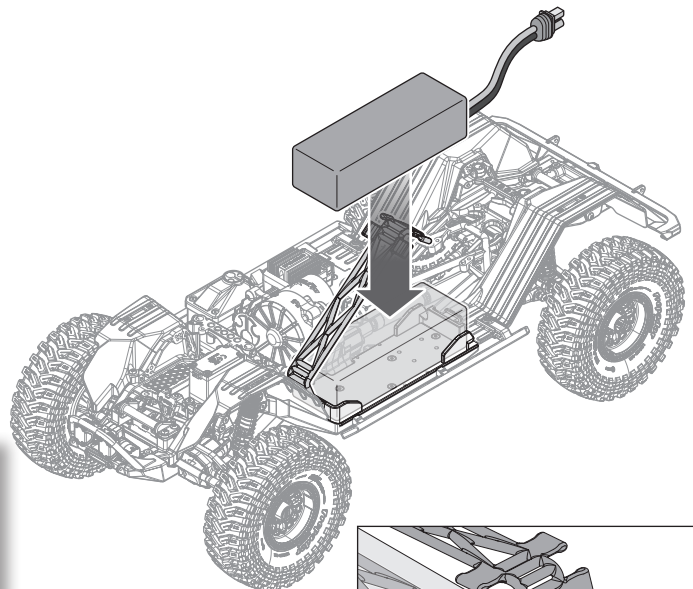

4. Place the battery in the battery tray. Adjust the battery tray length to fit the battery as described in the previous section.
5. Secure the battery to the tray with the elastometer strap.
6. Connect the battery to the ESC.
7. Re-install the body.

When finished driving, go through the above steps in reverse, being sure to disconnect the vehicle battery **BEFORE** powering off the transmitter.

NOTICE: Always disconnect the battery from the ESC before powering off the transmitter. Loss of vehicle control may result if it is not properly disconnected.

RANGE-CHECKING THE RADIO SYSTEM



Before operating the vehicle, check the radio system to ensure proper operation and adequate range.

1. Turn ON the transmitter.
2. Connect the battery in the vehicle.
3. Have a friend hold the vehicle, and keep hands and loose clothing away from moving parts.
4. Walk away from the vehicle to the maximum planned operating distance.
5. Turn the steering wheel side to side, and operate the throttle, both forward and reverse, checking for any erratic behavior.
6. If any erratic behavior is exhibited, **DO NOT** operate the vehicle. Call customer service for assistance.




VEHICLE MAINTENANCE


Just like a full-sized car or truck, your RC vehicle must undergo periodic maintenance to ensure peak performance. Preventative maintenance will help avoid needless breakage, which can result in costly repairs. Follow these maintenance suggestions.

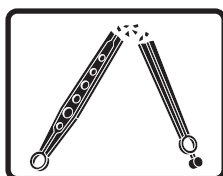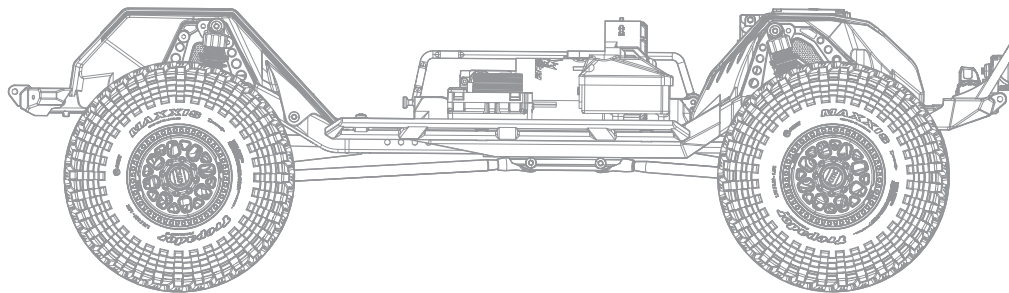


Replace any noticeable bent or broken parts

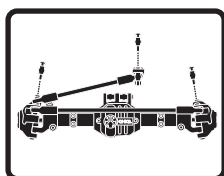


Check for wear on the ball joints in the steering and suspension links (replace if necessary)

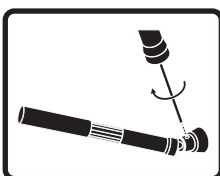


Check the driveshaft set screws and apply thread locking compound when necessary

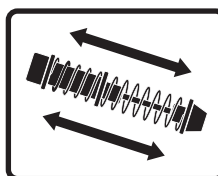


Inspect the shock absorbers for smooth dampened operation

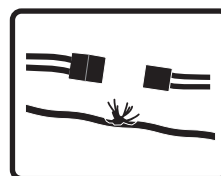


Check for any loose connections or frayed wiring

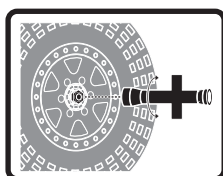


Check the wheel nuts for tightness

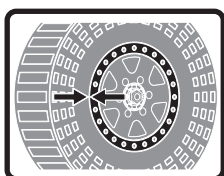


Ensure the wheel beads are still firmly bonded around the entire circumference of the rim

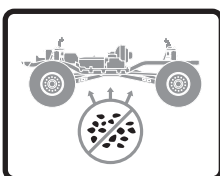


Keep the chassis free of dirt and debris

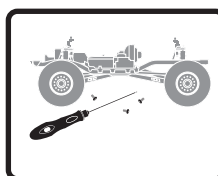


Check for loose screws on the chassis, especially the knuckle, C-hub and axle lockout screws

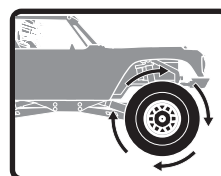


Check the driveline for smooth, bind-free operation

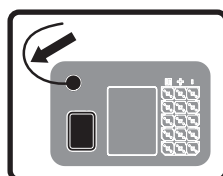


Check the receiver antenna for damage

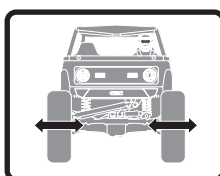

Check the steering operation for any binding

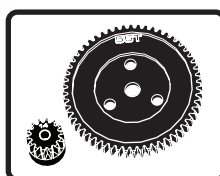

Inspect the spur and pinion gears for damage

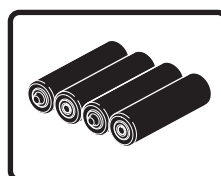

Replace the transmitter batteries when indicated by the transmitter, as described in the Transmitter Functions section


BINDING

Binding is the process of programming the receiver to recognize the GUID (Globally Unique Identifier) code of a single specific transmitter. The transmitter and receiver are bound at the factory. If the system needs to be re-bound for any reason, follow the instructions below.



1. Power ON the receiver.
2. Press the bind button three times quickly (within 1.5 seconds of the first button press).
The LED flashes with a pause.
3. Set the trims and control positions at the desired failsafe settings, and power ON the SLT3 transmitter.
4. When the SLT3 transmitter LED and the receiver LED remain lit, binding is complete.

You must rebind when:

- Different failsafe positions are desired (e.g., when throttle or steering reversing has changed).
- Binding the receiver to a different transmitter.

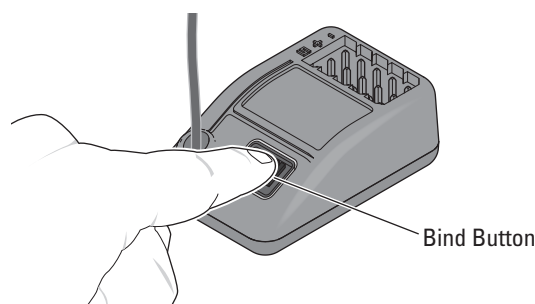

FIRMA 40A BRUSHED ESC

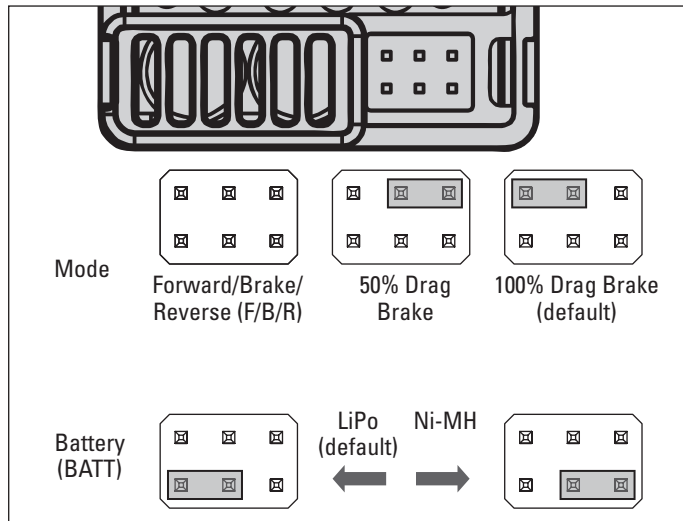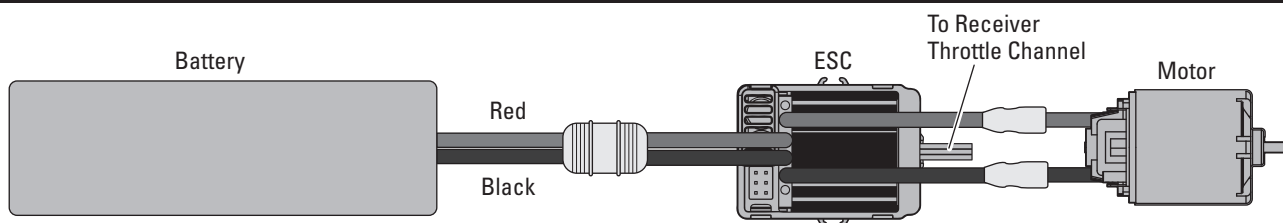

SPECIFICATIONS	
Type	Brushed
Constant/Peak	40A/180A
Resistance	0.002 Ohms
Function	Forward/Brake/Reverse, Forward/Brake, Forward/Reverse (Crawler Mode)
Vehicle Type	1/10 on-road and off-road; 1/10 rock crawler
Operation	Proportional forward, proportional reverse with braking delay, Crawler Mode
Battery Type/ Input Voltage	2-3 cell LiPo/Li-Fe; 5-9 cell Ni-MH/Ni-Cd
Motor Type	2S LiPo down to 12T; 3S LiPo down to 18T
BEC Output	6V/3A
Dimensions	46.5mm x 34mm x 28.5mm (1.8 x 1.3 x 1.1 in)
Weight	70g (2.5 oz)
Battery Connector	IC3™

SETUP

The throttle is calibrated with the included transmitter at the factory. To calibrate the ESC and a different transmitter, follow these steps:

1. Mount the ESC in a well-ventilated area free from vibration and shock.
2. Connect the ESC motor wires to the motor (red-to-red and black-to-black).
3. Connect the ESC throttle wire to the receiver throttle channel.
4. Before plugging the battery into the ESC, verify the transmitter is ON and the throttle trim is set to zero.
5. Connect the battery to the ESC. When the battery is connected, the vehicle powers ON.

CAUTION: Keep all body parts and loose clothing away from any moving parts while the battery is connected to the ESC.

CAUTION: Always connect the ESC to a proper power source that has the correct voltage and polarity. Incorrect voltages or reversed polarity will damage the ESC. Damage to the ESC caused by improper voltage or polarity is not covered under warranty.

6. Use the transmitter to test forward and reverse control.

SOUND INDICATOR	
OPERATION	SOUND
Ni-MH/Ni-CD Battery	1 Short Beep
2S LiPo Battery	2 Short Beeps
3S LiPo Battery	3 Short Beeps
ESC Ready	1 Long Beep

TO CALIBRATE THE ESC

1. Power ON the transmitter, and set the throttle control to neutral.
2. Connect the battery to the ESC. Wait 3 seconds to allow the ESC to initiate a self-test and automatic throttle calibration.
A long beep sounds to indicate the ESC is recalibrated.
3. Disconnect the battery when the vehicle is not in use.

IMPORTANT: The LiPo cut-off is set to "ON" and the drag brake is set to 100% from the factory.

GEAR RATIOS

SPUR/PINION GEAR RATIO CHART - LCXU TRANSMISSION							
	12	13	14 (Default)	15	16	17	18
Standard Axles (stock)	45.7	42.2	39.2	36.6	34.3	32.3	30.5
Portal Axles (optional)	55.1	50.8	47.2	44.1	41.3	38.9	36.7

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The system will not connect	Your transmitter and receiver are too close together	Move transmitter 8–12 feet away from receiver
	You are near metal objects	Move to an area with less metal
	The receiver is bound to a different model memory	Make sure the correct model memory is active in your transmitter
	Your transmitter was placed into bind mode and is no longer bound to your receiver	Rebind your transmitter and receiver, and then re-calibrate
The receiver goes into failsafe a short distance away from the transmitter	Check for damage on the receiver antenna	Make sure your receiver antenna is protected and located as high as practical
		Replace the receiver or contact Horizon Product Support
The receiver stops responding during operation	Low receiver battery voltage. If the battery voltage is low, it may drop below 3.5V momentarily, causing the receiver to brown-out, then reconnect	Charge the receiver or vehicle battery. Spektrum receivers require at least 3.5V to operate
	Loose or damaged wires or connectors between battery and receiver	Check the wires and connection between the battery and receiver. Repair or replace wires and/or connectors
Vehicle does not move	Batteries are not installed properly in the transmitter	Ensure the transmitter batteries are properly installed
	Weak or no battery in the vehicle	Install a freshly charged vehicle battery
	Damaged motor	Replace the motor
	Frayed or broken wiring	Replace any damaged wiring
	ESC is shut down by heat protection circuit	Allow the ESC to cool down completely
Loss of vehicle control	Improper antenna placement	Ensure the transmitter antenna is not blocked and the receiver antenna is located properly
	Weak or no batteries in the transmitter or vehicle	Install a freshly charged vehicle battery and new transmitter batteries
	Neutral or trim position is incorrect	Adjust the steering trim
	Receiver and/or battery not connected properly	Check all receiver and battery connections
Steering and/or throttle function is reversed	Servo travel is reversed at the transmitter	Set the transmitter servo reversing switch to the correct position
	Motor wires are not connected properly	Check all motor wires for correct polarity and secure connection
ESC ON – No motor function, audible tone or LED	Battery/connection issue	Recharge/replace battery. Secure all connections
	Damaged ESC	Repair/replace ESC
	Damaged motor	Repair/replace
Motor – Stops and LED blinks	Low voltage protection	When the ESC LED blinks, recharge/replace battery
	Overheat protection	When the LED blinks, let motor/ESC cool, change set up or gearing to avoid overheating
Motor – Accelerates irregularly	Battery issue	Repair damaged wiring/replace battery
	Incorrect gearing	Adjust/replace gearing
	Worn or damaged motor	Repair/replace motor
Motor – Does not turn continuously in response to throttle	ESC/motor damaged	Repair/replace wiring or motor/ESC
Motor – Slows but will not stop	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure
Steering servo – Operates; motor does not run	Damaged motor	Test the motor apart from the vehicle system, repair/replace motor as needed
	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure
Steering/motor – not functioning	Low battery voltage	Recharge/replace
	Wrong model memory selected on transmitter	Select correct model settings on your transmitter, refer to transmitter and/or receiver manual
	Receiver not bound to transmitter	Bind transmitter to receiver, refer to transmitter and/or receiver manual
Vehicle – Does not operate at full speed	Battery issue	Recharge/replace
	Incorrect transmitter/ESC calibration	Adjust throttle travel/other throttle settings on the transmitter/ESC. Repeat the ESC Calibration Procedure

LIMITED WARRANTY

What this Warranty Covers

Horizon Hobby, LLC, (Horizon) warrants to the original purchaser that the product purchased (the "Product") will be free from defects in materials and workmanship for a period of 2 years from the date of purchase.

What is Not Covered

This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations or (vii) use that violates any applicable laws, rules, or regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER'S INTENDED USE.

Purchaser's Remedy

Horizon's sole obligation and purchaser's sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability

HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law

These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services

Your local hobby store and/or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions

or assistance, please visit our website at www.horizonhobby.com, submit a Product Support Inquiry, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services

If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at http://www.horizonhobby.com/content/service-center_render-service-center. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

NOTICE: Do not ship Li-Po batteries to Horizon. If you have any issue with a Li-Po battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements

For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service

Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of 1/2 hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website http://www.horizonhobby.com/content/service-center_render-service-center.

ATTENTION: Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender's choice and at the sender's expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

10/15

WARRANTY AND SERVICE CONTACT INFORMATION

COUNTRY OF PURCHASE	HORIZON HOBBY	CONTACT INFORMATION	ADDRESS
United States of America	Horizon Service Center (Repairs and Repair Requests)	servicecenter.horizonhobby.com/RequestForm/	2904 Research Rd Champaign, IL 61822
	Horizon Product Support (Product Technical Assistance)	productsupport@horizonhobby.com 877-504-0233	
	Sales	websales@horizonhobby.com 800-338-4639	
European Union	Horizon Technischer Service	service@horizonhobby.eu	Hanskampring 9 D 22885 Barsbüttel, Germany
	Sales: Horizon Hobby GmbH	+49 (0) 4121 2655 100	

FCC INFORMATION

FCC ID: BRWSPMSLT300

FCC ID: BRWSRIRVINGV1

SUPPLIER'S DECLARATION OF CONFORMITY

Axial SCX10 III Waypoint JT Gladiator Rock Crawler RTR (AXI-2443)

FCC This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not

installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Horizon Hobby, LLC
2904 Research Rd.,
Champaign, IL 61822
Email: compliance@horizonhobby.com
Web: HorizonHobby.com

IC INFORMATION

CAN ICES-3 (B)/NMB-3(B)

IC: 6157A-SPMSLT300

IC: 6157A-SRIRVINGV1

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science, and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following 2 conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

COMPLIANCE INFORMATION FOR THE EUROPEAN UNION

CE **EU COMPLIANCE STATEMENT:**
Axial SCX10 III Waypoint JT Gladiator Rock Crawler RTR (AXI-2443)

Hereby, Horizon Hobby, LLC declares that the device is in compliance with the following: EU Radio Equipment Directive 2014/53/EU; RoHS 2 Directive 2011/65/EU; RoHS 3 Directive - Amending 2011/65/EU Annex II 2015/863.

The full text of the EU declaration of conformity is available at the following internet address: <https://www.horizonhobby.com/content/support-render-compliance>.

NOTE: This product contains batteries that are covered under the 2006/66/EC European Directive, which cannot be disposed of with normal household waste. Please follow local regulations.

Wireless Frequency Range and Wireless Output Power

Transmitter

2403.0 - 2480.0 MHz

16.3 dBm

Receiver

2404-2476 MHz

-1.33dBm

EU Manufacturer of Record:

Horizon Hobby, LLC
2904 Research Road
Champaign, IL 61822 USA

EU Importer of Record:

Horizon Hobby, GmbH
Hanskampring 9
22885 Barsbüttel Germany

WEEE NOTICE:





This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.



EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE


**FRONT AXLE
VORDERACHSE
ESSIEU AVANT
ASSALE ANTERIORE**

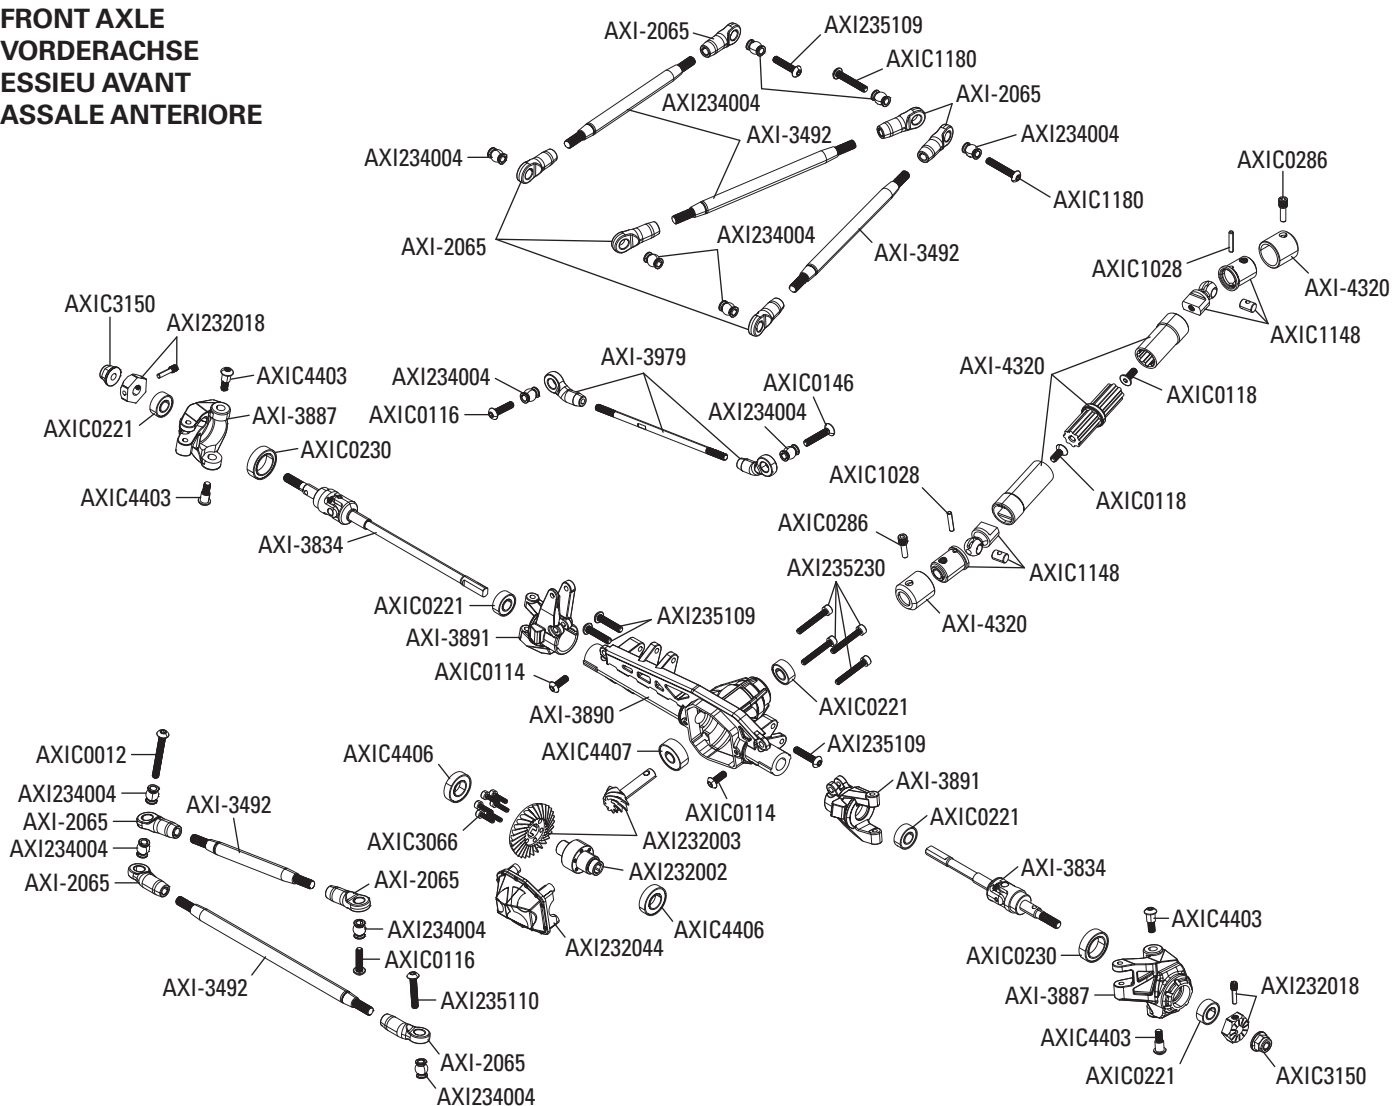

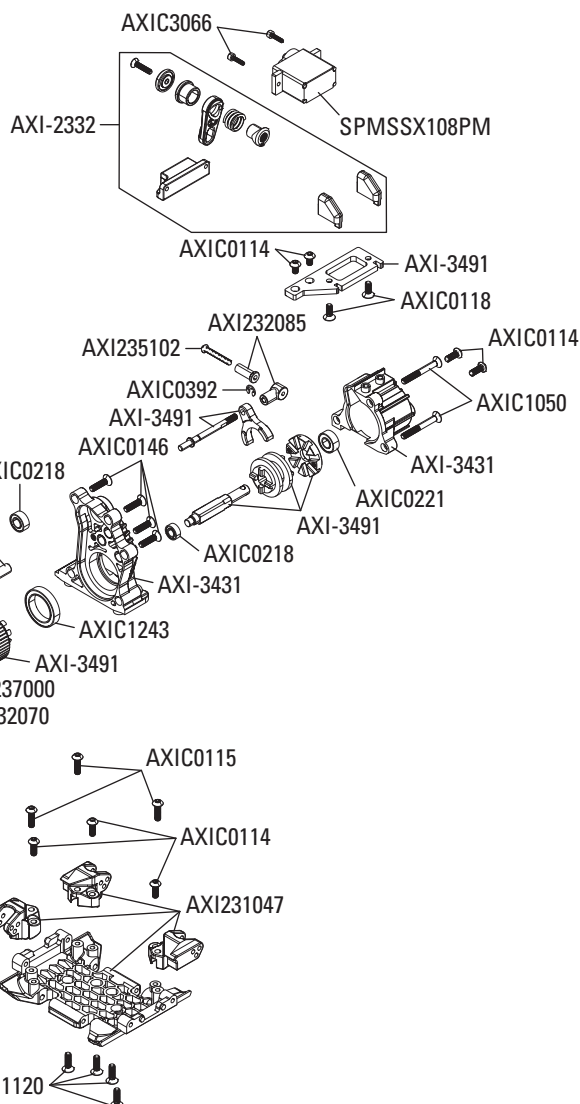

EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE

CHASSIS KAROSSERIE CHÂSSIS TELAIO

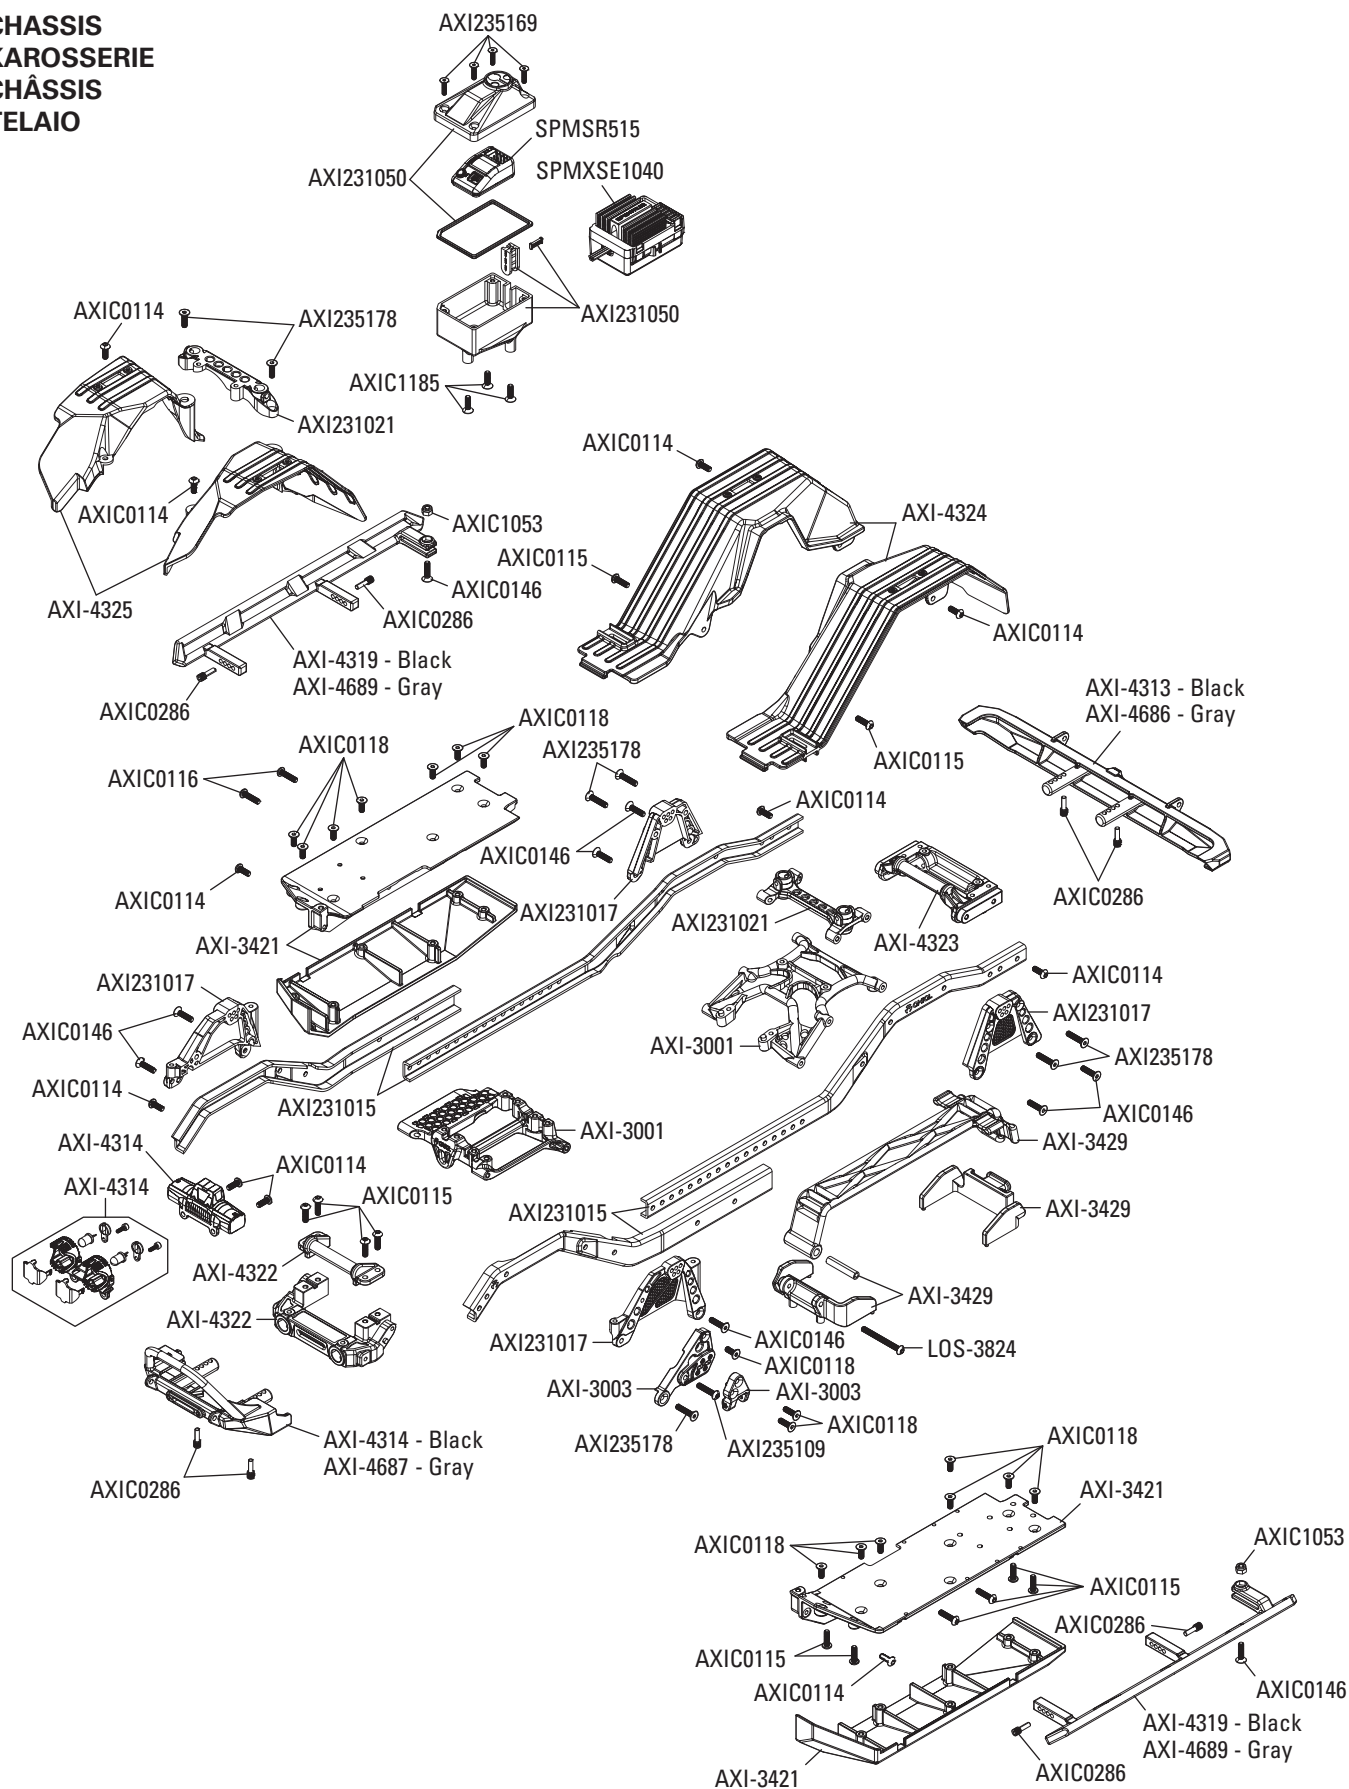


**BODY ASSEMBLY
KAROSSERIEMONTAGE
ENSEMBLE DE CARROSSERIE
GRUPPO CARROZZERIA**



EXPLODED VIEWS // EXPLOSIONSZEICHNUNGEN // VUES ÉCLATÉES // VISTE ESPLOSE

SHOCK ABSORBERS STOSSDÄMPFER AMORTISSEURS AMMORTIZZATORI

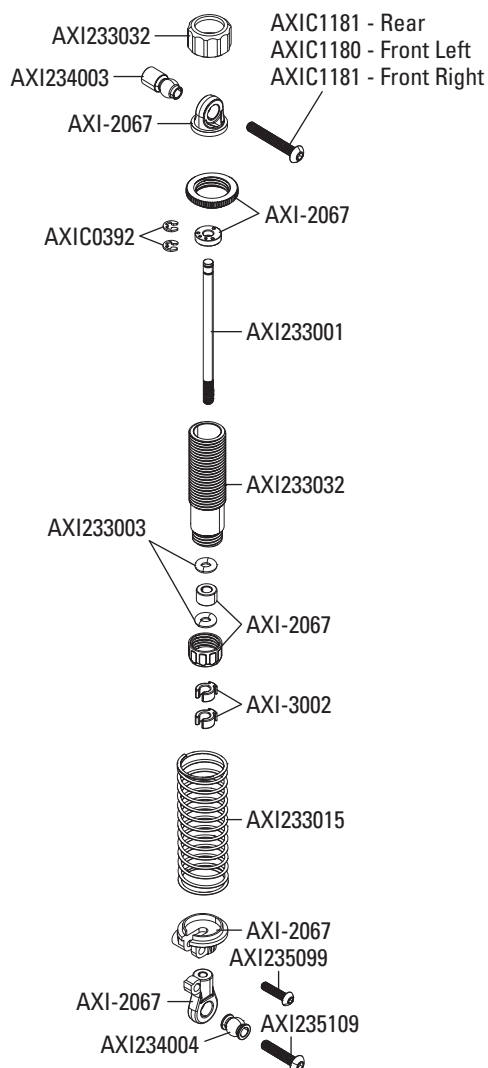

WHEELS RÄDER ROUES RUOTE



PARTS LISTS // TEILELISTEN // LISTE DES PIÈCES // ELENCO COMPONENTI

Part #	Description	Beschreibung	Description	Descrizione
AXI-1376	35-Turn 540 Brushed Motor	35T 540 Bürstenmotor	Moteur à balais 35T 540	Motore a spazzole 35T 540
AXI-2064	Servo Horn Metal, 25T: SCX10 III	Servo-Horn, Metall 25T	Renvoi de commande de servo, métallique, 25T	Squadretta servo metallo, 25T
AXI-2065	HD Rod Ends M4 (20): Capra 1.9 UTB	HD Stangenkopf M4 (20)	Embouts de bielle HD M4 (20)	Teste a snodo HD M4 (20)
AXI-2067	Shock Parts, Composite: SCX10 III BC	Stoßdämpferteile, gegossen	Pièces de l'amortisseur moulées	Parti ammortizzatore stampate
AXI-2332	Dig Transmission Mount, Servo Saver Set: Capra 1.9	Grabgetriebe-Halterungen und Servo-Saversatz: UTB	Ensemble supports et économiseur de servo de transmission dig : UTB	Set salvaservo e supporti trasmissione dig: UTB
AXI-3001	Servo Mount, Skid, Cross Members: SCX10 III HP	Servo-Halterung, Kufe, Querträger: SCX10 III HP	Support de servo, patin, traverses : SCX10 III HP	Supporto servo, pattino, traverse: SCX10 III HP
AXI-3003	Adjustable Pan Hard Mount: SCX10 III	Verstellbare Panhard-Halterungen	Montage Panhard réglable	Supporto Panhard regolabile
AXI-3492	F/R Link Set SR5: SCX10III	F/R-Verbindungssatz	Ensemble de liens A/A	Set leveraggi Av./Ind.
AXI-3834	AR45 Universal Axles (2): SCX10 III	AR45 Universalachsensatz (2)	Ensemble essieu universel AR45 (2)	Set assali universali AR45 (2)
AXI-3839	AR45 Straight Axles (2): SCX10 III	AR45P gerader Achsensatz (2)	Ensemble essieu droit AR45 (2)	Set assali dritti AR45 (2)
AXI-3862	Dig 2-Speed Arm & Shaft Set: SCX10 III	2-Geschwindigkeiten Dig-Querlenker- und Wellensatz	Ensemble bras et arbre Dig 2 vitesses	Set braccio e albero 2 velocità DIG
AXI-3871	Cog Set & Plate for Dig 2-Speed: SCX10 III	Cog-Satz und -Platte für Dig 2-Geschwindigkeiten	Jeu de pignons et plateau pour Dig 2 vitesses	Set ingranaggi e piastra per DIG a 2 velocità
AXI-3887	AR45 Steering Knuckle, L/R: SCX10 III	AR45 Lenkrolle, L/R	Rotule de direction AR45, G/D	Fusi a snodo AR45, SX/DX
AXI-3889	AR45 Axle Housing w/Diff Cover, Rear: SCX10 III	AR45 Achsgehäuse mit Differentialabdeckung, Heck	Carter d'essieu AR45 avec cache de différentiel, arrière	Alloggiamento assale AR45 con carter differenziale, posteriore
AXI-3890	AR45 Axle Housing w/Diff Cover, Front: SCX10 III	AR45 Achsgehäuse mit Differentialabdeckung, Front	Carter d'essieu AR45 avec cache de différentiel, avant	Alloggiamento assale AR45 con carter differenziale, anteriore
AXI-3891	AR45 C-Hub, L/R: SCX10	AR45 C-Nabe, L/R	Moyeu de support AR45, G/D	Portafuso a C AR45 SX/DX
AXI-3979	Panhard Bar and Rod Ends: SCX10 III Builders Kit	Panhardstab und Stangenenden: SCX10III Einbausatz	Barre Panhard et embouts de bielle : Kit de construction SCX10III	Barra Panhard Bar e teste a snodo: SCX10III Builders Kit
AXI-4307	Exterior Body Detail Parts, Jeep JT: SCX10 III MB	Karosserieteile, außen, Jeep JT: SCX10 III MB	Pièces détaillées extérieures de la carrosserie, Jeep JT : SCX10 III MB	Parti di dettaglio esterne della carrozzeria, Jeep JT: SCX10 III MB
AXI-4308	Exterior Front Hood Detail, Jeep JT: SCX10 III MB	Frontklappen-Detail, außen, Jeep JT: SCX10 III MB	Pièces détaillées extérieures du capot avant, Jeep JT : SCX10 III MB	Dettaglio esterno cofano anteriore, Jeep JT: SCX10 III MB
AXI-4309	Bed Accessories, Jeep JT: SCX10 III MB	Bett-Zubehör, Jeep JT: SCX10 III MB	Accessoires du plateau, Jeep JT : SCX10 III MB	Accessori cassone, Jeep JT: SCX10 III MB
AXI-4310	Rear Fenders, Black, Jeep JT: SCX10 III MB	Hintere Kotflügel, schwarz, Jeep JT: SCX10 III MB	Garde-boue arrière, noir, Jeep JT : SCX10 III MB	Parafanghi posteriori, neri, Jeep JT: SCX10 III MB
AXI-4311	Front Radiator and Lights, Jeep JT: SCX10 III MB	Kühler und Scheinwerfer vorne, Jeep JT: SCX10 III MB	Radiateur et feux avant, Jeep JT : SCX10 III MB	Radiatore anteriore e luci, Jeep JT: SCX10 III MB
AXI-4312	Front Fenders, Black, Jeep JT: SCX10 III MB	Vordere Kotflügel, Schwarz, Jeep JT: SCX10 III MB	Garde-boue avant, noir, Jeep JT : SCX10 III MB	Parafanghi anteriori, neri, Jeep JT: SCX10 III MB
AXI-4313	Rear Bumper, Black, Jeep JT: SCX10 III MB	Hintere Stoßstange, Schwarz, Jeep JT: SCX10 III MB	Pare-chocs arrière, noir, Jeep JT : SCX10 III MB	Paraurti posteriore, nero, Jeep JT: SCX10 III MB
AXI-4314	Front Bumper Set, Black, Jeep JT: SCX10 III MB	Stoßstangensatz vorne, schwarz, Jeep JT: SCX10 III MB	Pare-chocs avant, noir, Jeep JT : SCX10 III MB	Set paraurti anteriore, nero, Jeep JT: SCX10 III MB
AXI-4315	Jeep JT Gladiator Body Set, Clear: MB	Jeep JT Gladiator Karosseriesatz, farblos: MB	Ensemble de carrosserie Jeep JT Gladiator, transparente : MB	Set carrozzeria Jeep JT Gladiator, trasparente: MB
AXI-4316	Taillights and License Plate, Jeep JT: SCX10 III	Rücklichter und Nummernschild, Jeep JT: SCX10 III	Feux arrière et plaque d'immatriculation, Jeep JT : SCX10 III	Fanali posteriori e targa, Jeep JT: SCX10 III
AXI-4317	LED Light Set, Jeep JT: SCX10 III MB	LED-Licht-Satz, Jeep JT: SCX10 III MB	Ensemble d'éclairage DEL, Jeep JT : SCX10 III MB	Set luci a LED, Jeep JT: SCX10 III MB
AXI-4318	1.9" KMC Grenede Beadlock Wheels (2), Black	1,9" KMC Grenede Beadlock-Räder (2), schwarz	Roues à verrouillage de talon Grenade 4,5 cm (1,9 po) KMC (2), noires	Cerchi Beadlock 1.9" KMC Grenede (2), Neri
AXI-4319	Rock Sliders, Black, Jeep JT: SCX10 III MB	Rock-Schieber, Schwarz, Jeep JT: SCX10 III MB	Bas de caisse, noirs, Jeep JT : SCX10 III MB	Rock Sliders, Nero, Jeep JT: SCX10 III MB

Part #	Description	Beschreibung	Description	Descrizione
AXI-4320	Driveshaft Set, Front and Rear: SCX10 III LWB MB	Antriebswellensatz, Front und Heck: SCX10 III LWB MB	Ensemble d'arbres de transmission, avant et arrière : SCX10 III LWB MB	Set alberi di trasmissione, anteriore e posteriore: SCX10 III LWB MB
AXI-4321	Rear Suspension Link Set, Jeep JT: SCX10 III MB	Hintere Querlenker-Verbindungssatz, Jeep JTz: SCX10 III MB	Ensemble de tringlerie de suspension arrière, Jeep JT : SCX10 III MB	Set braccetti sospensioni posteriori, Jeep JT: SCX10 III MB
AXI-4322	Front Bumper Mount Set, Jeep JT: SCX10 III MB	Stoßstangenbefestigungssatz, Front, Jeep JT: SCX10 III MB	Ensemble support de pare-chocs avant, Jeep JT : SCX10 III MB	Set di supporti paraurti anteriore, Jeep JT: SCX10 III MB
AXI-4323	Rear Bumper Mount Set, Jeep JT: SCX10 III MB	Stoßstangenbefestigungssatz, Heck, Jeep JT: SCX10 III MB	Ensemble support de pare-chocs arrière, Jeep JT : SCX10 III MB	Set di supporti paraurti posteriore, Jeep JT: SCX10 III MB
AXI-4324	Rear Inner Fender Liners, Jeep JT: SCX10 III MB	Schutzbleche innen, Heck, Jeep JT: SCX10 III MB	Revêtements intérieurs de garde-boue arrière, Jeep JT : SCX10 III MB	Parafanghi interni posteriori, Jeep JT: SCX10 III MB
AXI-4325	Front Inner Fender Liners, Jeep JT: SCX10 III MB	Schutzbleche innen, Front, Jeep JT: SCX10 III MB	Revêtements intérieurs de garde-boue avant, Jeep JT : SCX10 III MB	Parafanghi interni anteriori, Jeep JT: SCX10 III MB
AXI-4329	Hex Socket Oversize Head 3x8mm (10)	Sechskant-Zylinderkopf in Übergröße M3 x 8 mm (10)	Douille à six pans à tête bombée 3 x 8 mm (10)	Vite a testa maggiorata con esagono interno 3x10 mm (10)
AXI-4686	Rear Bumper, Gray, Jeep JT: SCX10 III MB	Hintere Stoßstange, Grau, Jeep JT: SCX10 III MB	Pare-chocs arrière, gris, Jeep JT : SCX10 III MB	Paraurti posteriore, grigio, Jeep JT: SCX10 III MB
AXI-4687	Front Bumper Set, Gray, Jeep JT: SCX10 III MB	Stoßstangensatz vorne, grau, Jeep JT: SCX10 III MB	Pare-chocs avant, gris, Jeep JT : SCX10 III MB	Set paraurti anteriore, grigio, Jeep JT: SCX10 III MB
AXI-4688	1.9" KMC Grenede Beadlock Wheels (2), Gray	1,9" KMC Grenede Beadlock-Räder (2), grau	Roues à verrouillage de talon Grenade 4,5 cm (1,9 po) KMC (2), grises	Cerchi Beadlock 1.9" KMC Grenede (2), Grigi
AXI-4689	Rock Sliders, Gray, Jeep JT: SCX10 III MB	Rock-Schieber, Grau, Jeep JT: SCX10 III MB	Bas de caisse, gris, Jeep JT : SCX10 III MB	Rock Sliders, Grigio, Jeep JT: SCX10 III MB
AXI-4690	Rear Fenders, Gray Jeep JT: SCX10 III MB	Hintere Kotflügel, Grau Jeep JT: SCX10 III MB	Garde-boue arrière, Jeep JT gris : SCX10 III MB	Parafanghi posteriori, grigio, Jeep JT: SCX10 III MB
AXI-4691	Front Fenders, Gray, Jeep JT: SCX10 III MB	Vordere Kotflügel, Grau, Jeep JT: SCX10 III MB	Garde-boue avant, gris, Jeep JT : SCX10 III MB	Parafanghi anteriori, grigio, Jeep JT: SCX10 III MB
AXI231015	Frame Rail Set: SCX10 III	Rahmenschienensatz	Ensemble de rails du cadre	Set guida telaio
AXI231017	Shock Towers & Panhard Mounts, FR/RR: SCX10 III	Stoßdämpferbrücken und Panhard-Halterungen Front/Heck	Tours d'amortisseurs et supports Panhard AV/AR	Torre ammortizzatore e supporti Panhard FR/RR
AXI231021	Upper Shock Tower Braces: SCX10 III	Obere Stoßdämpferbrückenstreben	Supports de tours d'amortisseurs supérieures	Sostegni torre ammortizzatore superiori
AXI231047	Skid Plate & Upper Link Mounts: SCX10 III BC	Gleitbrett & Obere Verbindungshalterung: SCX10 III B	Plq trans et sup tringlerie centr sup : SCX10 III B	Sottoscocca & supporti bracci superiori: SCX10 III B
AXI231050	Radio Box Set, V2: SCX10 III BC	Funkbox-Satz, V2: SCX10 III BC	Coffret radio, V2 : SCX10 III BC	Set Box Radio, V2: SCX10 III BC
AXI232002	AR44 6-Bolt Differential Locker	6-Schrauben-Differenzial-Sicherung	Blocage différentiel à 6 boulons	Blocco differenziale 6 bulloni
AXI232003	6 Bolt Heavy Duty Gear Set	6-Schrauben-Schwerlast-Zahnradatz	Ensemble d'engrenages haute résistance à 6 boulons	Set ingranaggio impieghi gravosi 6 bulloni
AXI232018	12mm Hex Screw Shaft & Spacer (4): Capra 1.9 UTB	12-mm-Sechskantstift und Abstandhalter (4): UTB	Broche hexagonale 12mm et entretoise (4) : UTB	Distanziale e perno esagonale 12mm (4): UTB
AXI232024	AR45 Axle Housing (Front): SCX10 III	AR45 Achsgehäuse, Front	AR45 Carter d'essieu avant	AR45 Allogg assale ant
AXI232036	Dig/2-Speed Arm & Shaft Set: SCX10 III	Graben/2-Geschwindigkeit Arm- und Wellensatz	Ensemble de bras et arbre Dig/2 vitesses	Set albero e braccio dig/2 velocità
AXI232037	Cog Set & Plate Dig/2-Speed: SCX10 III	Zahnradatz und Platte Graben/2-Geschwindigkeit	Ensemble de pignons et plaque Dig/2 vitesses	Set denti e piastra dig/2 velocità
AXI232044	AR45P AR45 Differential Covers, Black: SCX10 III	AR45 Differentialabdeckung	AR45 Cache de différentiel	AR45 Carter diff
AXI232061	AR45 Universal Axle Set (2): SCX10 III	AR45 Universalachsensatz	AR45 Ensemble d'essieux universels	AR45 Set assale univ
AXI232062	AR45 Straight Axle Set (2): SCX10 III	AR45 Gerade Achse (2)	AR45 Essieu droit (2)	AR45 Assale dritto (2)
AXI232064	Gear Cover & Transmission Housings: LCXU	Fahrwerkabdeckung und Getriebegehäuse	Cache d'engrenage et boîtes de transmission	Carter ingranaggi e alloggiamenti trasmissione
AXI232065	Spur Gear, 56T 32P: LCXU	Stirnrad, 56T, 32P: LCXU	Engrenage roue droite, 56T, 32P : LCXU	Corona, 56T, 32P: LCXU
AXI232066	Motor Plate: LCXU	Motorplatte	Plaque moteur	Piastra motore
AXI232067	Slipper Eliminator Hub & Plate: LCXU	Gleiter-Eliminator-Nabe und -Platte	Moyeu et plaque de sabot éliminateur	Piastra e mozzo sostitutivi della frizione antisaltellamento

Part #	Description	Beschreibung	Description	Descrizione
AXI232068	Transmission Metal Gear Set: LCXU	Metallgetriebesatz	Ensemble de boîte de transmission métallique	Set ingranaggio in metallo trasmissione
AXI232070	Transmission Center Output Shaft: LCXU	Getriebe-Mittelantriebswelle	Arbre de sortie de transmission centrale	Albero di uscita centrale della trasmissione
AXI232083	Dig Cog & Plate: LCXU	Dig Cog und Platte: LCXU	Pignon et plaque Dig : LCXU	Piastra e pignone DIG: LCXU
AXI232084	Dig Outputs: LCXU	Dig-Ausgänge: LCXU	Sorties Dig : LCXU	Uscite DIG: LCXU
AXI232085	Dig Housing and Servo Adapters: LCXU	Dig-Gehäuse, Servo-Adapter: LCX	Boîtier Dig, adaptateurs servomoteur : LCX	Alloggiamento DIG, adattatori servo: LCX
AXI233001	ShockShaft,V2,M3x55mm(2):Capra1.9UTB,SCX10IIIBC	Kolbenstange, M3x53.4 (2)	Bras d'amortisseur, M3x53.4 (2)	Asta amm, M3x53.4 (2)
AXI233003	Shock O-Ring Set: Capra 1.9 UTB, SCX10III BaseCamp	O-Ring-Satz für den Stoßdämpfer: UTB	Ensemble de joints toriques d'amortisseur : UTB	Set O-Ring ammortizzatore: UTB
AXI233015	Spring 13x62mm 1.3 lbs/in,Red (2)	Feder 13 x 62 mm 1,0 lbs/in Rot weich (2)	Ressort 13 x 62 mm 1,3 lb/po rouge souple (2)	Molla 13 x 62 mm 1,3 lbs/in Rosso morbida (2)
AXI233032	Aluminum Shock Body, 11 x 39.5mm: SCX10 III BC	Gewinde-Stoßdämpfergehäuse Alum 11 x 39,5 mm	Corps d'amortisseur fileté aluminium 11 x 39,5 mm	Scocca ammortizzatore filettata in alluminio 11x39,5 mm
AXI234003	PivotBall,StainlessSteel12.75mm(4):Capra1.9UTB,BC	Kugelzapfen, Edelstahl 12,75 mm (4)	Rotule, acier inoxydable 12,75 mm (4)	Pivot ball, acciaio inox, 12,75 mm (4)
AXI234004	Susp Pivot Ball, Stainless Steel 7.5mm (10pc)	Kugelzapfen für Federung, Edelstahl 7,5 mm (10)	Rotule de suspension, acier inoxydable 7,5 mm (10)	Pivot ball sospensioni, acciaio inox 7,5 mm (10)
AXI235014	M2.5 x 10mm Cap Head Screw (10)	Inbusschraube, M2,5 x 10mm (10)	Vis d'assemblage creuse, M2,5 x 10mm (10)	Vite a testa cilindrica M2,5 x 10mm (10)
AXI235109	M3 x 14mm Button Head Screw (10)	Rundkopfschraube, M3 x 14mm (10)	Vis à tête bombée, M3 x 14mm (10)	Vite a testa tonda M3 x 14mm (10)
AXI235110	M3 x 16mm Button Head Screw (10)	Rundkopfschraube, M3 x 16mm (10)	Vis à tête bombée, M3 x 16mm (10)	Vite a testa tonda M3 x 16mm (10)
AXI235178	M3 x 14mm Flat Head Screw (10)	Sechskant-Flachkopfschraube, M3 x 14mm, schwarz (10)	Douille à six pans à tête plate M3 x 14mm noire (10)	Vite a testa piana esagonale M3 x 14mm nero (10)
AXI235230	M2.5 x 18mm Cap Head Screws (10)	Inbusschraube, M2,5 x 18mm (10)	Vis d'assemblage creuse, M2,5 x 18mm (10)	Vite a testa cilindrica M2,5 x 18mm (10)
AXI236172	Screw Shaft M3x2.0x12mm	Schraubenschaft M3 x 2 x 12mm	Tige de vis M3 x 2 x 12mm	Albero filettato M3 x 2 x 12mm
AXI237009	5mm x 13mm x 4mm Ball Bearing (2)	Lager 5mm x 13mm x 4mm	Roulement 5mm x 13mm x 4mm	Cuscinetto 5mm x 13mm x 4mm
AXI238001	LCXU Dig Conversion Kit	Dig Umrüstsatz	Kit de conversion Dig	Kit conversione DIG
AXIC0012	Hex Socket Button Head M3x25mm Black (10)	M3 x 25 mm Sechskant-Rundkopfschraube, Schwarz (10)	Vis à tête bombée creuse hexagonale M3 x 25 mm, noire (10)	Vite a testa bombata cava esagonale M3x25 mm, Nero (10)
AXIC0114	Hex Socket Button Head 3x8mm (10)	M3 x 8 mm Sechskant-Rundkopf, Schwarzoxid (10)	Douille à six pans à tête bombée M3 x 8 mm, brunie (10)	Vite a testa bombata cava esagonale M3x8 mm, Nero ossido (10)
AXIC0115	Hex Socket Button Head M3x10mm Black (10)	M3 x 10 mm Sechskant-Rundkopf Schwarz (10)	Douille à six pans à tête bombée M3 x 10 mm, noire (10)	Vite a testa bombata cava esagonale M3x10 mm, Nero (10)
AXIC0116	Hex Socket Button Head M3x12mm Black (10)	M3 x 12 mm Sechskant-Rundkopf, Schwarz (10)	Douille à six pans à tête bombée M3 x 12 mm, noire (10)	Vite a testa bombata cava esagonale M3x12 mm, Nero (10)
AXIC0118	Hex Flat Head M3X8mm Black (10)	Sechskant-Flachkopfschraube M3 x 8 mm Schwarz (10)	Vis à tête plate hexagonale M3 x 8 mm, noire (10)	Vite a testa svasata cava esagonale M3x8 mm, Nero (10)
AXIC0146	Hex Socket Flat Head M3x12mm Black (10)	M3 x 12 mm Sechskant-Flachkopfschraube, Schwarz (10)	Vis à tête plate creuse hexagonale M3 x 12 mm, noire (10)	Vite a testa svasata cava esagonale M3x12 mm, Nero (10)
AXIC0147	Hex Socket Flat Head M3x16mm, Black (10)	M3 x 16 mm Sechskant-Flachkopfschraube, Schwarz (10)	Douille à six pans à tête plate M3 x 16 mm, noire (10)	Vite a testa svasata cava esagonale M3x16 mm, Nero (10)
AXIC0218	Bearing 5x10x4mm (2)	Lager 5 x 10 x 4 mm (2)	Roulement 5 x 10 x 4 mm (2)	Cuscinetti 5x10x4 mm (2)
AXIC0221	Bearing 5x11x4mm (2)	Lager 5 x 11 x 4 mm (2)	Roulement 5 x 11 x 4 mm (2)	Cuscinetto 5x11x4 mm (2)
AXIC0225	Bearing 8x16x5mm	Lager 8 x 16 x 5 mm (2)	Roulement 8 x 16 x 5 mm (2)	Cuscinetto 8x16x5 mm (2)
AXIC0230	Bearing 10x15x4mm	Lager 10 x 15 x 4 mm	Roulement 10 x 15 x 4 mm	Cuscinetto 10x15x4 mm
AXIC0286	Screw Shaft M4x2.5x12mm (6)	Schraubenschaft M4 x 2,5 x 12 mm (6)	Tige de vis M4 x 2,5 x 12 mm (6)	Albero filettato M4x2.5x12 mm (6)
AXIC0392	AXA1392 E-Clip E2 (10)	E-Clip E2 (10)	Attache en E E2 (10)	E-Clip E2 (10)
AXIC0725	Pinion Gear 32P 14T Steel 3mm Motor Shaft	Zahnradgetriebe 32P 14T Stahl 3mm Motorwelle	Arbre de moteur à engrenages à pignons en acier 32P 14T de 3 mm	Pignone 32P 14T acciaio 3mm albero motore

Part #	Description	Beschreibung	Description	Descrizione
AXIC1009	Hex Socket Oversize Head 3x10mm (10)	M3 x 10 mm Übergröße-Flachkopf (10)	Tête surdimensionnée creuse hexagonale 3 x 10 mm (10)	Vite con testa esagonale maggiorata 3x10 mm (10 pezzi)
AXIC1028	Pin 2.0x11mm (6)	Stift 2,0x11mm (6)	Goupille 2,0 x 11 mm (6)	Perno 2,0x11 mm (6)
AXIC1045	AXA1045 Nylon Locknut M4 Black (10)	Nylon-Feststellmutter M4 Schwarz (10)	Contre-écrou en nylon M4, noir (10)	Controdado nylon M4, Nero (10)
AXIC1148	AX31148 WB8-HD Driveshaft Coupler Set Yeti	WB8-HD-Antriebswellenkupplungssatz Yeti	Ensemble de couplage d'arbre de transmission Yeti WB8-HD	Set accoppiamento albero trasmissione WB8-HD Yeti
AXIC1180	Hex Socket Button Head M3x18mm (10)	Sechskant-Rundkopfschraube M3 x 18 mm (10)	Vis à tête bombée creuse hexagonale M3 x 18 mm (10)	Vite testa bombata cava esagonale M3x18 mm (10)
AXIC1181	Hex Socket Button Head M3x20mm (10)	Sechskant-Rundkopfschraube M3 x 20 mm (10)	Douille à six pans à tête bombée M3 x 20 mm (10)	Vite testa bombata cava esagonale M3x20 mm (10)
AXIC3066	Cap Head M2x8mm Black (10)	Inbusschraube M2 x 8 mm Schwarz (10)	Vis d'assemblage creuse M2 x 8 mm, noire (10)	Vite a testa cilindrica M2x8 mm, Nero (10)
AXIC4403	M3x4x10mm Hex Button Head Shoulder Screw (6)	Sechskant-Pass-Schulter-schraube M 3 x 4 x 10mm (6)	Vis à épaulement à six pans creuse à tête bombée M3 x 4 x 10 mm (6)	Vite a brugola testa bombata spalla liscia M3x4x10mm (6)
AXIC4406	Bearing 7x14x3.5mm (2)	Lager 7 x 14 x 3,5 mm (2)	Roulement 7 x 14 x 3,5 mm (2)	Cuscinetto 7x14x3,5 mm (2)
AXIC4407	Bearing 5x14x5mm (2)	Lager 5 x 14 x 5 mm (2)	Roulement 5 x 14 x 5 mm (2)	Cuscinetto 5x14x5 mm (2)
SPMRSLT380	SLT3 3CH 2.4Ghz Transmitter Only - Axial Programming	Nur SLT3 3-Kanal SLT-Sender	Émetteur SLT à 3 canaux SLT3 uniquement	SLT3 3 canali solo trasmittente
SPMS683	S683 Steel Gear Servo 25T, WP	683 Standard Wasserdichtes Metallgetriebe Servo 25T	Servo étanche à engrenages métalliques standard 683 25T	Servo 683 impermeabile standard con ingranaggi in metallo 25T
SPMSR515	SR515 DSMR 5 CH Receiver	DSMR-Sportempfänger SR515 mit 5 Kanälen	Récepteur sport DSMR à 5 canaux SR515	SR515 DSMR Sport, ricevitore, 5 canali
SPMSSX108PM	SX108 Micro Gear Servo	SX108 Mikro-Metallgetriebeservo	Micro servo à engrenage métallique SX108	Servo micro ingranaggi metallo SX108
SPMXSE1040	Firma 40A Brushed WP ESC : IC3	Firma 40A wasserdichter Geschwindigkeitsregler mit Bürstenmotor 2S-3S: IC3	Contrôle de vitesse électronique étanche à balais Firma 40 A, 2S-3S : IC3	ESC Firma 40A a spazzole impermeabile, 2S-3S: IC3

OPTIONAL PARTS // OPTIONALE TEILE // PIÈCES EN OPTION // PARTI OPZIONALI

Part #	Description	Beschreibung	Description	Descrizione
AXI-3012	6-Bolt 27/8 Heavy Duty Overdrive Gear Set	6 Schrauben 27/8 robuster Overdrive-Zahnradatz	Ensemble d'engrenages de surmultiplicateur haute résistance 27/8 à 6 boulons	Set ingranaggi overdrive per impieghi gravosi 27/8 a 6 bulloni
AXI230048	Body Post Set: SCX10 III BC	Gehäusestangensatz	Ensemble poteaux carrosserie	Kit supporti scocca
AXI43009	1.9 KMC Machete Beadlock Wheels, Satin (2)	1.9 KMC Machete Beadlock-Räder, Satin (2)	Roues à verrou de talon Machete 1,9 KMC, satinées (2)	1.9 KMC Ruote Machete Beadlock, Satinato (2 pz)
AXI70000	Axial Foam Pit Mat, 24 x 48	Axiale Schaumstoff-Boxenmatte, 24"x 48"	Pit mat en mousse Axial, 24 po x 48 po	Tappetino in schiuma assiale, 24"x 48"
AXIC2014	AX12014 Gate Marker Set Green/Orange (10)	AX12014 Gate Marker-Set Grün/Orange (10)	Ensemble de marqueurs de porte vert orange AX12014 (10)	AX12014 Set di marcatori per cancelli verde arancione (10)
DYNT0500	Startup Tool Set: ECX/VTR/HPI	Betriebsbereiter Anfänger-Werkzeugsatz	Ensemble d'outils de démarrage prêt à rouler	Set di strumenti di avvio pronti all'uso
DYNT1260	Shock Shaft Pliers/Multi-Tool	Kolbenstangenzeuge/Multifunktionswerkzeug	Pincettes de bras d'amortisseurs/Outil multifonctions	Pinze/utensile multifunzione per aste ammortizzatori
PRO1012810	Hyrax 1.9 G8 Mtd Impulse Black Whls (2)	1/10 Hyrax G8 F/R 1,9" Crawler montierte Reifen 12mm Black Impulse (2)	Pneus AV/AR de 1,9 po Hyrax G8 à l'échelle 1/10 pour crawlers, montés en 12 mm, Black Impulse (2)	Ruote 1/10 Hyrax G8 Ant./Post. 1.9" montate su Impulse 12 mm neri (2)
PRO1013615	Limited Edition BFG Krawler T/A KX G8 1.9" Crawler Tires Mounted 12mm Bronze Impulse (2)	Limitierte Auflage BFG Krawler T/A KX G8 1.9" Crawler-Reifen montiert 12mm, Bronze Impulse (2)	Pneus Crawler 1,9 po BFG Krawler T/A KX G8 en édition limitée, montés sur jantes 12 mm, Bronze Impulse (2)	Pneumatici Limited Edition BFG Krawler T/A KX G8 1.9" Crawler su cerchi 12 mm bronzati (2)
PRO1021315	Limited Edition Mickey Thompson Baja Pro X G8 1.9" Crawler Tires Mounted 12mm Bronze Impulse (2)	Limitierte Auflage Mickey Thompson Baja Pro X G8 1.9" Crawler-Reifen montiert 12mm, Bronze Impulse (2)	Pneus Crawler 1,9 po Mickey Thompson Baja Pro X G8 en édition limitée, montés sur jantes 12 mm, Bronze Impulse (2)	Pneumatici Limited Edition Mickey Thompson Baja Pro X G8 1.9" Crawler su cerchi bronzati 12 mm (2)
PRO1025403	Aztek 1.9" Predator (Super Soft) Rock Crawling Truck Tires (2) for Front or Rear	1/10 Aztek Predator Front/Heck 1,9" Rock Crawling Reifen (2)	Pneus d'avancée sur les roches 1,9 po avant/arrière Aztek Predator 1/10 (2)	Ruote 1/10 Aztek Predator Ant./Post. 1.9" Rock Crawling (2)

Part #	Description	Beschreibung	Description	Descrizione
PRO1025415	Limited Edition Aztek G8 1.9" Crawler Tires Mounted 12mm Bronze Impulse (2)	Limitierte Auflage Aztek G8 1.9" Crawler-Reifen montiert 12mm, Bronze Impulse (2)	Pneus Crawler 1,9 po Aztek G8 en édition limitée, montés sur jantes 12 mm, Bronze Impulse (2)	Pneumatici Limited Edition Aztek G8 1.9" Crawler su cerchi 12 mm bronzati (2)
PRO278100	Rock Shooter 1.9 Alum Bead-Loc Wheels Crawlers F/R	Rock Shooter 1.9 Alum Bead-Loc Räder Crawler F/R	Roues 1,9 po à verrou de talon Crawler en aluminium Rock Shooter avant/arrière	Cerchi Rock Shooter 1.9 Alum Bead-Loc Crawler A/R
PRO358500	1/10 2015 Chevrolet Silverado Clr Bdy 13.9 WB	1/10 2015 Chevrolet Silverado Clr Karosserie 13.9 WB	Carrosserie transparente 1/10 Chevrolet Silverado 2015, empattement 13,9	Carrozzeria 1/10 2015 Chevrolet Silverado 13,9 WB trasparente
SPMR62200	DX Rugged+ TX Only- Orange	DX6 Robuster 6-Kanal DSMR-Sender nur	Émetteur DSMR à 6 canaux DX6 Rugged uniquement	Solo trasmettente DSMR DX6 Rugged a 6 canali
SPMSS7110	Spektrum 1/10 Servo Winch	S7110 Flache Servo Winde: 1/10 Rock Crawler	Bobine de servo à profil bas S7110 : Rock Crawlers 1/10	S7110 argano servo basso profilo: 1/10 Rock Crawlers
SPMX-1016	UBEC 10A (2-6S)	UBEC 10A (2-6S)	UBEC 10 A (2-6S)	UBEC 10A (2-6S)
SPMXBC200	XBC200 Smart Battery Checker & Servo Tester	XBC200 SMART-Akkuprüfer und Servotreiber	Contrôleur et servomoteur pour batterie SMART XBC200	Servo driver e tester batteria Smart XBC200
SPMXC2010	Smart S2200 G2 AC Charger, 2x200W	S2200 G2 AC 2x200W Smart Ladegerät	Chargeur Smart 2 x 200 W CA G2 S2200	Caricabatterie Smart S2200 G2 CA 2x200 W
SPMXC2020	Smart S1200 G2 AC Charger, 1x200W	S1200 G2 AC 1x200 W Smart-Ladegerät	Chargeur Smart 1 x 200 W c.a. G2 S1200	Caricabatterie Smart S1200 G2 CA 1x200W
SPMXC2080	Smart S1100 AC Charger, 1x100W	S1100 G2 1x100W AC Smart-Ladegerät	Chargeur Smart CA 1 x 100 W G2 S1100	Caricabatterie Smart S1100 G2 1x100 W CA
SPMXSEMC09	Firma 60A BL Smart ESC/2800Kv Sense Mot Crawl Com	Firma 60A Bürstenloser Smart-Geschwindigkeitsregler / 2800 Kv Motor mit Sensor Crawler Combo	Combo variateur ESC sans balais 60 A Smart Firma / moteur Crawler avec capteurs 2800 Kv	Combo Smart ESC Firma 60 A Brushless / Motore con sensori 2800 Kv

ELECTRONICS // ELEKTRONIK // COMPOSANTS ÉLECTRONIQUES // ELETTRONICA

Part #	Description	Beschreibung	Description	Descrizione
AXI-1376	Axial Slickrock 35T 540 Brushed Motor	540-Bürstenmotor mit 35 Turns	Moteur à balais Slickrock 35T 540 Axial	Motore a spazzole Axial Slickrock 35T 540
SPMRSLT380	SLT3 3-Channel 2.4Ghz SLT Transmitter Only	Nur SLT3 3-Kanal 2.4 Ghz SLT-Sender	Émetteur SLT à 3 canaux 2,4 Ghz SLT3 uniquement	SLT3 3 canali 2,4 Ghz SLT solo trasmettente
SPMS683	S683 Standard Waterproof Metal Gear Servo 25T	683 Standard Wasserdichtes Metallgetriebe Servo 25T	Servo étanche à engrenages métalliques standard 683 25T	Servo 683 impermeabile standard con ingranaggi in metallo 25T
SPMSR515	SR515 DSMR 5-Channel Sport Receiver	Spektrum™ SR515 DSMR Sport-Empfänger mit 5 Kanälen	Récepteur sport DSMR 5 canaux SR515	Ricevitore SR515 DSMR 5 Canali Sport
SPMSSX108PM	SX108 Micro Metal Gear Servo	SX108 Mikro-Metallgetriebeservo	Micro servo à engrenage métallique SX108	Servo micro ingranaggi metallo SX108
SPMXSE1040	Firma 40A Brushed Waterproof ESC, 2S-3S: IC3	Firma 40A Bürstenloser, wasserdichter Geschwindigkeitsregler, 2S-3S: IC3	Contrôle de vitesse électronique étanche à balais Firma 40A, 2S-3S : IC3	Firma 40A Brushed Waterproof ESC, 2S-3S: IC3



We. Build. Adventure.

facebook.com/axialinc | instagram.com/axialadventure/
twitter.com/axialrc | youtube.com/axialvideos



©2026 Horizon Hobby, LLC. Axial, the Axial logo, IC3, SLT3, Firma, SCX10, and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC. The Spektrum trademark is used with permission of Bachmann Industries, Inc. Jeep, the Jeep grille and related logos, vehicle model names and trade dress are trademarks of FCA US LLC and used under license by Horizon Hobby, LLC, ©2026 FCA US LLC.

The KMC Wheels name and logo are property of WheelPros, LLC and are used under license. All other trademarks, service marks and logos are property of their respective logos. US 9,930,567. US 10,419,970. US 10,849,013. Other patents pending.

Created 3/26

AXI-2443

1322874