

Motolyser Blue Tooth-Module #20519

This is version 2 of the Blue Tooth Module and will work with both Motolyser1 and Motolyser2.

Warning! Please be very careful when opening your Motolyser. Don't do this if you are not used to work in electronics devices. The products warranties are NOT covering your work for this modification.

Assembly instructions Motolyser 2




1. Remove the four Philips screws

2. Carefully mount the blue tooth module on the 10pin connector.

3. Tighten the four Philips screws carefully

Great job, you are done!

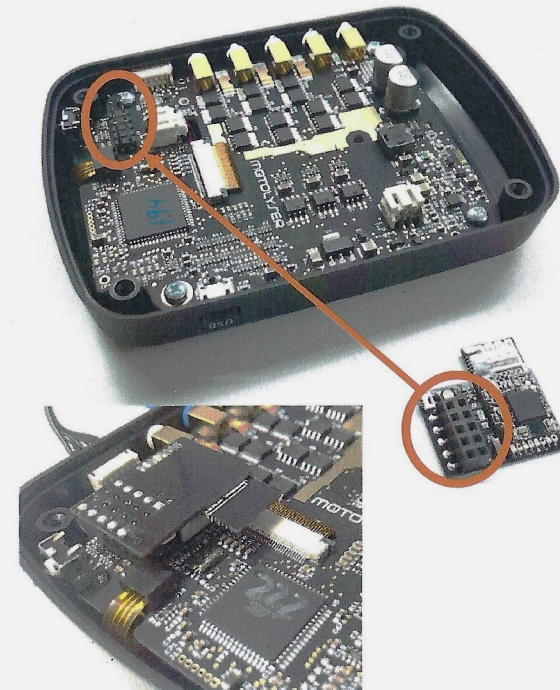

Assembly instructions Motolyser 1



1. Carefully lift up the four rubber feet's and remove the four Philips screws

2. Carefully mount the blue tooth module on the 10pin connector.

3. Tighten the four Philips screws carefully and mount the four rubber feet's

Great job, you are done!

