

HOW TO USE THESE INSTRUCTIONS: READ ALL INSTRUCTIONS BEFORE STARTING WORK ON THIS MODEL

- A. This rocket, incorporating basic model rocketry construction techniques, will help you in the development of your rocketry modeling skills.
- B. Read each step first and visualize the procedure thoroughly in your mind before starting construction.
- C. Lay parts out on the table in front of you. (Check inside tubes for any small parts.)
- D. Use exploded view to match all parts contained in kit.
- E. Collect all construction supplies that are not included in the kit.
- F. Test fit parts before applying any glue. Sand parts as necessary for proper fit.
- G. The construction supplies required for each step are listed at the beginning of each step.
- H. Check off each step as you complete it.

CONSTRUCTION SUPPLIES

In addition to the parts included in your kit, you will need these construction supplies. Each step shows which supplies will be required.



SCISSORS PENCIL





KNIFE



SAND-

PAPER



MASKING PLASTIC

TAPE



SPRAY


GLUE

WHITE


OR YELLOW)



GLUE IS APPLIED TO SURFACES SHOWN IN RED

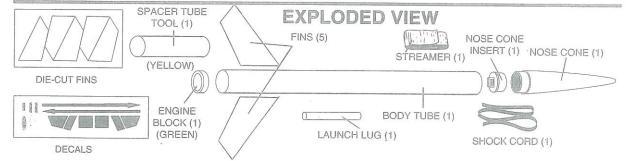

EXTREMELY IMPORTANT: THE EXPLODED VIEW IS FOR REFERENCE ONLY! DO NOT USE THIS DRAWING ALONE TO ASSEMBLE THIS MODEL. The exploded view is only intended to assist you in locating the parts included in this kit. Refer back to this exploded view as you build your model step by step. This method will help you to put the parts into perspective as you progress through the construction.

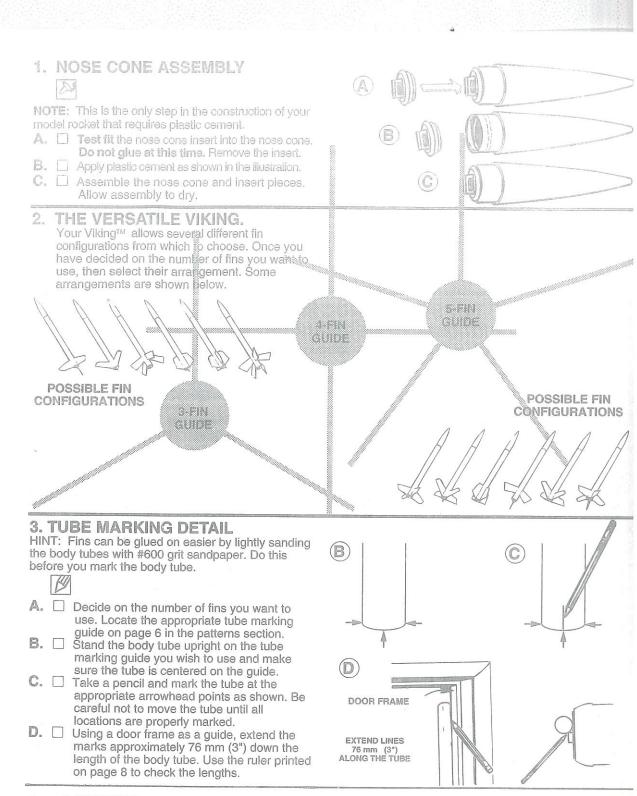

4. FIN PREPARATION NOTE: Read before proceeding with this step. · Since your fins are not completely cut out of the white card stock, you will need to work carefully with your hobby knife to free the fins from the card. · Be sure to cut completely around each fin outline before attempting to remove fins from the card. · Check both sides of the card to make sure you cut (B) Pay close attention to the corner areas where die cutting is not complete. · As you cut around each fin, cut away from the adjacent fins so you will not damage the other fins on the card. A. Free the fins from the card stock with your hobby knife. B. Keep a piece of scrap card to use as a glue applicator in step 5E. Lay sandpaper, rough face up, on your table. Stack the fins together and lightly sand the edges smooth and flat. 5. ENGINE BLOCK INSTALLATION YELLOW BODY TUBE GREEN SPACER TUBE ENGINE TOOL A. \(\sum \) You will need the body tube, green engine block and yellow spacer tube tool for this 6 mm (1/4") B. Mark the yellow spacer tube 6mm (1/4") from one end using the ruler on page 8. C. Lay the rear of the body tube on the ruler at zero as shown. D. Measure approximately 32 mm (1-1/4") from 32 mm (1-1/4) the rear of the body tube. This gives you an idea of where inside the tube you will be spreading glue. E. Using the scrap card glue applicator, spread glue around the inside of the tube at approximately 32 mm (1-1/4") from the end. F. Insert the green engine block into the tube. NOTE: The spacer tube is a tool and must be removed as soon as you match the mark with the end of the body tube. Don't accidentally glue the tool into the rocket. G. Use the yellow spacer tube to push engine block into the body tube until mark is even with the end of the tube.

Remove spacer tube quickly before glue sets

and discard.

6. FIN ATTACHMENT LEADING EDGE NOTE: Before gluing your fins, match the fin shape to the fin pattern shown in this step. Identify the root edge that will be glued to the body tube and the front (leading) edge. This will help you attach your fins correctly. Remember: Fins must be attached correctly for A. Apply a thin film of glue to the root edge of one B. Set the rear edge of the fin at end of body tube and gently press the root edge along the body tube fin line. C. Remove and allow glue to become tacky. Add a bit more glue to the same fin. D. ☐ Place back on tube line. E. Carefully adjust the fin, if needed, so it will project straight up from body tube as shown. Work slowly and carefully so as not to disturb the glue joint. Attach remaining fins in the same manner. (E) Do not set rocket on fins while glue is wet. F. After all fins are attached, use shaded end view on page 2 to check proper fin spacing. G. Important Stand rocket on table as shown. Allow fins to dry before proceeding. At this point, it's a good idea to rest for a few minutes. Get up and stretch or read through the next steps before doing any more work. 7. LAUNCH LUG ATTACHMENT (A) A. Run a line of glue along one side of the launch lug and place the lug against any one of the body tube/fin joints. B. Smooth out the excess glue. (B) \mathbb{C} . \square Make sure the launch lug is aligned with the body tube as shown on the end view. Allow

A

8. GLUE REINFORCEMENT DETAIL

NOTE: Glue joint reinforcements or fillets are important because they help blend the fins, launch

strengthens the attachment points.

lugs or other components into the body tube. This blending improves the looks of your model, allows smoother air flow over your rocket during flight and

| | | 4 |
|----------|--|-----------|
| | Reinforce each fin/body tube joint with glue. Use your finger to help smooth the glue fillet. Stand rocket on table as shown. Wipe away any excess glue that may run down the side of the body tube. Allow to dry. | B 2 |
| 9. | SHOCK CORD MOUNT ASSEMBLY | B |
| А. В. | Locate the shock mount on page 6. Cut out the shock cord mount along the solid black outline. | |
| C. D. | Spread glue on section 2 and lay end of shock cord into glue at a slight diagonal as | D E |
| E. F. | shown. Fold section 1 forward. Apply glue to section 3. Fold forward again. Clamp firmly with your fingers until glue dries. | |
| | | F |
| 10 | SHOCK CORD MOUNT ATTACHMENT | 25 mm (A) |
| A. | Measure approximately 25 mm (1") from the front end of the body tube. | |
| В. С. | tube. Set the mount back at least 25 mm (1") to | VES B |
| D. | allow for nose cone clearance and press mount firmly into glue as shown. Hold until glue sets. | NO NO |
| 11 | . FINISHING YOUR ROCKET | |
| A. B. | the glue joints are completely dry. Optional: For a smoother and better looking finish, spray a coat of automotive primer on | |
| | your rocket. Do not apply too much. Lightly sand the rocket with a 400 to 600 grit sandpaper. Apply another coat if needed. Sand between coats. The primer will allow the final coats of paint to adhere better to the rocket. Several light mist coats of paint are preferable. Too much paint will add to the rocket's weight. | |


- Refer to the illustration on the front of the color panel for paint locations and decal placement. Mask the shoulder with tape to prevent overspray. Suspend nose cone from a string and paint. Allow to dry.
 Use spray enamel to paint your model rocket
- **D.** Use spray enamel to paint your model rocket. Roll a piece of paper into the rear as shown to hold the model while painting.

12. RECOVERY DEVICE ATTACHMENT




- A. Cut a 25 mm (1") long piece of 19 mm (3/4") wide masking tape.
- **B.** Lay end of shock cord over end of streamer material as shown and tape shock cord and streamer together.
- C. Press tape down firmly to assure a strong bond.
- D.

 Tie free end of shock cord to nose cone. Use double knot.
- E. Roll streamer. Insert streamer, shock cord and nose cone into the Reliant body. Recovery device should slide easily into body tube. If too tight, unfold and repack. Your assembly is now finished.

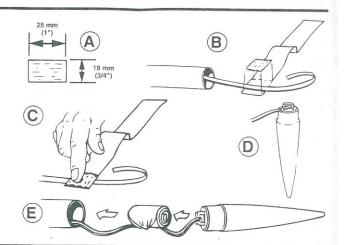


SHOCK CORD MOUNT SEC. 3 SEC. 2

Shock Cord Pattern

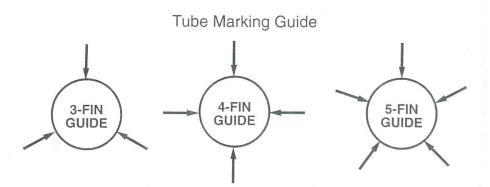

ROCKET PREFLIGHT


- Crumple and insert 1 square of recovery wadding.
- B. Pack Streamer.
- Insert shock cord, streamer, and nose cone.

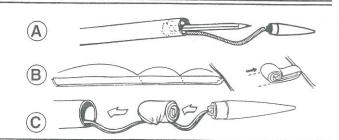



WHAT TO EXPECT WHEN FLYING YOUR VIKING™ ROCKET

The Viking™ with its multiple fin configuration allows the rocket modeler the unique ability to build one of 48 different versions. It's perfect for schools or great for experimentation. You can build several versions of the Viking™ with different numbers of fins, or fin configurations., and then compare each design's flight performance. The simple streamer gives the rocket a quick and safe recovery. The streamer is perfect for small fields. But be careful! A "C" or even a "B" engine will put your Viking™ out of sight. Make sure you and your recovery crew have sharp eyes when you use the larger engines.

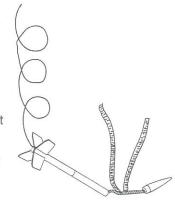

TUMBLE RECOVERY

PREPARE ENGINE

LAUNCH

NOTE: Igniter plugs come with rocket engines. If your engines did not WRAP TAPE AROUND ENGINE come with plugs, follow the instructions that came with the engines. TO FRICTION FIT IT INTO BODY. **ENGINES MUST NOT EJECT** FROM ROCKET. SEPARATE IGNITER AND IGNITER PLUG HOLD **IGNITER ENGINE** MUST UPRIGHT, TOUCH INSERT DROP IN **PROPELLANT** FIRMLY BEND ENGINE **IGNITER** INSERT **IGNITER PUSH ALL** INTO **IGNITER** WIRES BACK THE WAY IN ROCKET **PLUG**

LAUNCH SUPPLIES

To launch your rocket you will need the following items:

- -Estes Electrical Launch Controller and Launch Pad
- -Estes Recovery Wadding No. 2274
- -Recommended Estes Engines: A8-3 (First Flight), A8-5, B4-4, B6-4, B8-5, C6-5, C6-7.

To become familiar with your rocket's flight pattern, use a A8-3 engine for your first flight.

Use only Estes products to launch this rocket.

FLYING YOUR ROCKET

- Choose a large field away from power lines, tall trees, and low flying aircraft. Try to find a field at least 250 feet (76 meters) square. The larger the launch area, the better your chance of recovering your rocket. Football fields and playgrounds are great.
- Launch area must be free of dry weeds and brown grass.
- Launch only during calm weather with little or no wind and good visibility.

MISFIRES

If the igniter functions properly but the propellant does not ignite, keep in mind the following: An Estes igniter will function properly even if the coated tip is chipped. However, if the coated tip is not in direct contact with the engine propellant, it will only heat and not ignite the engine.

When an ignition failure occurs, remove the safety key from the launch control system and wait one minute before approaching the rocket. Remove the expended igniter from the engine and install a new one. Be certain the coated tip is in direct contact with the engine propellant, then reinstall the igniter plug as illustrated above. Repeat the countdown and launch procedure.


FOR YOUR SAFETY AND ENJOYMENT

Always follow the NAR* MODEL ROCKETRY SAFETY CODE while participating in any model rocketry activities.

*National Association of Rocketry

If you use the ultrasafe E2™ or Command Launch Controllers to fly your models, use the following launch steps.

- A. After attaching micro-clips, etc., insert the safety key into the controller receptacle. If the igniter clips have been attached properly to the igniter, the red L.E.D. will now begin to flash on and off and the audio continuity indicator will beep on and off.
- B. Hold the yellow (left) arm button down. The L.E.D. will stop flashing and the audio indicator will produce a steady tone.
- C Verbally count down from five to zero loud enough for the bystanders to hear. Still holding the yellow arm button down, push and hold the orange (right) button down until the rocket ignites and lifts off.

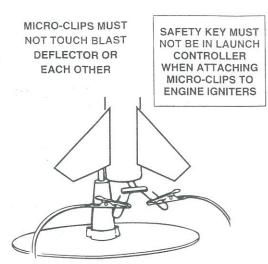

COUNTDOWN AND LAUNCH

- ® BE CERTAIN SAFETY KEY IS NOT IN LAUNCH CONTROLLER.
- Remove safety cap and slide launch lug over launch rod to place rocket on launch pad. Make sure the rocket slides freely on the launch rod.
- 8 Attach micro-clips to the igniter wires. Arrange the clips so they do not touch each other or the metal blast deflector. Attach clips as close to protective tape on igniter as possible.
- Move back from your rocket as far as launch wire will permit (at least 15 feet - 5 meters).
- (6) INSERT SAFETY KEY to arm the launch controller. Give audible countdown 5...4...3...2...1

LAUNCH!!

PUSH AND HOLD LAUNCH BUTTON UNTIL ENGINE IGNITES

REMOVE SAFETY KEY FROM LAUNCH CONTROLLER. REPLACE SAFETY KEY AND SAFETY CAP ON LAUNCH ROD.