

micro CALYPSO™

INSTRUCTION MANUAL

RTF
READY-TO-FLY

Tx-R
TRANSMITTER-READY

- ▶ **WINGSPAN**
24.8 in [630 mm]
- ▶ **LENGTH**
19.1 in [485 mm]
- ▶ **WEIGHT**
1.90 oz [54 g]

Flyzone
how high will you soar



NOTICE

All instructions, warranties and other collateral documents are subject to change at the sole discretion of Horizon Hobby, LLC. For up-to-date product literature, visit www.horizonhobby.com and click on the support tab for this product.

MEANING OF SPECIAL LANGUAGE

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND little or no possibility of injury.

WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this Product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not use with incompatible components or alter this product in any way outside of the instructions provided by Horizon Hobby, LLC. This manual contains instructions for safety, operation and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

14+ AGE RECOMMENDATION: Not for children under 14 years. This is not a toy.

READ THROUGH THIS MANUAL BEFORE STARTING CONSTRUCTION.
It contains important instructions and warnings concerning the assembly and use of this model.



WARNING: This product may use a lithium polymer (LiPo) battery. Improper handling may result in FIRE! You are responsible for following all safety precautions as outlined in this instruction manual.

WARNINGS



WARNING: For your safety please read and understand these warnings.

Radio control models are not toys. Serious injury to persons or damage to property can result if they are not used in a responsible manner.

Read all instructions carefully prior to assembling and before flying this model. Seek advice should any information be unclear. You assume all risk and responsibility when using this model.

General Warnings

- Never fly your aircraft from the street or at night. Always fly in an open area free of obstructions.
- When flying, make sure any spectators are behind you.
- Always be conscious of the spinning propeller. Be careful not to allow loose clothing to be drawn into the propeller.
- Because your aircraft is operated by radio control, it is important to make sure you are always using fresh and/or fully charged batteries. Never allow the batteries to run low, or you could lose control of the aircraft.
- Never attempt to disassemble any of the aircraft's components, especially the electronics.
- Do not allow any of the electrical components to get wet, or electrical damage may occur.
- You should complete a successful range check of your radio equipment prior to each new day of flying, or prior to the first flight of a new or repaired aircraft.
- If your aircraft gets dirty, do not use any solvents to clean it. Solvents will damage the foam and plastic. Use a dry cloth to clean any dirt from outside of the aircraft.
- This product includes small and sharp-edged parts. Always assemble and keep this product out of children's reach.
- Do not fly your airplane on days with strong winds or side winds.
- When not using the model, always take the battery out of the plane and switch off the transmitter. Also, remove the batteries from the transmitter as batteries may overheat or leak, causing damage.
- Do not store this model in a high-temperature/humidity area or in direct sunlight.
- The wing is designed to pop off in a crash to minimize damage. Prolonged vertical dives with abrupt "pull-outs" should be avoided.

Radio Control System Warnings

- **Always turn on your transmitter before turning on the aircraft and always remove the battery from the aircraft before turning off your transmitter.**
- Always unplug the battery when not flying the aircraft.
- Never cut the receiver antenna shorter, or you could lose control of the aircraft during flight.
- Never attempt to disassemble or modify any of the radio control system components.

LiPo Battery Warnings




WARNING: You must read this before charging the battery.

- All instructions, warnings, and cautions must be followed at all times. Failure to do so can lead to serious injury or fire. Do NOT use this product before reading and understanding all directions and warnings.
- Do NOT use or charge if the battery is hot or swollen.
- Do NOT leave in direct sunlight or in a hot car or storage area. Do NOT get wet or expose to moisture.
- Do NOT overcharge. Maximum voltage for each battery must be followed.
- Do NOT short-circuit the battery. Check polarity, then connect the battery to the charger.
- Do NOT leave the battery connected when not in use.
- Do NOT operate or charge unattended.
- Do NOT use the battery if you do not understand the warnings and proper use of the battery.
- Always let the battery cool and "rest" between uses and charging. Do NOT charge inside your car or inside your house.
- Inspect the battery before each use for swelling or other malformation. If the battery has swelled, it MUST be discarded.
- Do NOT poke, bend or damage the battery. The outer casing is soft and can be damaged.
- The battery must never exceed 71° C (160° F) for any reason.


Battery Recycling

ATTENTION: The Micro Calypso is powered by a rechargeable battery. At the end of the battery's useful life, under various state and local laws, it may be illegal to dispose of the battery into the municipal waste system. Check with your local solid waste officials for details in your area for recycling options or proper disposal. We encourage contacting your local recycling center for more information.

ITEMS INCLUDED

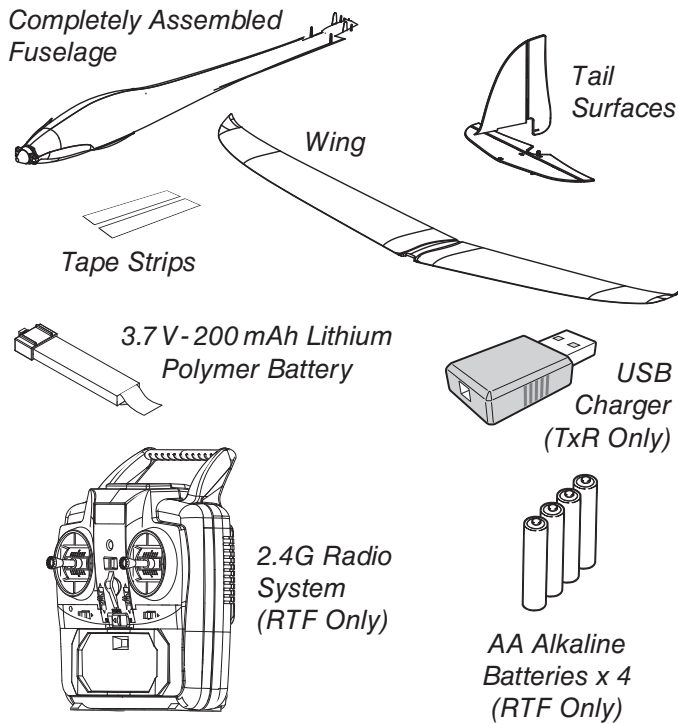


PARTS GUIDE

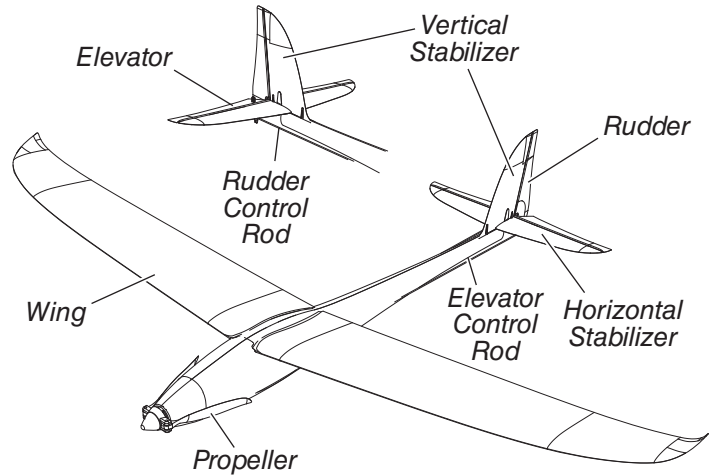


RTF TRANSMITTER

MODE 2 SHOWN. SEE PAGE 9 FOR MODE 1.

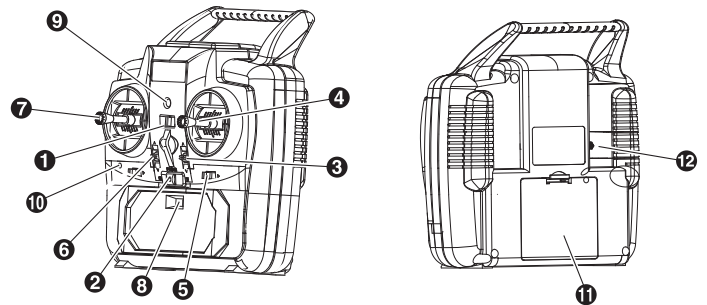

- 1 Mode Change Switch**
- 2 Power Switch**
- 3 Elevator Trim (Up/Down)**
Adjust up/down so plane flies horizontal.
- 4 Elevator Stick (Up/Down)**
Controls plane's upwards/downwards movement.
Rudder Stick (Left/Right)
Controls plane's left/right movement.
- 5 Rudder Trim (Left/Right)**
Adjust left/right so plane flies straight.
- 6 Throttle Trim (Up/Down)**
Adjusts throttle so motor will not move at the down position.
- 7 Throttle Stick (Up/Down)**
Controls propeller speed.
- 8 Function Selector**
Additional details on page 7.

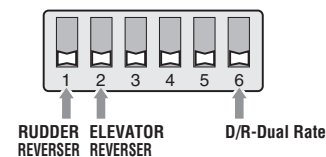

- 9 Power Indicator**
- 10 Charge Lamp**
- 11 Battery Cover**
- 12 Charger Cover**

Tx-R ADDITIONAL ITEMS REQUIRED

○ 4-channel SLT Protocol Transmitter

The Micro Calypso can be flown with Tactic transmitters (SLT protocol). When doing this please refer to the Tactic radio instructions and be aware some channels may need to be reversed or re-assigned for proper operation. This includes the throttle channel, so extra care must be taken to be sure the throttle direction is correct.


TACJ2403	Tactic TTX403 4-Channel SLT Mini Transmitter
TACJ2410	Tactic TTX410 4-Channel SLT System
TACJ2610	Tactic TTX610 6-Channel SLT System
TACJ2650	Tactic TTX650 6-Channel SLT Computer Transmitter

AVAILABLE PARTS

FLZA6470	Fuselage
FLZA6471	Wing
FLZA6472	Tail Surface Set
FLZA6473	Folding Prop Set
FLZA6474	Prop Blade Set
FLZA6475	Spinner/Hub
FLZA6476	Motor Set
FLZA6477	Pushrod Set
FLZA6478	Nose Cone
FLZA6485	USB Charger
FLZA6480	Receiver/Servos
FLZA6481	Gearbox Set
FLZA6482	Motor Shaft Set
FLZA6486	LiPo 3.7V 200mAh
FLZA6484	Transmitter

BEFORE OPERATING


Batteries for Transmitter

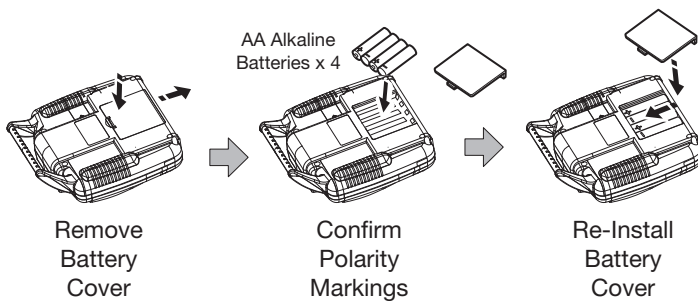


ASSEMBLY INSTRUCTIONS

ATTENTION: Use caution and care when assembling the parts so that you do not damage them.


Tail Assembly

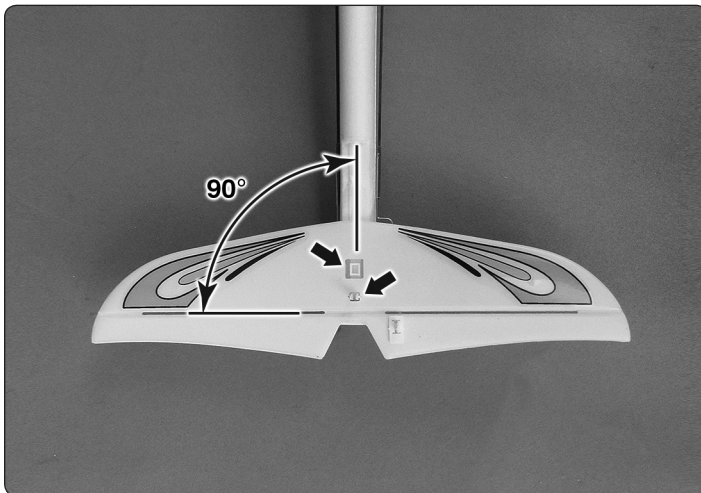


1. Install the horizontal stabilizer onto the tail of the fuselage. Make sure the assembly keys onto the fuselage as shown. Align the stabilizer 90° to the fuselage.

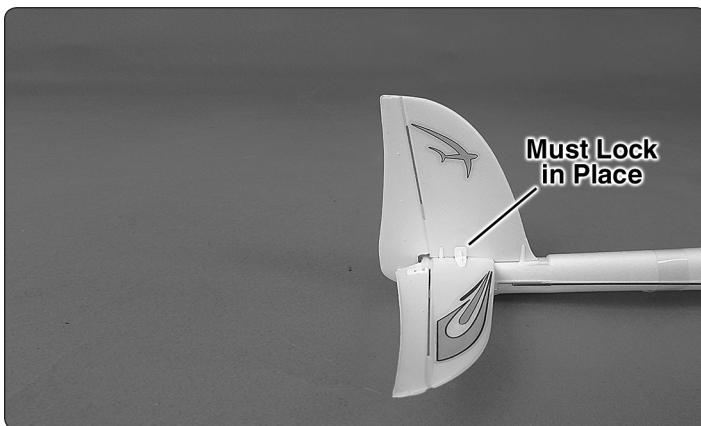


2. Install the vertical stabilizer onto the tail of the plane and gently press it down until it locks into place.

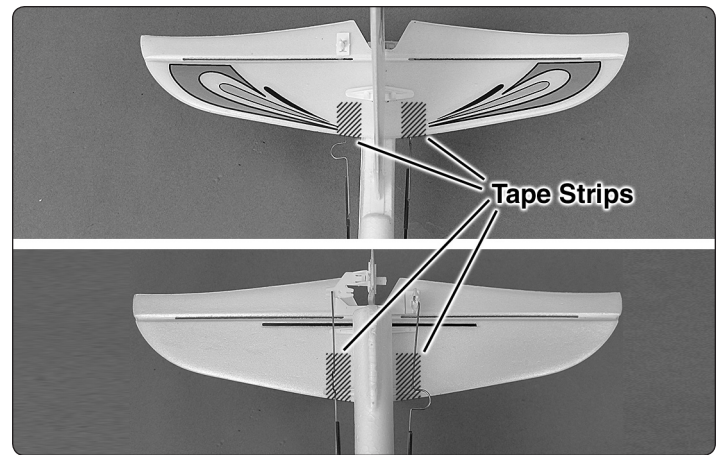


3. Use the included tape strips to secure the aligned horizontal stabilizer in place. Make sure the tape strips wrap from the top of the horizontal stabilizer to the bottom of the horizontal stabilizer and cover the front plastic elevator supports.

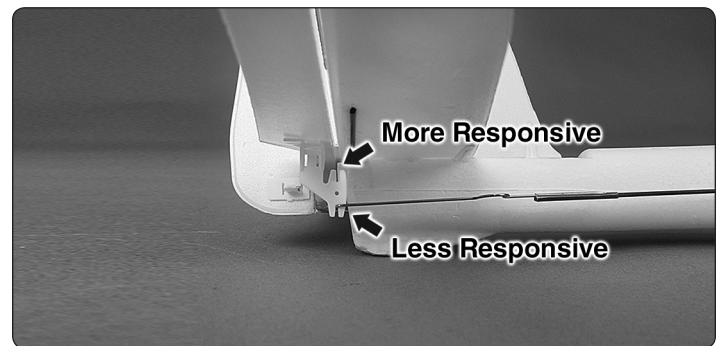

4. Attach the elevator pushrod into the control horn on the elevator and make sure that it snaps into place. Start off by installing the elevator pushrod in the lower hole for lower control throws (less responsive). Once you become familiar with how the Micro Calypso flies, you can install the elevator pushrod in the upper hole for higher control throws (more responsive).

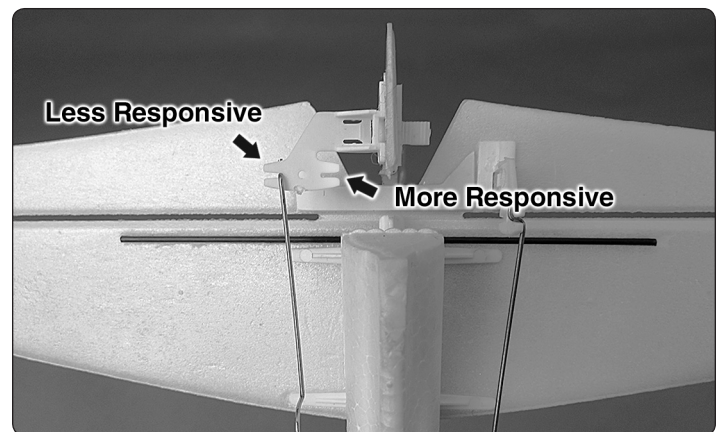


5. Attach the rudder pushrod into the control horn on the rudder and make sure that it snaps into place. Start off by installing the rudder pushrod in the outer hole for lower control throws (less responsive). Once you become familiar with how the Micro Calypso flies, you can install the rudder pushrod in the inner hole for higher control throws (more responsive). Center and adjust wire bends.

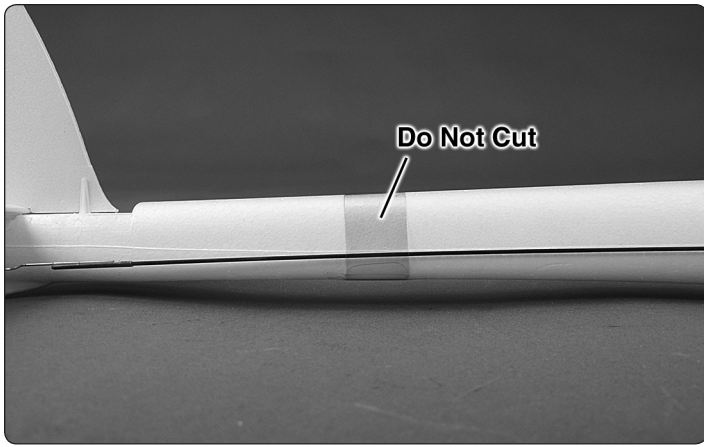


ATTENTION: There is a clear band securing the throttle and elevator pushrods in place on the fuselage. DO NOT remove this band. The band keeps the pushrods from flexing during flight.

Wing Assembly

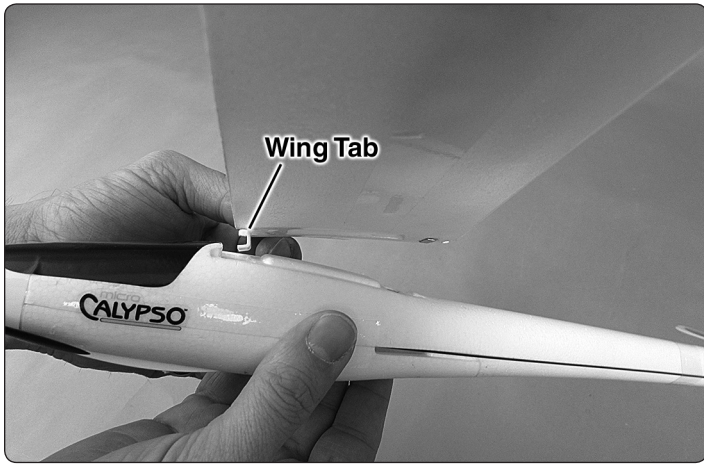

1. Insert the wing tab into the fuselage.

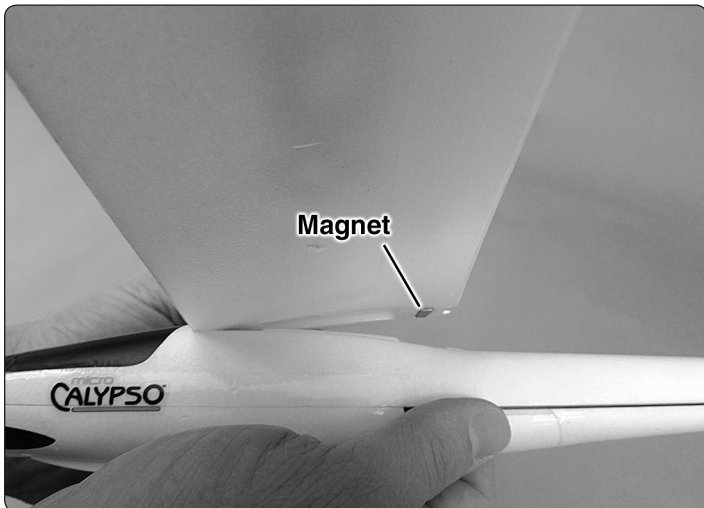

2. Lower the back of the wing down onto the fuse until the magnets lock it in place.


ATTENTION: Make sure the wing is properly seated before each flight.

Charging the Battery (RTF)




WARNING:

- Read the LiPo battery warnings on page 2 carefully and charge the battery accordingly.
- Use only the battery charger specified.
- Do not attempt to charge a damaged or swollen battery. This may cause fire or serious damage.
- Do not attempt to charge a fully charged battery. Run down the battery completely before attempting to charge the battery.
- Do not leave the charger unattended while charging.

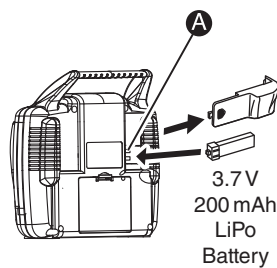

1. Remove the charger door from the transmitter.
2. Connect the 3.7V 200mAh LiPo battery to the charge socket (A) so the Up label is visible.
3. The charge lamp (B) lights up and charging starts. A fully discharged battery takes about 40 minutes to charge.
4. After the charge lamp goes off, charging is complete.

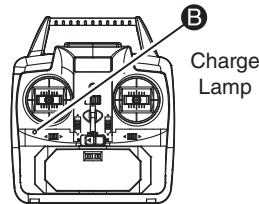

NOTE: When the transmitter batteries are dead, the battery cannot be charged. **The battery can be charged whether the transmitter power is switched ON or OFF.** If you have an additional Micro Calypso battery, you can charge while flying.

USB Charger Instructions (Tx-R Version Only)

Approximate charge time is 1 hour.

1. Plug the Micro Calypso USB charger into a USB charge port on your computer or USB adapter (like the one used for cell phones).
2. Plug the Micro Calypso battery into the charger. The red LED on the charger should illuminate.
3. Once the battery is charged the red LED will shut off.
4. Once the red LED shuts off remove the battery and charger from the USB port.
5. Do not leave the charger unattended while charging.


Flight Battery Installation, Linking and ESC Arming




WARNING:

- Always turn the transmitter's power switch ON before plugging the battery into the plane.
- The motor will not operate unless the throttle stick is first moved to the lowest position.
- Keep clear of propeller to prevent bodily harm.



NOTE: The Micro Calypso is equipped with an auto-linking feature. This means the transmitter will automatically link to the plane after they are turned on.

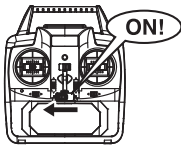


1. Move the throttle stick all the way down.
2. Switch the power ON.
3. The red LED lights up and a "beep" will be heard.
4. Connect the battery to the ESC plug in the bottom of the plane. Observe the correct polarity.

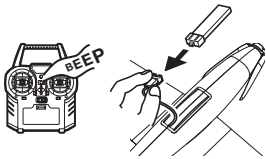

5. Secure the battery on the bottom of the Micro Calypso fuse using the hook and loop material.

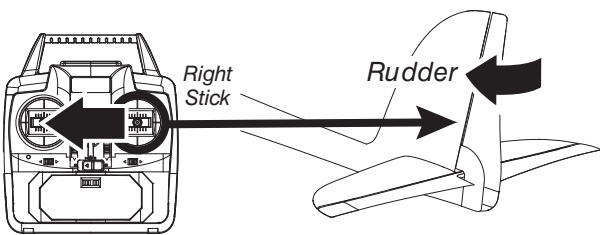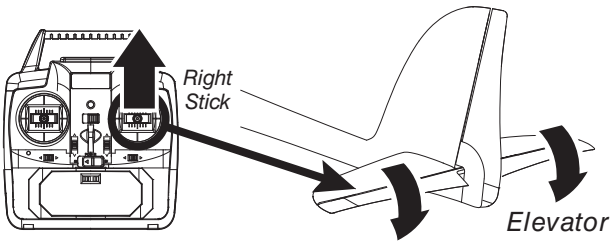

6. Move the elevator/rudder stick (right stick) and confirm the elevator and rudder respond correctly.

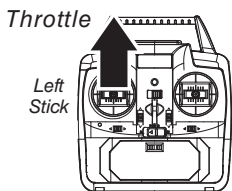

7. Move the throttle stick (left stick) up gently to confirm the motor/prop spin.


NOTICE: Do not run the Micro Calypso motor for more than 15 seconds when not in flight. Running the motor for extended times while the plane is not flying could cause damage to the motor.

LED Display (Located Behind Flight Battery)

When the	is	this means the	You should
Rx LED inside the plane	Steady on	Tx & Rx are linked & ready.	
	Slow Flash	The throttle's in the Hi position (The motor will not activate).	Move the throttle stick to the lowest position, until the LED is steady ON. Then the motor will activate.
	Fast Flash	The battery is low.	Charge the battery.
Tx LED	Fast Flash	The battery is low.	Replace the Tx batteries.

RTF SERVO REVERSING


The rudder and elevator servo direction can be reversed by simply switching the location of the reversing switches.

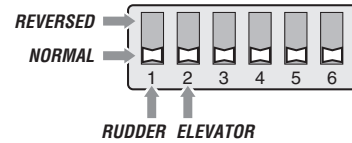

DUAL RATES

The Micro Calypso transmitter (RTF only) is equipped with a dual rate switch which allows you to adjust the amount of throw the elevator and rudder have. With the dual rate switch down, you can fly on high rates (more elevator/rudder throw for experienced pilots) or you can move the dual rate switch up and fly on low rates (less elevator/rudder throw for inexperienced pilots) to make the plane easier to fly.

You can also adjust the elevator and rudder throw by changing the position of the linkage at the mounting point on the elevator and rudder. Moving the elevator linkage to the upper hole will increase throw and elevator response. Moving the rudder linkage to the inner hole will increase rudder throw and rudder response.

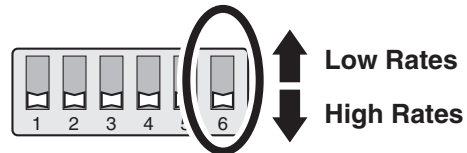

RUDDER/ELEVATOR CONTROL SURFACE CENTERING

Before your first flight or after a crash you will need to check the centering of the rudder and elevator control surfaces. To prevent excessive transmitter trim you should first make mechanical adjustments to the rudder and elevator servo linkages. The linkages have a "U" shaped section in them that can be compressed or expanded to adjust the control

surfaces when the transmitter trims are centered. Be careful to only make slight adjustments. Once you get the mechanical trim close you can use the transmitter trim to fine tune the rudder and elevator trim.

CHOOSING YOUR FLYING FIELD





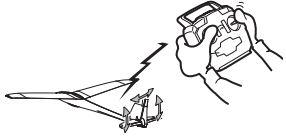
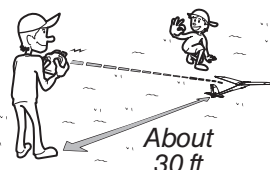
The flying field you choose should be a large, open field with grass. There should not be any vehicles, buildings, power lines, trees, large rocks or anything else that your model can crash into.

CHOOSING A DAY TO FLY






Calm weather with either no wind or wind speed of 1–5 mph is suitable for flying.

PRE-FLIGHT CHECK

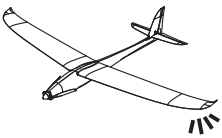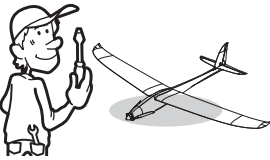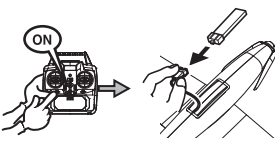1. Check for any bends or damaged parts on the main wing, fuselage or tail wing. 
2. Be sure the wing, propeller & spinner are properly attached! 
3. Switch the transmitter ON, connect the battery, and advise any people nearby. Make sure there is no one near the propeller. 
4. In case the motor starts rotating accidentally, have an assistant hold the rear part of the plane securely. 
5. Check to see if the plane responds properly to control signals. See page 6. 
6. Test the range of the radio signal. Step back about 30 ft [10m] and check for any unusual behavior. 

TAKEOFF

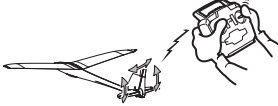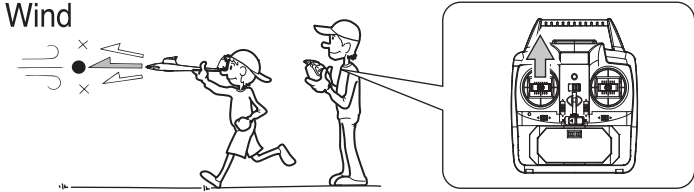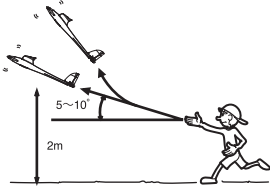
1. Before takeoff, check again to see if the plane responds properly to control signals. 
2. Apply 3/4 throttle while facing into the wind. Hold the plane horizontally and launch straight and level with a gentle pushing motion. 
3. After launching, use the rudder to keep the wings level. Climb to an altitude of about 50 feet [15.24 m], begin circling the plane. (If the battery is not charged properly, the plane will not ascend). 

Use the elevator stick and throttle to adjust the climb and altitude.


Put the throttle stick to the lowest position when crashing to avoid damage to the airplane and radio equipment. Crash damage is not covered under the warranty.

FLIGHT


Continue circling in an oval pattern until you're accustomed to flying. If the plane nose dips, add a slight amount of up elevator control.

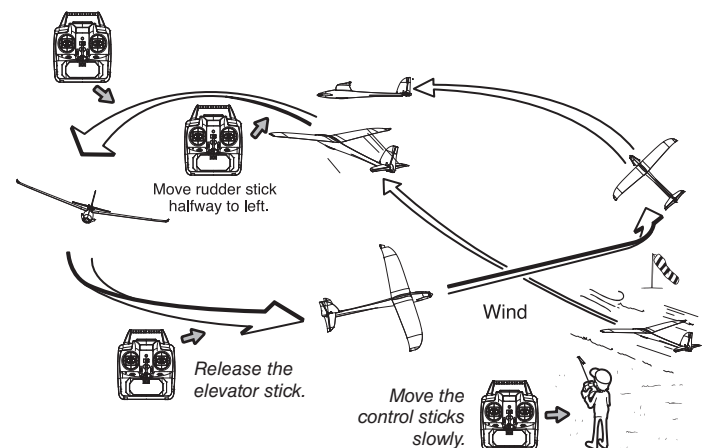


ADJUSTING TRIMS

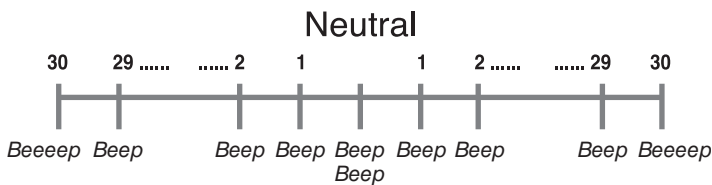


Adjusting trim for horizontal flight.

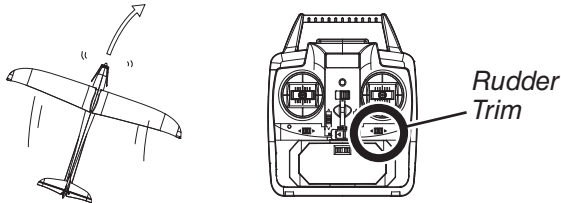

Take your finger off of the rudder stick and if the plane flies to the right, adjust the rudder trim to the left side.

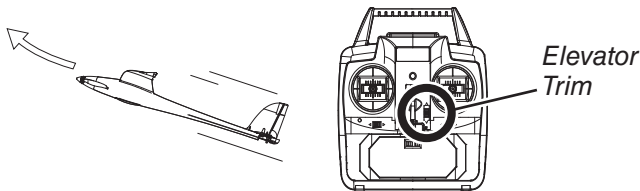


Take your finger off of the elevator stick and if the plane flies upwards, adjust the elevator trim upward.

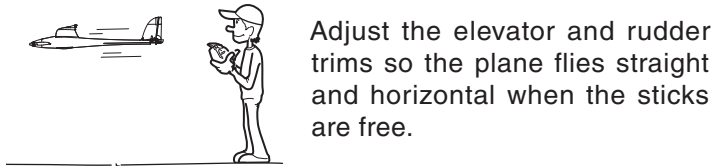


Adjust the elevator and rudder trims so the plane flies straight and horizontal when the sticks are free.

LANDING

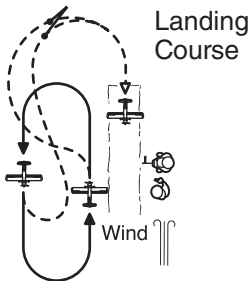

When you're ready to land or the battery runs low, the propeller will stop spinning. Flight times will be 5–7 minutes depending on full throttle use, presence of thermals, outside temperature, and battery condition.

When landing, make a wide turn with the wind, and then land **directly** into the wind.

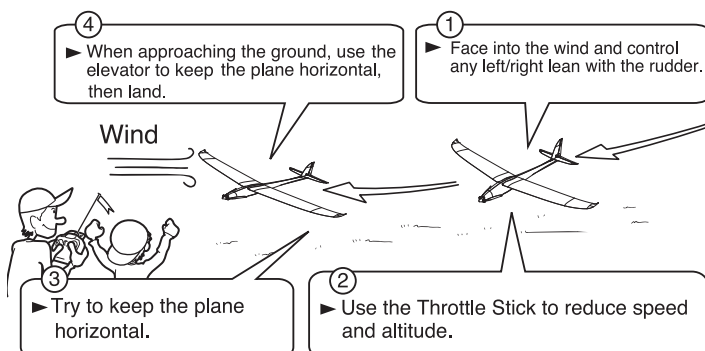


LVC (Low Voltage Cutoff)


The Micro Calypso has a built in LVC to protect your LiPo battery from discharging too low while flying. Once the battery reaches LVC, the power to the motor will shut off and you need to land the Micro Calypso.

Make sure to always disconnect the flight battery from the plane to prevent the battery from discharging any further. The LVC does not prevent from over discharging when the plane is not in use.

AFTER LANDING

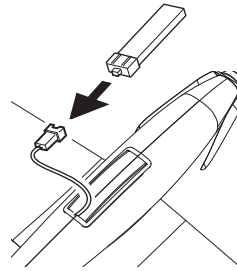


1. **Always disconnect the battery before turning off the transmitter.** Hold the connector when disconnecting the battery. Do not pull on the cord.

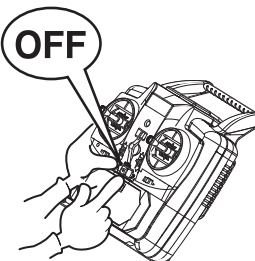


2. Then, switch the transmitter OFF.

CAUTION: The battery may be hot after a flight! Allow the battery to cool down before recharging.


AFTER-FLIGHT MAINTENANCE

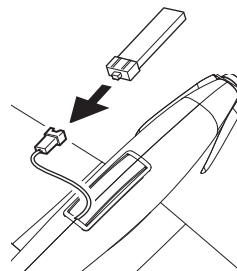

1. Remove the battery from the airplane when not in use. Fully charge the flight battery before storing it. Also remove the batteries from the transmitter.

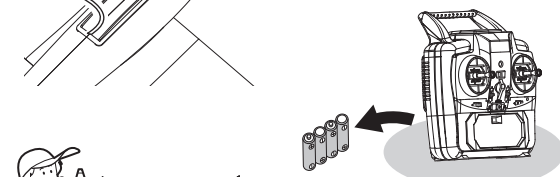

2. For the next flight, check that no screws have loosened and replace any scratched or damaged parts.

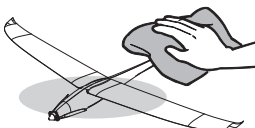


3. Clean away any dirt etc. and perform any needed maintenance.


TRANSMITTER MODE SELECTION

As supplied, the transmitter is in Mode 2.

ATTENTION: The transmitter can be used in Mode 1 or Mode 2 with the mode change switch. After the Mode has been changed, the throttle stick spring is cancelled.

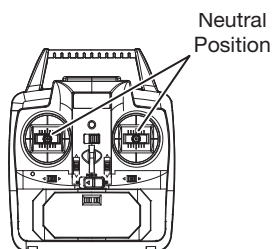


1. Move the left and right sticks to the neutral position.

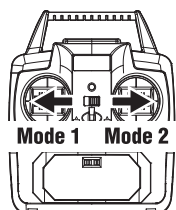


2. Make sure the Mode change switch is moved all the way to the end.

Mode Stick Functions

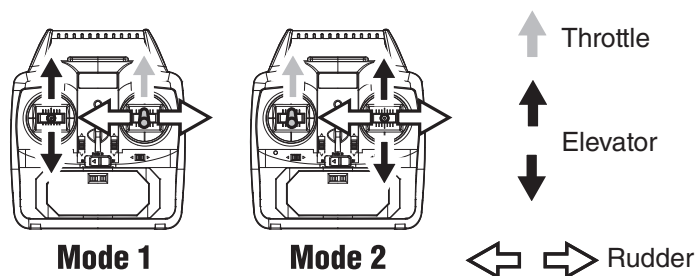

- The Mode change switch will only slide if the throttle stick is in neutral.
- Be sure to slide the Mode change switch all the way to the end. The sticks will not move correctly unless the switch is moved all the way to the end.

Mode 1 Transmitter Information

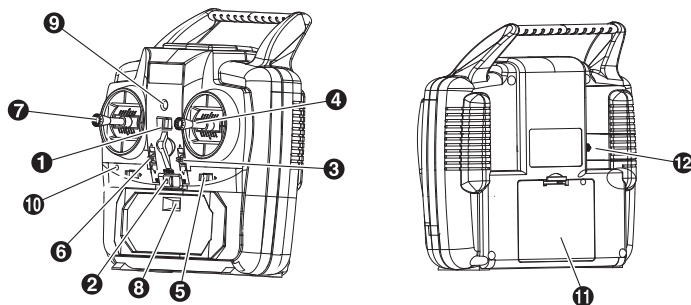

1 Mode Change Switch

2 Power Switch

3 Throttle Trim (Up/Down) MODE 1 SHOWN

Adjusts throttle so motor will not move at the down position.

4 Throttle Stick (Up/Down) MODE 1

Controls propeller speed.

Rudder Stick (Left/Right) MODE 2

Controls plane's left/right movement.

5 Rudder Trim (Left/Right)

Adjust left/right so plane flies straight.


6 Elevator Trim (Up/Down) MODE 1 SHOWN

Adjust left/right so plane flies straight.

7 Elevator Stick (Up/Down) MODE 1 SHOWN

Controls plane's upwards/downwards movement.

8 Function Selector

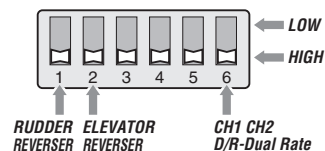

9 On/Off Indicator

10 Charge Lamp

11 Battery Cover

12 Charger Terminal Cover

REPAIR

If your Micro Calypso becomes damaged you can use white glue, foam safe CA glue or clear tape to make repairs. You can also order replacement parts (found on page 3 of this manual) if your parts are beyond repair.

TROUBLESHOOTING GUIDE

PROBLEM: Transmitter LED does not illuminate when turned on.


Solution: Batteries are installed into the transmitter incorrectly. Remove batteries and check polarity markings on transmitter.

Solution: The transmitter batteries are bad. Replace the batteries.

PROBLEM: Micro Calypso does not power up.

Solution: Micro Calypso battery needs to be charged.

PROBLEM: Rudder or elevator control surfaces are not neutral when the trims on the transmitter trims are centered.

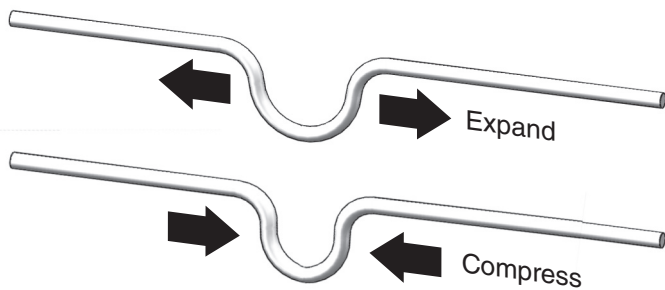

Solution: The “U” shaped servo linkage needs to be adjusted. Compress or expand the “U” portion of the linkage until the control surfaces are neutral. Use the transmitter trim to fine tune the control surfaces.

PROBLEM: Rudder or elevator moves in the opposite direction it is supposed to.

Solution: Adjust the servo reversing on the transmitter.

PROBLEM: Flight time is short.

Solution: The flight battery was not fully charged. Charge again.

Solution: Flying conditions may be too cold (below 60 degrees Fahrenheit [15.56 degrees Celsius]).

Solution: The flight battery needs to be replaced.

Solution: Replace the transmitter batteries with fresh batteries.

LIMITED WARRANTY

What this Warranty Covers – Horizon Hobby, LLC, (Horizon) warrants to the original purchaser that the product purchased (the “Product”) will be free from defects in materials and workmanship at the date of purchase.

What is Not Covered – This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations, or (vii) use that violates any applicable laws, rules, or regulations OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASER’S INTENDED USE.

Purchaser’s Remedy – Horizon’s sole obligation and purchaser’s sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER’S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability – HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product, purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law – These terms are governed by Illinois law (without regard to conflict of law principals). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services – Your local hobby store and/or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please visit our website at www.horizonhobby.com, submit a Product Support Inquiry, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services – If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at http://www.horizonhobby.com/content/_service-center_render-service-center. If you do not have internet access, please contact Horizon Product Support to obtain a RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address and phone number where you can be reached during business hours. When sending product into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem. A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

NOTICE: Do not ship LiPo batteries to Horizon. If you have any issue with a LiPo battery, please contact the appropriate Horizon Product Support office.

Warranty Requirements – For Warranty consideration, you must include your original sales receipt verifying the proof-of-purchase date. Provided warranty conditions have been met, your Product will be serviced or replaced free of charge. Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service – Should your service not be covered by warranty, service will be completed and payment will be required without notification or estimate of the expense unless the expense exceeds 50% of the retail purchase cost. By submitting the item for service you are agreeing to payment of the service without notification. Service estimates are available upon request. You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of ½ hour of labor. In addition you will be billed for return freight. Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website http://www.horizonhobby.com/content/service-center_render-service-center.

ATTENTION: Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender's choice and at the sender's expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

10/2015

FCC INFORMATION

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

CONTACT INFORMATION

Country of Purchase: United States of America

REPAIRS & REPAIR REQUESTS

Horizon Service Center
1608 Interstate Dr
Champaign, IL 61822
USA

[servicecenter.horizonhobby.com/
RequestForm/](http://servicecenter.horizonhobby.com/RequestForm/)

PRODUCT TECHNICAL ASSISTANCE

Horizon Product Support
1608 Interstate Dr
Champaign, IL 61822
USA

productsupport@horizonhobby.com
877-504-0233

SALES

Horizon Hobby, LLC
1608 Interstate Dr
Champaign, IL 61822
USA

websales@horizonhobby.com
800-338-4639

Flyzone™
how high will you soar